



New Fabric Freshener Quick Start Guide

PLEASE READ ALL STEPS BEFORE ATTEMPTING THE SET-UP



1

Grip the pole over the green dot and slide out until you reach the black line on the pole.



5

With the handle pointing toward you, lift the garment bag and place the steel pin into the slot of the blue support bracket.



2

Holding the pole firmly in place, rotate to a vertical position. The Fabric Freshener should look like this.



6

The pin will rest on the support bracket like this.



3

Before extending the pole any further, release the latches on EACH side of the Fabric Freshener.



7

Holding the top of the pole, extend both the pole and garment bag upward until you hear the pole click into place.



4

While pressing down on the Fabric Freshener, lift EACH latch up and out.

The garment bag should be freed and ready to lift onto the support bracket.



8

Slowly flip the handle toward the back to lock into place.

The Fabric Freshener is now ready for use.



SEE REVERSE SIDE FOR INSTRUCTIONS ON ADDING GARMENTS



Adding Garments & Cycle Explanation



1

Hang 1 or 2 garments in the Fabric Freshener.



Cycles

Heavy Duty:

This cycle is ideal for cottons/cotton blends. The cotton performance weight clips included with the product are recommended for this cycle.

Normal:

Use this cycle for wool fabrics, sweaters and easy care garments.

Delicate:

This cycle is designed for more delicate fabrics such as silk, rayon and polyester.

Gentle Dry Cycle:

Use this cycle without water to gently dry fabrics such as hand washables, exercise clothes or swimsuits, in just over half an hour.

⚠ WARNING



Explosion Hazard
Use water only.
Failure to do so can result in death or explosion.



2

Using tap water, fill the cup to the desired cycle line.



3

Zip the bag closed. Press the "On/Off" button to begin the cycle.

Fabric Care Recommendations for Relaxing Wrinkles

Fabric	Tensioning Weights	Cup Water Level	Estimated Run Time
Cotton/ Cotton Poly Blend Shirts	Yes	Heavy Duty	40-48 Min.
Cotton Pants/Jeans	Large Clip with Hole (Slide onto hanger rod in the Fabric Freshener)	Heavy Duty	40-48 Min.
Knits/ Sweaters/ Wools	No	Normal	35-40 Min.
Rayon/Poly/Silk	No	Delicate	18-24 Min.
Hand Washables/ Delicates/ Swimsuits	No	Dry Cycle	30-35 Min.