


# INSTALLATION INSTRUCTIONS

USA

## LINE VOLTAGE PENDANT

### TANGO 120

ART. NO. 110 336bz/CF/MP	bronze, compact fluorescent, amber glass
110 336bz/IN/MP	bronze, incandescent, amber glass
110 336ch/CF/MP	matte chrome, compact fluorescent, amber glass
110 336ch/IN/MP	matte chrome, incandescent, amber glass
110 337bz/CF/MP	bronze, compact fluorescent, autumn leaf glass
110 337bz/IN/MP	bronze, incandescent, autumn leaf glass
110 337ch/CF/MP	matte chrome, compact fluorescent, autumn leaf glass
110 337ch/IN/MP	matte chrome, incandescent, autumn leaf glass

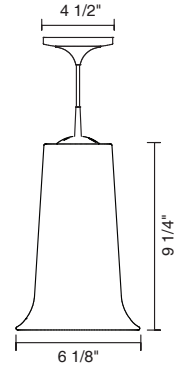

## IMPORTANT SAFETY INSTRUCTIONS



1. Read all instructions!
2. Turn off power prior to any work on the canopy.
3. THIS PRODUCT MUST BE INSTALLED BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED, IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE.
4. This LINE VOLTAGE PENDANT MUST BE HARD WIRED, 120v. For all the wire connections, use Listed Wire Nuts.
5. Warranty is void in case of unauthorized modifications and/ or improper use.

READ ALL OF THESE INSTALLATION INSTRUCTIONS BEFORE INSTALLING THE SYSTEM

### This Package Contains: TANGO 120 - qty.(1)

- Insert screw (A) into the mounting plate (B).  
Align screws (A) with the J-box and tighten until  
firmly connected.

- There are markings on the cable wire (C)  
showing; L is for Line Voltage, N is for the Neutral  
Connection, and G is for the Ground Connection.

**Warning! If cutting cable wire make note which  
side is L, N, and G.**

- Adjust the cable length (C) by loosening the  
center cable lock (D).

- Place the canopy cover (E) over the mounting  
plate (B) and secure it with the allen screw (F)  
located on the side of the base.

