

6800 Bradley Series

Model	Description	Overall Dimensions						Specific Dimensions													
		Width		Depth		Height		Back Height		Seat Height		Back Width		Seat Depth		Seat Width		Weight		Volume Reg/K.D.	
		(in.)	(mm.)	(in.)	(mm.)	(in.)	(mm.)	(in.)	(mm.)	(in.)	(mm.)	(in.)	(mm.)	(in.)	(mm.)	(in.)	(mm.)	(lbs.)	(kg.)	(cu.ft.)	(cu.ft.)
6800D	High Back Task	26	660	26-28	660-711	40-45½	1016-1155	24½	672	16½-22	419-559	19½	495	16½-18½	419-470	20	508	46	21	17 / 9.6	0.48 / 0.27
6800	Mid Back Task	26	660	24-26	609-660	37-42½	939-1079	20½	520	16½-22	419-559	17½	444	16½-18½	419-470	19½	495	43	20	14 / 9.6	0.40 / 0.27
6807	Mid Back Task - Armless	24	609	24-26	609-660	37-42½	939-1079	20½	520	16½-22	419-559	17½	444	16½-18½	419-470	19½	495	41	19	14 / 9.6	0.40 / 0.27
6850	Low Back Task	26	660	24-26	609-660	33-38½	838-977	16½	419	16½-21½	419-546	16½	419	17-19	431-482	19½	495	43	20	12½ / 9.6	0.35 / 0.27
6805DS	Drafting Stool - Armless	24	609	24-26	609-660	40-50	1016-1270	16½	419	24-34	609-863	16½	419	17-19	431-482	19½	495	48	22	12.5 / 9.6	0.35 / 0.27

Standard Features •

- Swivel-tilt mechanism (Type 31) (6800D, 6800, 6850) seat depth adjustment, pneumatic height adjustment, tension control.
- Swivel mechanism (Type 23) (6805DS) seat depth adjustment, pneumatic height adjustment,
- Waterfall seat design to reduce muscle fatigue.
- High density foam for support and comfort.
- Plastic outer seat and back shell for durability.
- Fixed height arms with polyurethane tear drop arm pad. - Type UR
- California fire code #117
- 5 prong heavy duty nylon base.
- 2" dual wheel carpet casters.
- Finish-mechanism, base, casters and trim standard in black.
- ANSI/BIFMA

Options - ○

Model	Description	Mechanism		Height Adjustable Arms With Arm Pads				Arm Pad		Misc.
		Type 13 Articulating - AR	Type 20-Tilt Lock - TL	Tear Drop Pad - A	Elongated Pad - AP	Semi-Loop Pad - ASL	Loop Arm - AL	Swing Arm Pad - YA	Gel Arm Pad - GE	
6800D	High Back Task	○	○	○	○	○	○	○	○	○
6800	Mid Back Task	○	○	○	○	○	○	○	○	○
6807	Mid Back Task - Armless	○	○	○	○	○	○	○	○	○
6850	Low Back Task	○	○	○	○	○	○	○	○	○
6805DS	Drafting Stool-Armless									○

Option - Swing Arm •



This adjustable arm pad was designed and developed to help relieve tension and pressure on the hand, wrist and forearm that can lead to "Carpel Tunnel Syndrome" and related problems.

To adjust and lock the arm pad, simply push up on the button located on the underside of the arm pad and swing the top half of the arm pad to any of the 12 locking positions. Releasing the button will allow the arm pad to lock into the desired position.





General Information:

- Soft wheel casters should be specified for hard floor surfaces.
- Upholstery
1 yd/chair All Models.
- Fabric Selection
To specify simply add the suffix provided on the fabric card swatch of your choice to the chair model number (ie) 6800 -E01 (Epic Expresso)

Arms & Arm Pads

	Type A Height adjustable arm with polyurethane tear drop arm pad.		Type AP Height adjustable arm with polyurethane elongated arm pad (Black only).		Type ASL Height adjustable arm with polyurethane semi-loop arm pad (Black only).		Type AL Height adjustable arm with polyurethane loop arm pad (Black only).		Type YA Height adjustable arm with polyurethane swing arm pad (Black only).		Type GE Gel arm pads. A unique silicone gel fully encapsulated in polyurethane.		Type UR Fixed height arm with polyurethane tear drop arm pad.
--	---	--	---	--	--	--	--	--	---	--	---	--	---

Mechanism User Guide

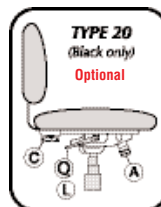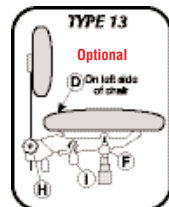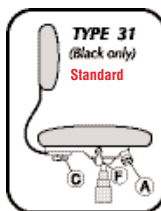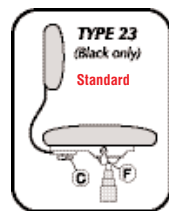

- (A) Tension Knob**
Turn clockwise to increase tension, turn counter-clockwise to decrease tension
- (C) Seat Depth Adjustment**
Loosen hand wheel (do not remove) and slide back to desired position, then re-tighten hand wheel.
- (D) Back Angle Adjustment**
While seated, pull paddle up, when desired angle is achieved push paddle down to lock.
- (F) Pneumatic Height Adjustment**
To lower, lift paddle while seated. To raise, lift paddle with your weight off seat.
- (H) Back Height Adjustment**
Turn knob counter-clockwise to loosen, lift or lower chair back to desired position and re-tighten.
- (I) Infinite Seat Angle Adjustment with 6° Forward Tilt**
To change seat angle, pull paddle up while seated, push paddle down to lock when desired angle is achieved.
- (L) Single Position Tilt Lock**
Push lever into lock chair in forward position, pull lever out to unlock.
- (O) Pneumatic Height Adjustment**
To lower, turn paddle while seated. To raise, turn paddle with your weight off seat.

Nightingale Inc.

2301 Dixie Road, Mississauga, Ontario, Canada L4Y 1Z9
Tel: (905) 896-3434 Toll Free: 1-800-363-8954
Fax: (905) 896-7011 Toll Free: 1-800-637-6784
E-mail: info@nightingalechairs.com
Website: www.nightingalechairs.com

Showrooms in

- Toronto
- Vancouver
- Montreal