

5900 Rexdale Series

Model	Description	Overall Dimensions						Specific Dimensions													
		Width		Depth		Height		Back Height		Seat Height		Back Width		Back Width		Seat Width		Weight		Volume Reg/K.D.	
		(in.)	(mm.)	(in.)	(mm.)	(in.)	(mm.)	(in.)	(mm.)	(in.)	(mm.)	(in.)	(mm.)	(in.)	(mm.)	(in.)	(mm.)	(lbs.)	(kg.)	(cu.ft.)	(cu.mt.)
5900D	High Back Task	26	660	25	635	37 1/2-44	952-1117	19 1/2-21 1/2	495-546	18 1/2-22	470-558	18	457	18	457	20	508	46	20	17 / 12	0.48 / 0.34
5900	Mid Back Task	26	660	25	635	36-42	914-1066	17-19	431-482	18 1/2-22	470-558	18	457	18	457	20	508	44	20	14 / 12	0.40 / 0.34
5907	Mid Back Task Armless	26	660	25	635	36-42	914-1066	17-19	431-482	18 1/2-22	470-558	18	457	18	457	20	508	39	18	14 / 12	0.40 / 0.34

Standard Features •


- Synchro-tilt mechanism (Type 27) 2:1 ratio, ratchet back height adjustment, tension control, free float or variable position tilt lock featuring slow release.
- Soft, molded seat and back foam for comfort and durability.
- Waterfall seat design to reduce muscle fatigue.
- Injection molded outer seat and back shell for durability.
- Fixed, injection molded plastic loop arm - (Type LP)
- Attractive modern spider design - 5 prong steel tubular base.
- 2" dual wheel carpet casters.
- Finish-mechanism, base, casters and trim standard in black.
- California fire code # 117.
- ANSI/BIFMA.

Options ○

Model	Description	Height Adjustable Arms	Miscellaneous			
		Ratchet Height Adjustable Arm with Fantail Arm Pad - AF	Chrome Ratchet Height Adjustable Arm with Fantail Arm Pad and Chrome base - AFC	Soft Wheel Casters - TC	Lower Profile Chrome Base - CHL	
5900D	High Back Task	○	○	○	○	
5900	Mid Back Task	○	○	○	○	
5907	Mid Back Task Armless			○	○	

To specify any option(s) simply add the suffix(s) to the model number.
(ie) 5900D-AF


Arms & Arm Pads

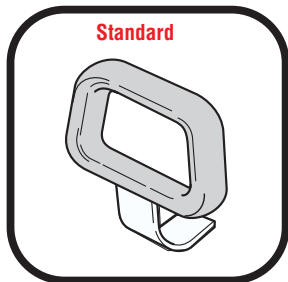

Standard

Type LP

Fixed height arm with injection molded plastic loop arm (Black only).

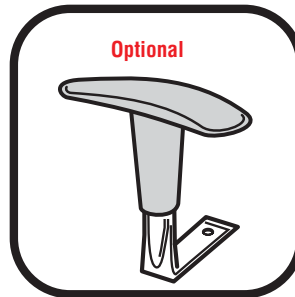


Optional

Type AF

Ratchet height adjustable arm with Fantail arm pad (Black only).

Mechanism User Guide

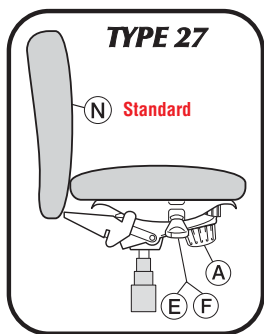

TYPE 27

Standard

- Ⓐ **Tension Knob**
Turn clockwise to increase tension, turn counter-clockwise to decrease tension
- Ⓔ **Tilt Lock**
To lock chair in position, push knob in, to allow free movement, pull knob out.
- Ⓕ **Pneumatic Height Adjustment**
To lower, lift paddle while seated. To raise, lift paddle with your weight off seat.
- Ⓖ **Ratchet back Height Adjustment**
Simply lift back to desired position and back locks automatically.

General Information:

- Soft wheel casters should be specified for hard floor surfaces.
- Upholstery
All models 1 1/2 yds / chair.
- Fabric Selection
To specify simply add the suffix provided on the fabric card swatch of your choice to the chair model number
(ie) 5900 -E01 (Epic Expresso)

Nightingale Inc.

2301 Dixie Road, Mississauga, Ontario, Canada L4Y 1Z9
Tel: (905) 896-3434 Toll Free: 1-800-363-8954
Fax: (905) 896-7011 Toll Free: 1-800-637-6784
E-mail: info@nightingalechairs.com
Website: www.nightingalechairs.com

Showrooms in

- Toronto
- Vancouver
- Montreal