



Repair and Maintenance Instructions (Continued)

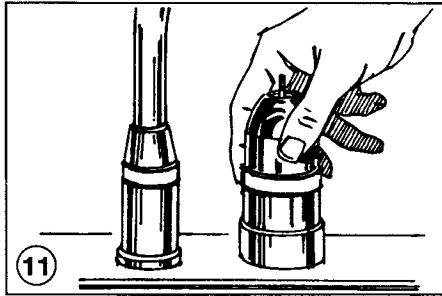

11 Replace dome, finger tighten.

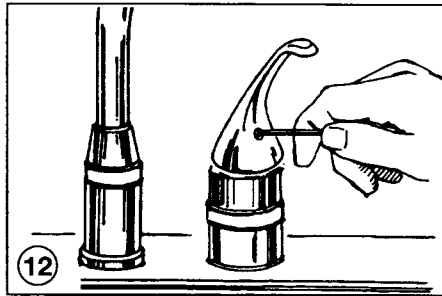

12 Replace handle. Tighten set screw. Turn water supply on.

Care and Cleaning Instructions

Your Elkay faucet has been constructed of the finest materials, however, certain precautions must be taken to maintain the lustrous decorative finish.

Do not use abrasive cleansers or harsh chemical cleansers on this product which could damage the finish.

A warm water wash with a wipedown using a soft cloth will generally remove dry water spots. Never use alcohol or other organic solvents.

A high quality wax, which does not contain abrasives, should be applied periodically to preserve the fine finish of your faucet.

ELKAY LIMITED LIFETIME FAUCET WARRANTY ON RESIDENTIAL FAUCETS

Limited Lifetime Functional and Finish Warranty

Elkay warrants to the original consumer purchaser that the Elkay faucet purchased will be free from defects in material and workmanship for as long as the original consumer purchaser owns the faucet. Elkay will, at its option, supply replacement parts (or if no longer available a comparable product) if the faucet fails due to a defect in material or workmanship. This warranty does not apply in the event of product surface damage caused by abuse, misuse or improper care and maintenance. This warranty excludes damage caused by harsh or abrasive cleaners and/or materials. This warranty excludes all industrial, commercial and business use, whose purchasers are hereby extended a limited lifetime on mechanical parts and 5 years on finish. Product replacement does not include transportation cost or labor installation cost. Elkay reserves the right to examine product in question and its installation prior to replacement.

OTHER WARRANTY CONDITIONS ON FAUCETS

Our warranty does not cover product failure or damage caused by abusive treatment, misuse, environmental factors, improper care and cleaning, or damage due to handling or faulty installations. This warranty is extended only to the original consumer purchaser of the product. This warranty does not cover shipping costs, labor costs, or any other charges for such items as installation or replacement of the sink, diagnosis or replacement of any faucet or component part, or any other expense or loss.

All incidental or consequential damages are specifically excluded. No additional warranties, express or implied are given. Any implied warranty, including one of merchantability or fitness for a particular purpose, is limited to the duration of this written warranty.

Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

TO OBTAIN SERVICE UNDER WARRANTY

1. Write to: Elkay
Attention: Consumer Services
2222 Camden Court
Oak Brook, IL 60523
2. Include a letter containing the following information:
 - a. Date of purchase and installation
 - b. Description of nature of defect
 - c. Model number or description of model and/or component part if possible.

ELKAY®

How to Install Single-Lever Kitchen Faucets



MODELS
LKE4121
LKE4121RS
LKE4122
LKE4123
LKE4124F
LKE413945RS

TO INSTALL FAUCET

From underneath sink, insert spout holder up through center sink faucet drilling. From top-side, thread flange onto body, (See Figure 1). Add washer and sleeve. Insert spout assembly and tighten spout nut. Begin to unscrew flange until washer is flattened against bottom of sleeve.

Apply caulking to underside of flange. From underneath sink, securely tighten to lock nut.

Apply caulking to underside of faucet base. Insert into right hand faucet drilling. **CAUTION: DO NOT STRAIGHTEN INLET TUBES BEFORE INSTALLING FAUCET.** Assemble washer (from hardware bag) and nut (now shown) to underside and fasten securely with screw driver nut driver furnished. Make sure handle is positioned straight forward. Connect hose from spout body to faucet body as shown. Tighten with slip joint pliers or open end wrench.

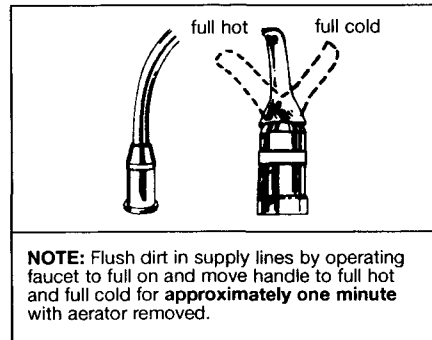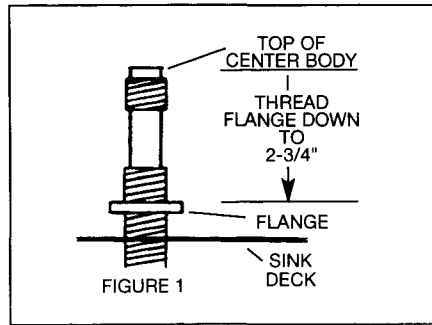

TO INSTALL SPRAY AND HOSE


Remove locknut and washer from spray nest assembly and place in left hole of sink deck. Reassemble washer and locknut on shank from underneath sink. Tighten.

Insert hose end of spray hose assembly down through hose guide. Thread hose nipple into faucet. Tighten with slip joint pliers or open end wrench.


Repair and Maintenance Instructions

SERVICING CONDITIONS FOR ...


- Low water volume through spout or spray hose.
SOLUTION
 - Remove and clean aerator.
 - If condition continues, remove cartridge and flush lines.
 Follow steps 1, 2, 3, 4, 5, 6, 11, 12.
- Water dripping out spout end.
SOLUTION
 - Replace cartridge.
 Follow steps 1, 2, 3, 4, 5, 6, 11, 12.
- Water dripping out around hub.
SOLUTION
 - Remove and replace "O" rings inside hub.
 Follow steps 1, 2, 7, 9, 10, 11, 12.

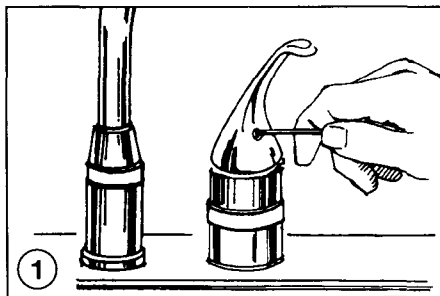


1 Loosen set screw and lift off handle.

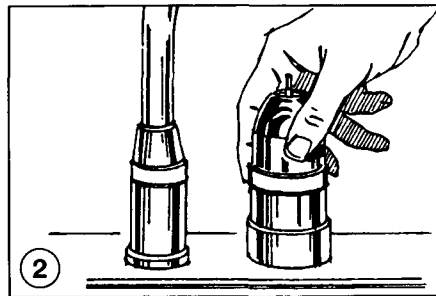


2 Unscrew dome assembly and lift off.

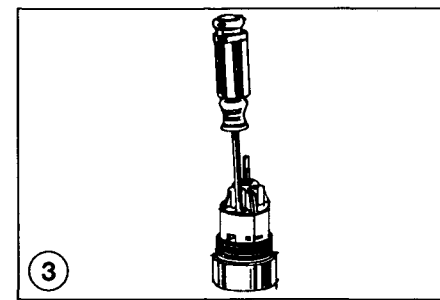


3 Remove cartridge. Remove old diaphragm from lower housing (if not attached to cartridge).

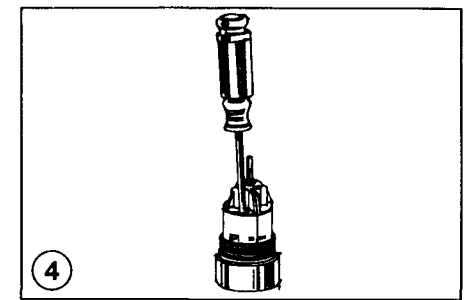


4 Before replacing cartridge, follow instructions for drawings 5 and 6.

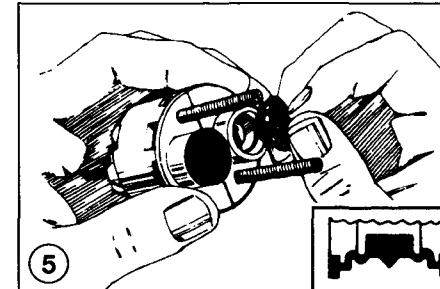


5 NOTE: Rubber diaphragm must be seated in cartridge bottom when reinserted into lower housing.

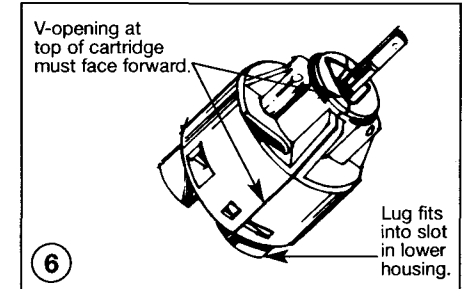


6 Note position of cartridge (above) when inserting cartridge in lower housing.

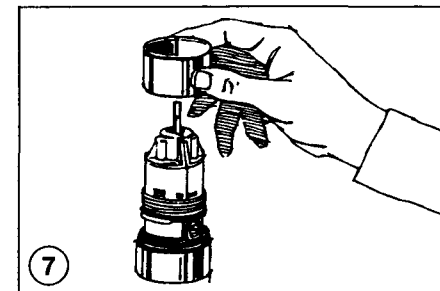


7 If water leaks around sleeve, or diverter requires service, lift off sleeve as shown.

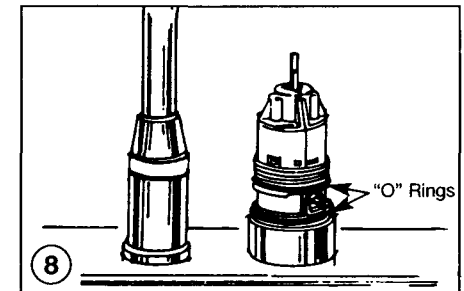

8 Remove "O" rings.

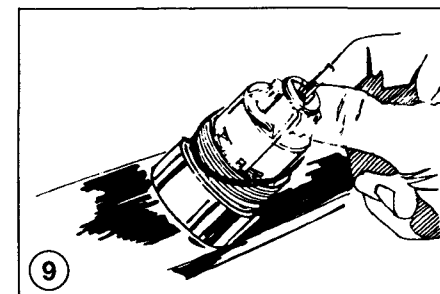

9 Replace "O" rings in grooves in lower housing. Grease "O" rings with silicon grease provided.

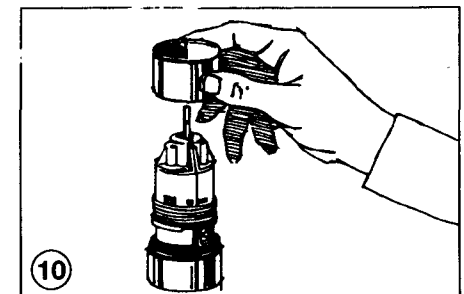

10 Replace sleeve by gently rotating sleeve while pressing down into position.