 
 


CONCERTO



Chair, 734-10



Two Seat, 734-20



NEMSCHOFF



NEMSCHOFF

## CONCERTO

**Chair, 734-10**  
W=27 $\frac{1}{4}$ ", D=27 $\frac{1}{2}$ ", H=32 $\frac{1}{2}$ "  
Seat Height=18"  
Arm Height=23 $\frac{3}{4}$ "

Call Customer Service at  
800•203•8916 for  
additional information



NEMSCHOFF

## CONCERTO

**Chair, 734-10**  
W=27 $\frac{1}{4}$ ", D=27 $\frac{1}{2}$ ", H=32 $\frac{1}{2}$ "  
Seat Height=18"  
Arm Height=23 $\frac{3}{4}$ "

Call Customer Service at  
800•203•8916 for  
additional information



NEMSCHOFF

## CONCERTO

**Two Seat, 734-20**  
W=49", D=27 $\frac{1}{2}$ ", H=32 $\frac{1}{2}$ "  
Seat Height=18"  
Arm Height=23 $\frac{3}{4}$ "

Call Customer Service at  
800•203•8916 for  
additional information



NEMSCHOFF

## CONCERTO

**Two Seat, 734-20**  
W=49", D=27 $\frac{1}{2}$ ", H=32 $\frac{1}{2}$ "  
Seat Height=18"  
Arm Height=23 $\frac{3}{4}$ "

Call Customer Service at  
800•203•8916 for  
additional information