



### INSTALLATION INSTRUCTIONS


P24403, P24404,  
P24405

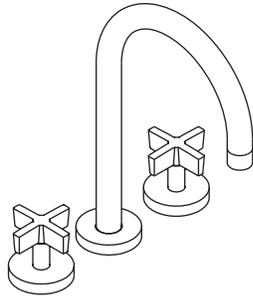


P24403-CR

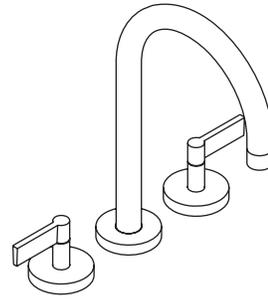


P24403-LV

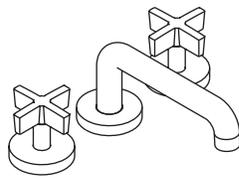


P24404-CR

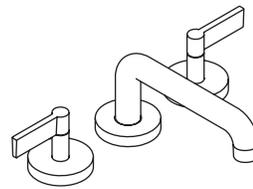

P24404-LV

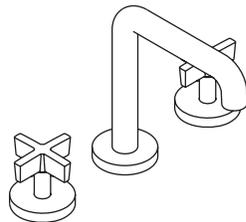

P24405 -CR

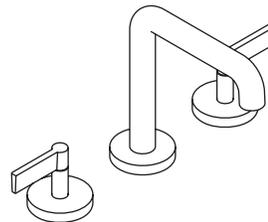

P24405 -LV

### INSTALLATION INSTRUCTIONS

P24403, P24404,  
P24405

#### THANK YOU FOR CHOOSING KALLISTA

We appreciate your commitment to Kallista quality faucets. Please take a moment to review this manual before you install your Kallista faucet. If you encounter any installation or performance problems, please don't hesitate to contact us at the phone number listed at the bottom of the page.

#### BEFORE YOU BEGIN


##### INSTALLER INFORMATION

- Please read all instructions before you begin.
- Shut off the main water supply.
- Observe all local plumbing and building codes.
- Complete the finished deck material before installing the bath faucet trim.
- Before installation, unpack the new bath faucet trim and inspect it for damage. Return it to the carton until installation.
- Kallista reserves the right to make revisions in the design of faucets without notice, as specified in the Price Book.

#### TOOLS AND MATERIALS



Adjustable  
Wrench

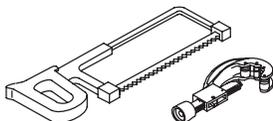

Hacksaw or  
Tubing Cutter



Assorted  
screwdrivers


Plus:  
• Rag



Drill



Pencil

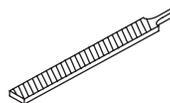

File

### INSTALLATION INSTRUCTIONS


P24403, P24404,  
P24405

#### 1. REMOVE PIPE PLUG




**WARNING:** Risk of personal injury. Lines will be pressurized. Do not lean over pipe plug when turning or removing the plug.

- Ensure that the valves are closed (cold - fully counterclockwise, hot - fully clockwise).
  - Turn off the main water supply.
  - Wrap a towel around the pipe plug to prevent water spray.
- Important!** Water will purge from the supply tube when you remove the plug.
- Carefully remove the pipe plug.

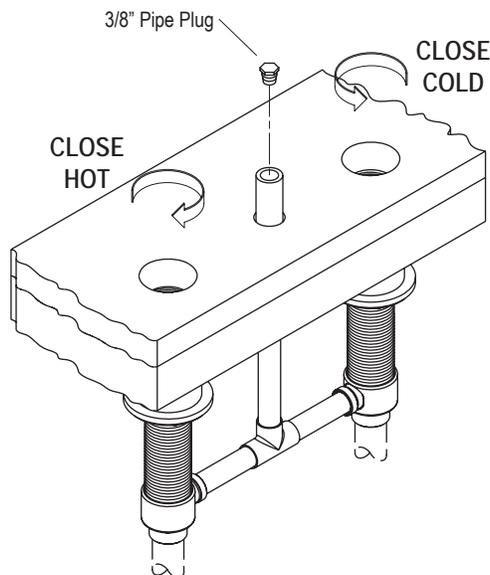

#### 2. INSTALL SPOUT

- Remove the plaster guard from the spout supply tube.
- Cut off the spout supply tube 1-1/4" above the rim, finished deck, or tile.
- Remove all burrs from the spout supply tube to prevent damage to the O-ring seal on the spout sleeve assembly.

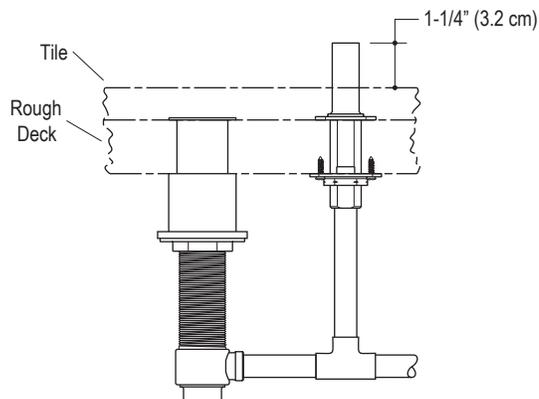

# INSTALLATION INSTRUCTIONS


P24403, P24404,  
P24405

## 2. INSTALL SPOUT (cont'd)

**CAUTION:** Risk of product damage. Use care when installing the spout assembly to prevent damage to the O-ring seal.

**IMPORTANT!** Keep the spout supply tube clean above the finished deck to avoid damage to the O-ring seal.

- Unscrew the spout escutcheon from the mounting flange and slide it up along the spout as shown, being careful not to scratch the spout.
- Place the mounting flange and spout over the spout supply tube and align the spout as desired.
- Mark the location of the slots in the mounting flange and the outside diameter of the flange.
- Carefully remove the spout and mounting flange from the spout supply tube and set aside.
- Using an appropriate drill bit, drill four holes in the marked locations to allow for the mounting screws. Be careful not to damage the mounting surface outside the outer diameter of the mounting flange.
- Replace the mounting flange and spout over the spout supply tube and align the spout as desired. Use the mounting screws to fasten the spout to the mounting surface.
- Carefully slide the spout escutcheon down over the mounting flange and tighten it down.

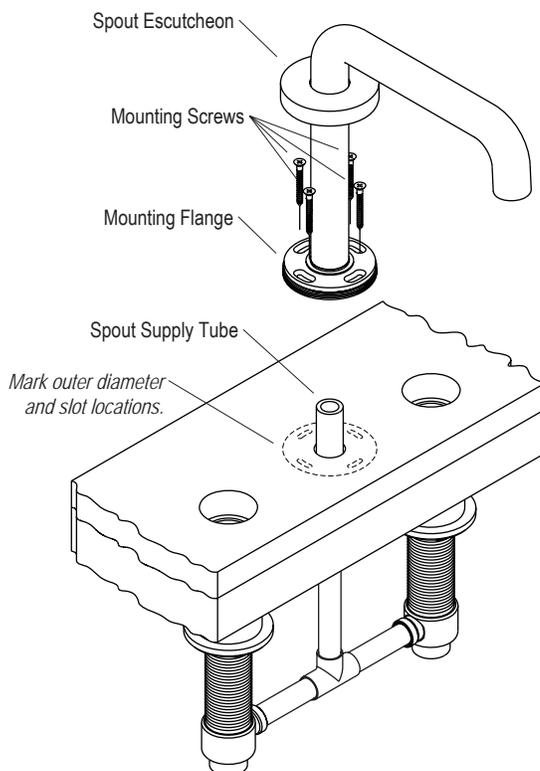


### INSTALLATION INSTRUCTIONS


P24403, P24404,  
P24405

#### 3. INSTALL THE HANDLES

- Insert a spline adapter into the female end of the stem extension. Install another spline adapter onto the male end of the stem extension.
- Install the female end of the stem extension over the spline of the hot valve. Secure with the machine screw.
- Repeat for the cold valve.

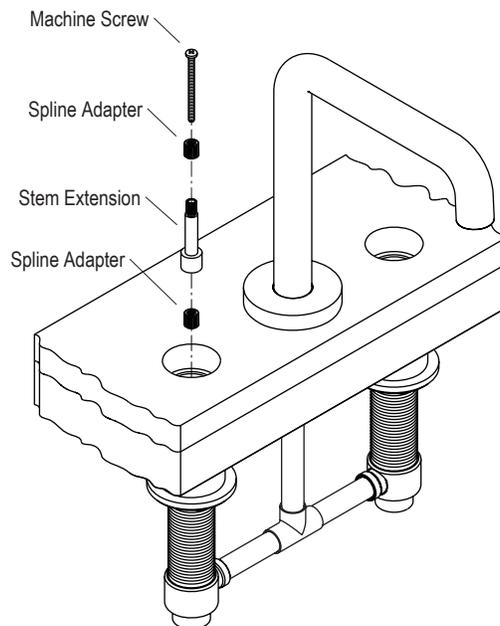

- Place a gasket in the bottom of the escutcheon of the handle assembly.
- Place the handle assembly over the stem extension orienting the handle as desired.
- Hold the handle with one hand and turn the escutcheon with the other hand until it contacts the mounting surface.
- Repeat for the other handle assembly.

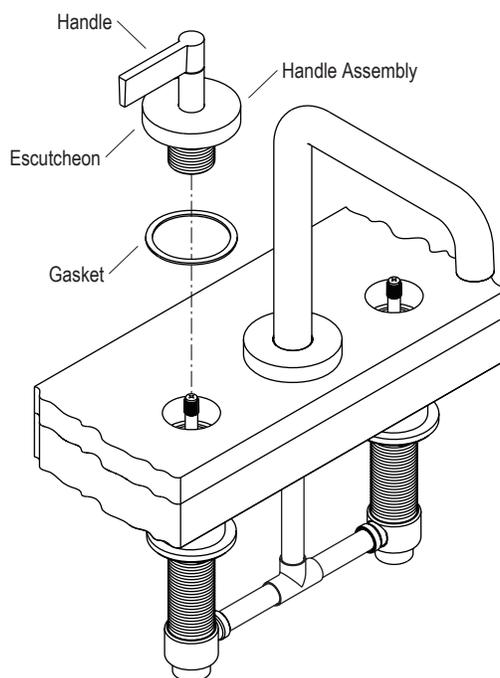

INSTALLATION  
INSTRUCTIONSP24403, P24404,  
P24405

## 4. COMPLETE THE INSTALLATION

- Ensure that both faucet handles are turned off (hot - clockwise close, cold - counterclockwise close).
- Turn on the main water supply, and check for leaks. Repair as required.
- Remove the aerator assembly with the tool provided. Turn on both hot and cold valves, and run water through the spout for about a minute to remove any debris. Check for leaks.
- Turn off both hot and cold valves. Reinstall the aerator assembly.

