



# ēno<sup>®</sup> flex

ēno flex is built with PolyVision's *e<sup>3</sup> environmental ceramicsteel™* dry-erase and interactive surfaces to withstand the rigors of everyday classroom use and offer superior writeability, eraseability and interactive performance.

Proper use and maintenance will keep your board looking like new.



### General cleaning instructions for the e<sup>3</sup>™ surfaces

1. Wipe board with a clean cloth moistened with a liquid cleanser.
2. Rinse with warm, clear water to remove any residue from the cleanser (a very important step).
3. Wipe dry with a clean cloth. If the board is used daily, cleaning should be performed two or three times a week. Repeated cleaning may be required if writing is left on the board for more than two days.



### Removing crayon or tape

1. Dampen a clean, dry cloth with water.
2. Apply a small amount of non-abrasive cleanser without bleach, onto the cloth. For best results, follow instructions on the cleanser label.
3. Working in small sections, clean the area using a back-and-forth horizontal motion. Use gentle pressure as if you were cleaning a window.
4. Wipe off all residue with a dry cloth.
5. Rinse well with clear water and wipe dry with a clean cloth. (Do not skip this step.)



### Removing permanent marker

A quick and easy way to remove permanent marker from the surface is to write over the top of the permanent marker writing with a dry-erase marker. Then, simply erase.

If this does not remove the marker, a more stringent cleansing is required:

1. Moisten a clean, dry cloth with rubbing alcohol.
2. Wipe the board in a circular motion to loosen marker residue.
3. Rinse with clear water and dry the board with a clean cloth.
4. Repeat these steps as necessary to remove all residue.

**PolyVision<sup>®</sup>**  
a steelcase company

[www.polyvision.com](http://www.polyvision.com)