

Product Guide

User Information

Important Information:
Please save this product guide

CUSTOMER SERVICE:

United States

PO Box 2
Ulster Park, NY 12487
Office hours: 9-5 EST
Phone (800) 777-4244
Fax (800) 336-5948
(845) 572-3468

www.CommunityPlaythings.com
Sales@CommunityPlaythings.com

United Kingdom

Robertsbridge
E. Sussex TN32 5DR
Phone 0800 387 457
Fax +44 (0)1304 843 731
www.CommunityPlaythings.co.uk
Sales@CommunityPlaythings.co.uk



J422, J424 10" Mealtime Chair J421, J423 10" Mealtime Chair with Tray J442, J444 8" Mealtime Chair J441, J443 8" Mealtime Chair with Tray

Recommended Use

The Mealtime Chair is for children ages 6 months to 24 months, covering three developmental stages in the growing child.

The first stage uses the Mealtime Chair with the Mealtime Seat and Tray.

The second stage uses the Mealtime Chair with Mealtime Seat, sitting at a table.

For the third stage the Mealtime Chair is used without the Mealtime Seat and Tray and the child sits at the table.

⚠ WARNING

- ▲ This product is intended for use by children of immature judgment. Therefore adult supervision is required at all times.
- ▲ Do not leave the child unattended.
- ▲ Do not use the chair unless all components are correctly fitted and adjusted.

- ▲ Seat belts are not intended for behavior management but for the safety of the user. Seat belts must be carefully adjusted for the comfort and security of the user and can never take the place of the caregiver. Use of seat belts must be closely supervised.
- ▲ The tray is not designed to hold the child in the chair. It is recommended that the chair be used only by children capable of sitting upright unassisted.
- ▲ Be aware of the risk of open fire and other sources of strong heat, such as electric bar fires, gas fires etc. in the vicinity of the high chair.
- ▲ Stack chairs facing a wall to discourage climbing.
- ▲ Stack no more than five high to prevent instability.
- ▲ Mealtime Chairs have a maximum working load of 80 lbs (36kg.)

⚠ CAUTION

- ▲ For indoor use only. This chair is not waterproof.



Maintenance Information

J422, J424 **Mealtime Chair**
J421, J423 **Mealtime Chair**
J442, J444 **Mealtime Chair**
J441, J443 **Mealtime Chair**

Assembly

Your shipment comes in one carton containing:

1. One Mealtime Chair.
2. Product Guide.



Figure A

To attach seat belt, thread buckle up through gap at back of seat and push clips into indentations on back (see fig. A).



Figure B

To attach Mealtime Seat, stand in front of chair and place Seat against back of chair. Push down on inside of armrests to latch in place (see fig. B). To remove Mealtime Seat, grasp handles, push thumbs down on inside of armrests and pull up and out with your fingers to release latches.

To attach Tray to Mealtime Chair, slide it over armrests of Mealtime Seat until both latches engage in armrest holes. To remove or adjust Tray, pull on latches to disengage from armrest holes.

If your shipment is incomplete, please call Customer Service.

Accessories

- J413 Chair Dolly
- J425 Tray

Maintenance

Periodically inspect for cracks, breaks, loose parts, loose screws, missing parts, and/or malfunctions. Remove product from service when any condition develops that might make operation unsafe.

Cleaning

Wipe wooden chair with damp cloth and mild detergent or disinfectant. Do not use excessive water. Seat belt is removable and machine washable. Clean plastic tray and seat with any mild soap or detergent. Avoid abrasive cleaners, aromatic spirits, and cleaning solutions containing pine oil (such as Lysol®). Some of these agents can cause plastic to weaken and crack.

⚠ Do not use rinse cycles in excess of 165° when washing Tray or adhesive may fail.

Construction

Wooden components are manufactured from durable hardwood plywood or solid maple and finished with a clear finish. All edges and corners are rounded for safety and ease of cleaning. Tray and plastic seat are smooth, washable plastic. Seat belt is made of sturdy polypropylene webbing and the locking buckle and attachment clips are made of durable plastic. Chair tips are molded from an elastomer.

User Modifications

We are not responsible for modifications made by customers to our products in the field, without our supervision, testing or evaluation.

Ordering Parts

To order replacement parts, contact Customer Service with a description of the part(s) needed and the ID Code from the product.

Use only replacement parts supplied by Community Playthings.

CUSTOMER SERVICE:

United States

PO Box 2
Ulster Park, NY 12487
Office hours: 9-5 EST
Phone (800) 777-4244
Fax (800) 336-5948
(845) 572-3468

www.CommunityPlaythings.com
Sales@CommunityPlaythings.com

United Kingdom

Robertsbridge
E. Sussex TN32 5DR
Phone 0800 387 457
Fax +44 (0)1304 843 731
www.CommunityPlaythings.co.uk
Sales@CommunityPlaythings.co.uk

