

# Product Guide

## User and Maintenance Information

### IMPORTANT INFORMATION:

Please save this product guide. Consider making a photocopy in order to keep one copy with the product and file the other for future reference.

### CUSTOMER CENTERS:

#### United States

359 Gibson Hill Road  
Chester, NY 10918

Office hours: 9-5 EST

Phone (800) 777-4244

Fax (800) 336-5948

(845) 572-3468

www.CommunityPlaythings.com

#### United Kingdom

Robertsbridge

E. Sussex TN32 5DR

Phone 0800 387 457

01580 883 301

Fax 0800 387 531

01580 883 331

www.CommunityPlaythings.co.uk



# community playthings

# Adjustable Legs for Community Table System

## Recommended Use

To be installed on Community Playthings Table or Desk top as per directions below.

### ⚠ WARNING

▲ This product is intended for use by children of immature judgment, therefore supervision is required at all times.

▲ Your table will be unstable if legs are not installed according to directions.

▲ The table must be empty when making adjustments to the legs.

### ⚠ CAUTION

▲ For indoor use on level surface only.

## Assembly

This carton contains the legs for your table and the product guide, which includes directions for assembly.

Adjustable legs are available in three ranges of height adjustment.

The model number on the carton corresponds to the set of legs you selected from the catalog.

If your shipment is incomplete, please call your Customer Center.

Follow the steps below for each leg:

1. Make sure black Friction Ring is fully seated in the plastic socket. There should be no air gap underneath (See Fig. A)

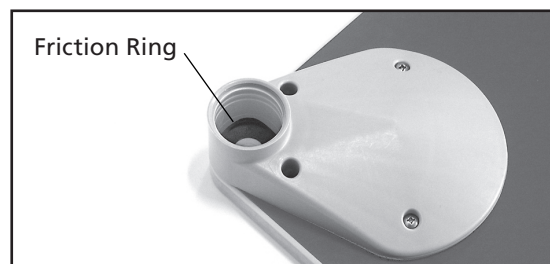


Figure A

**NOTICE:** Due to greater thickness of the tops of the Classroom Tables and Desks, each increment of adjustment is one inch more than the Multi-Table, as described in the chart.

2. Insert leg into plastic socket.
3. Rotate leg clockwise until completely tightened into socket. Use both hands to tighten.
4. When all legs are installed, position table on its legs.
5. If table wobbles, check that legs are fully inserted into the sockets and adjusted to equal height.

## Adjustments

To raise your table to a higher position, pull wooden leg out from the plastic sleeve until it locks at the desired height. (See Fig. B)

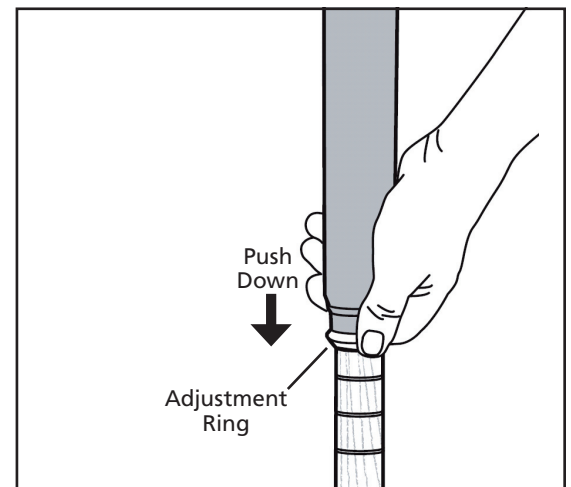


Figure B

To lower your table height, lift the table and push the adjustment ring on the leg down. Holding the ring down, push wooden leg up until it locks at the desired leg height.

MODEL NUMBER	CLASSROOM TABLE/DESK HEIGHT	MULTITABLE HEIGHT
A932 set of 4 Legs	Low 13-17" (33-43 cm)	12-16" (30-41 cm)
A934 set of 4 Legs	Medium 17-25" (43-63 cm)	16-24" (41-61 cm)
A936 set of 4 Legs	High 21-31" (53-79 cm)	20-30" (51-76 cm)
A992 set of 5 Legs	Low 13-17" (33-43 cm)	12-16" (30-41 cm)
A994 set of 5 Legs	Medium 17-25" (43-63 cm)	16-24" (41-61 cm)
A996 set of 5 Legs	High 21-31" (53-79 cm)	20-30" (51-76 cm)

# Page 2

## User and Maintenance Information (cont'd)

### Adjustable Legs for Community Table System

#### Maintenance

Periodically inspect for cracks, breaks, loose parts, missing parts, and/or malfunctions. Remove the product from service when any condition develops that might make operation unsafe.

#### Cleaning

Wash with mild dishwashing liquid or powdered detergent and warm water, using a soft cloth. Rinse with warm water, and dry with a soft cloth.

#### Construction

Adjustable legs are solid maple extensions telescoping from rigid aluminum sleeves.

Plastic parts are constructed from durable polypropylene.

#### User Modifications

We cannot be responsible for modifications made by customers to our products in the field without our supervision, testing, or evaluation.

#### Ordering Parts

To order replacement parts, contact your Customer Center with a description of the part(s) needed and the ID Code from the product.

**Use only replacement parts supplied by  
Community Playthings.**

#### CUSTOMER CENTERS:

##### United States

359 Gibson Hill Road  
Chester, NY 10918

Office hours: 9-5 EST

Phone (800) 777-4244

Fax (800) 336-5948

(845) 572-3468

[www.CommunityPlaythings.com](http://www.CommunityPlaythings.com)

##### United Kingdom

Robertsbridge

E. Sussex TN32 5DR

Phone 0800 387 457

01580 883 301

Fax 0800 387 531

01580 883 331

[www.CommunityPlaythings.co.uk](http://www.CommunityPlaythings.co.uk)



**community  
playthings**