 


Disassembly Instructions



Unite Fabric Panel

Material Type: A. Steel B. Aluminum C. Plastic D. Fiberglass E. Fabric

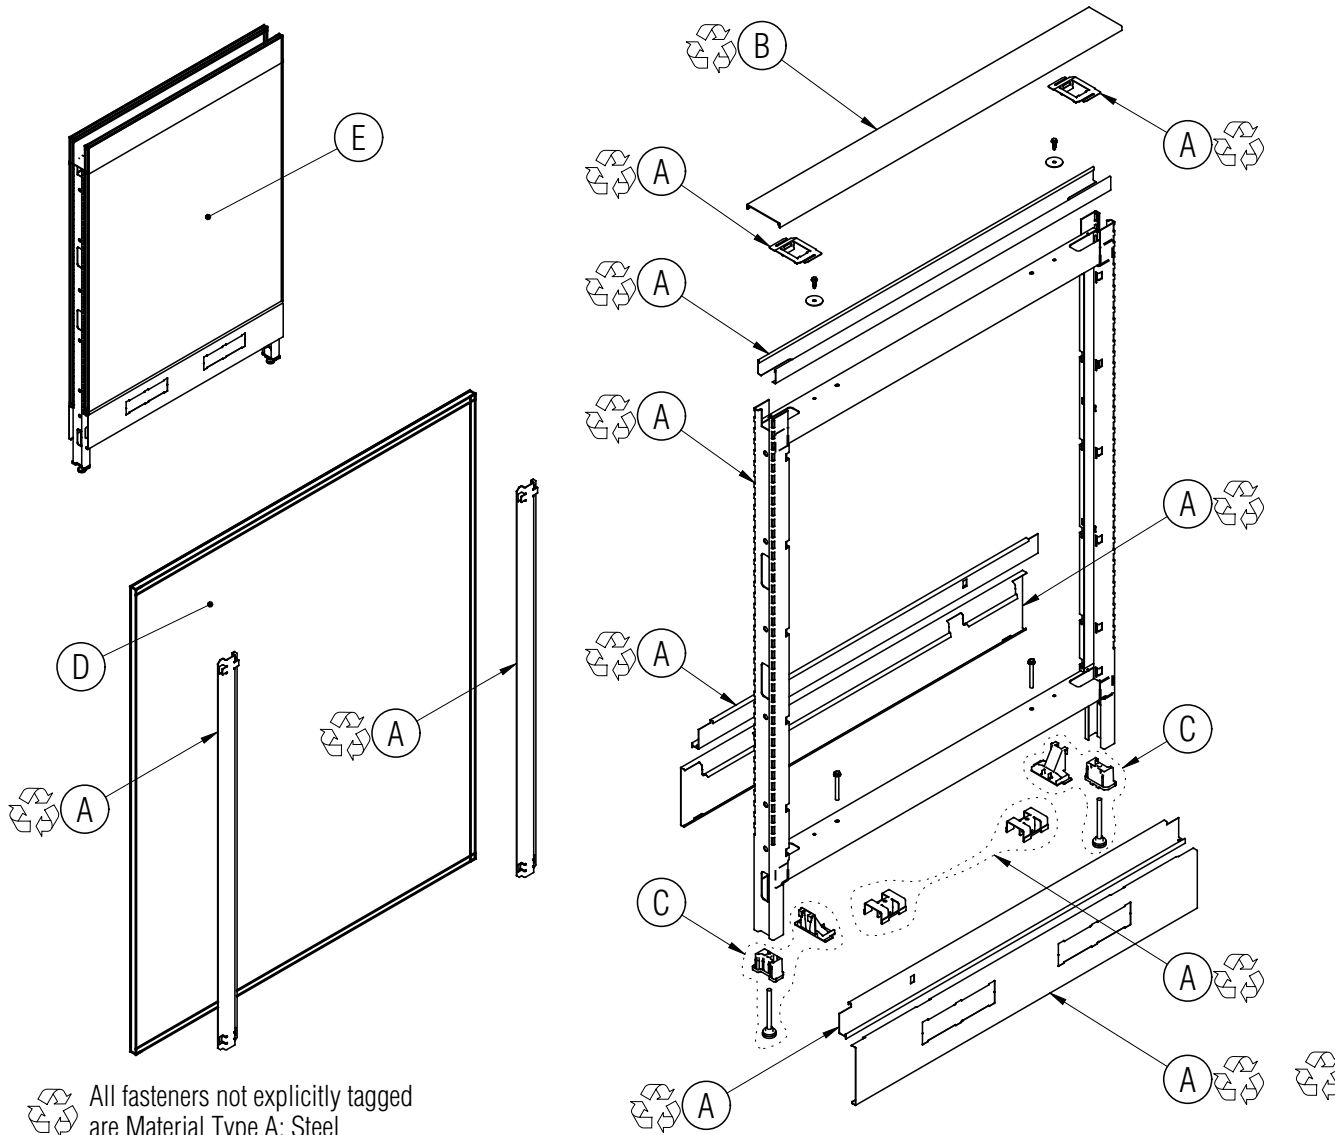

Procedure:

1. Lift off the top cap, Lift off the tiles on each side of the frame. Twist the top cap clips to remove them from the top cap.
2. Strip the tile stiffeners off the tile core to remove them.
3. Pull open the base covers and lift them off. Lift off the tile support to remove them.
4. Remove the screws holding the top wire trough to the top channel and remove the wire trough.
5. Remove the screws holding the wireway brackets to the bottom channel and remove the brackets.
6. Remove the glides and base cover clips. Pry out the glide housings from the bottom of the posts.

General Notes:

1. Disassembly time: 15-20 minutes
2. This procedure assumes basic familiarity with hand tools and furniture terminology: no specialized training is required
3. All materials removed and disassembled shall be sorted and segregated with like materials and disposed of or recycled according to recycling availability or waste acceptance
4. For items to be recycled, refer to KI's End of Life Recycling Matrix and KI's End of Life Recovery Options Matrix, available at www.ki.com

 
Required Tools




Gloves




Safety Glasses




Channel Lock Pliers

 


Phillips Screwdriver

 


Hex Socket Wrench

 

Putty Knife

 

Pry Bar

 

Rubber Mallet