


 

 

 



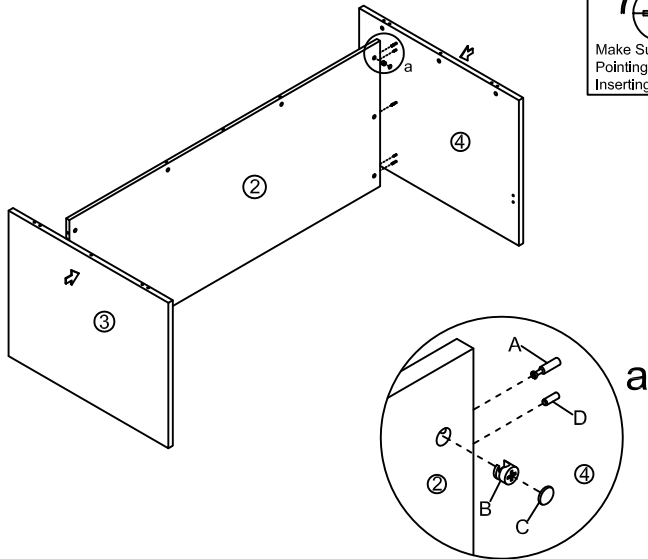
Assembly Instructions

MODEL NO.N101


DESK SHELL

TUN010CL	TUN011KC	TUN026	TUN021AG	TUN013LB	TUN018SC	TUN015BG	TUN015BG	TUN015BG
 Cam lock 14Pcs+1Pc(spare)	 Klix Cam 14Pcs+1Pc(spare)	 Cam Cover 14Pcs+1Pc(spare)	 Dowel 9Pcs+1Pc(spare)	 Adjustable Glide 4Pcs	 6Hole L-Bracket 5Pcs	 Screw#4"5/8" 30Pcs+1Pc(spare)	 60mm Black Grommet 2 Pcs	 Cover 4Pcs+1Pc(Spare)

STEP1



IMPORTANT: FUNCTION OF KLIX CAM



1/4 RIGHT TURN FOR LOCKING
Make Sure The Arrow Is Pointing Upwards Before Inserting Into The Panel's Hole

STEP2

