

Elite




©COPYRIGHT KEILHAUER 2004

**KEILHAUER**

1450 Birchmount Road, Toronto, Ontario, Canada M1P 2E3  
tel 416 759 5665 fax 416 759 5723 1 800 724 5665  
[www.keilhauer.com](http://www.keilhauer.com) [info@keilhauer.com](mailto:info@keilhauer.com)

## 1. Tilting Adjustment (Swivel Knee Tilt -5)

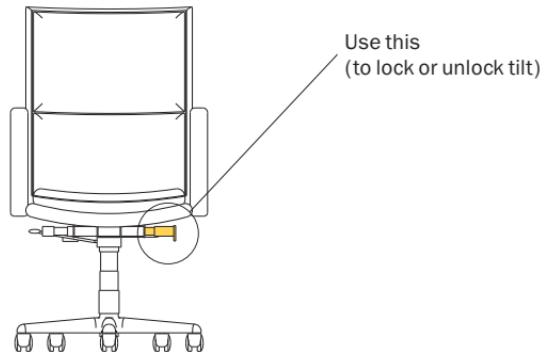


The tilting of the chair is controlled by the lever located under the left side of the chair near the front of the seat.

**To lock** the tilting mechanism (upright position only) lean slightly forward in the chair and push the lever in or to the right.

**To unlock** the tilting mechanism pull the level out to the left. These adjustments can be made while seated.



## 2. Tension Adjustment

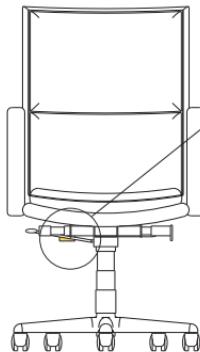


The tilting tension is controlled by the circular knob under the right side of the seat near the rear.

**To increase** the tension turn the knob counter clockwise.

**To decrease** the tension turn the knob clockwise.

The adjustment can be made while seated although some may find it easier to stand in front of the chair.

## 3. Height Adjustment (Manual adjustment)

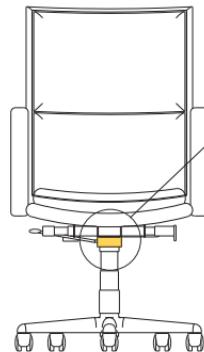


The height of the chair is adjusted manually by an upright threaded column located between the 5 leg base and the chair.

**To raise** the chair height, turn the oversize cap on the column clockwise.

**To lower** the chair height, turn the cap counter clockwise. These adjustments must be made while out of the chair.

#### 4. Height Adjustment (Pneumatic adjustment)

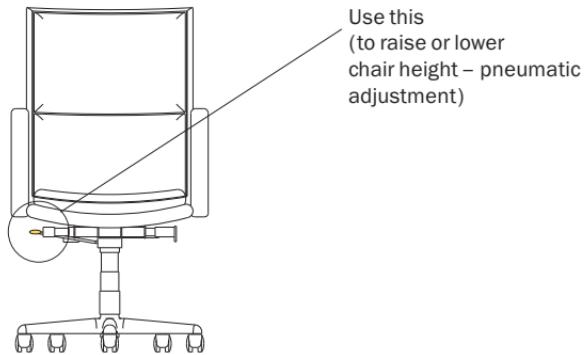

The height of the chair is adjusted by the paddle located under the right side of the seat near the front.

**To raise** the chair height lift your weight slightly out of the chair while pulling the handle upwards.

**To lower** the chair remain seated and pull the paddle upwards. Release the paddle when the desired height is reached whether raising or lowering the chair.