

 
# Day SURFACE MOUNT INSTALLATION INSTRUCTIONS FOR 2X2, 2X4, 1X4, 1X1, 1X2

**NOTE:** THE JUNCTION BOXES MUST BE SOLIDLY FIXED INTO THE CEILING BEFORE PROCEEDING WITH THE INSTALLATION.

## ● PART LIST

A	Ceiling	G	Reflectors
B	Screw Holes for anchors	H	Power Feed
C	Knock out Hole	I	Screws
D	Door	J	Ballast
E	Lamps (by others)	K	Ballast Wires
F	Fixture	L	Wire Nuts

## ● SECTION VIEW




## ● DIMENSIONS

PRODUCT	FIXTURE LENGTH	FIXTURE WIDTH	FIXTURE HEIGHT
<b>22 FIXTURE</b>	25-1/4"	25-1/4"	4-1/4"
<b>24 FIXTURE</b>	49-1/4"	25-1/4"	4-1/4"
<b>14 FIXTURE</b>	49-1/4"	13-1/4"	4-1/4"
<b>12 FIXTURE</b>	25-1/4"	13-1/4"	4-1/4"
<b>11 FIXTURE</b>	13-1/4"	13-1/4"	4-1/4"


## ● ANCHOR POSITIONS

Refer to anchor positioning template on pages 3-6.

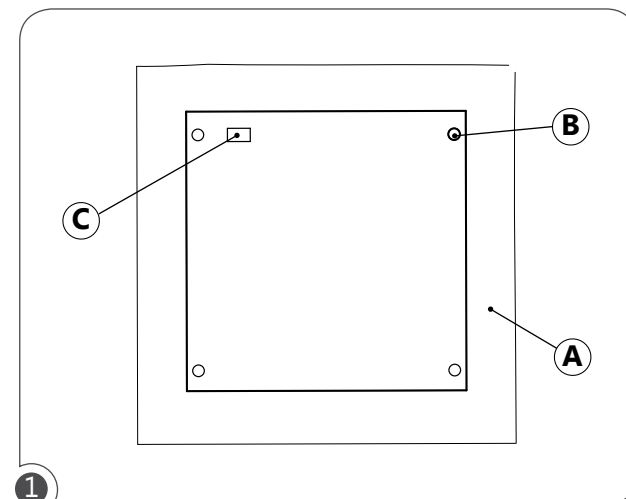


1

Ensure that the power to the fixture's circuit is turned off. Following the template (refer to the anchor position p. 3-6) create an opening for the knock out plate (C) and the holes for the anchors in the ceiling (A). Leave at least 6" of power feed out of the knock out opening (C).

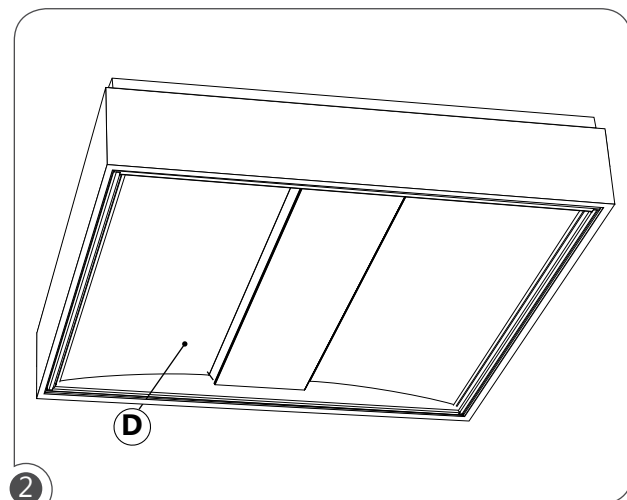


2

Pull the door (D) down on one side, marked with a white dot, to gain access to the lamps.

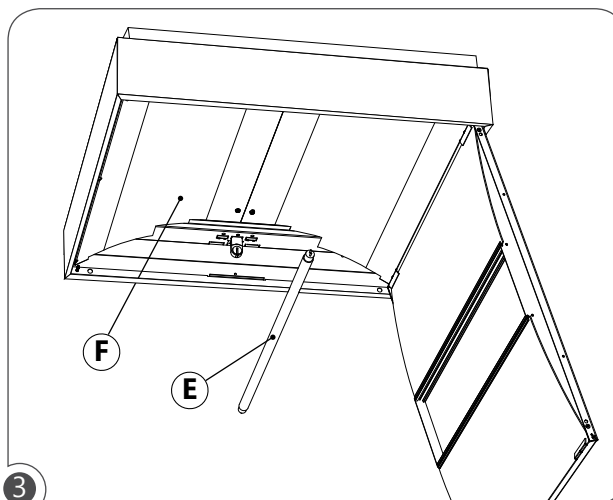

3

Remove the lamps (E) from the fixture (F).

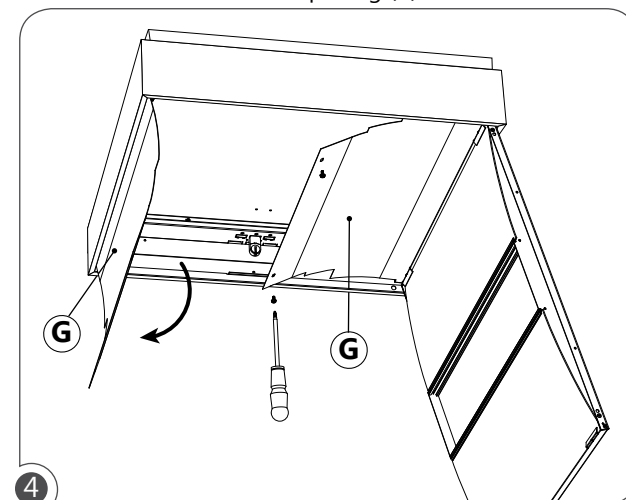


4

Unscrew and open the reflectors (G) to gain access to the ballast and the mounting holes.




**WARNING:** RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.




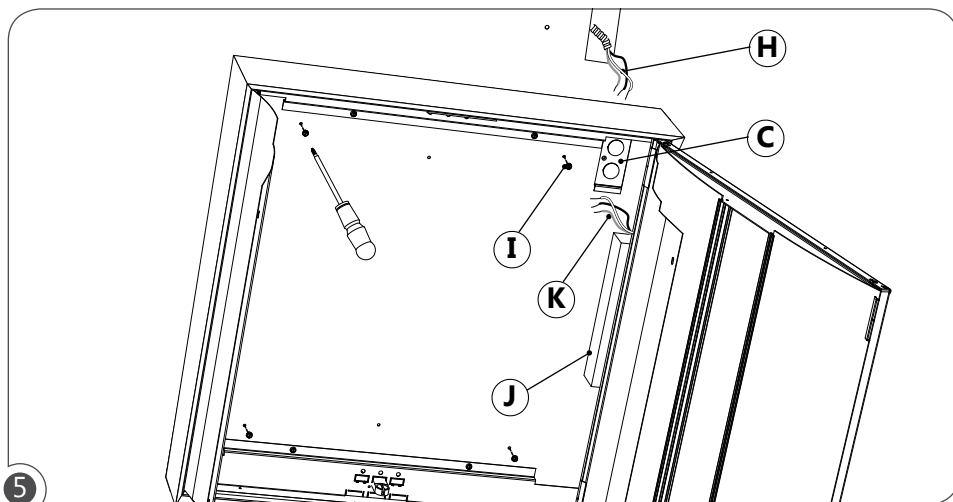


5 Pass the power feed (H) through the Knock out hole (C).  
Use appropriate screws (I) to fix the fixture to the ceiling.  
DAY11 and DAY14 have only 2 mounting points.

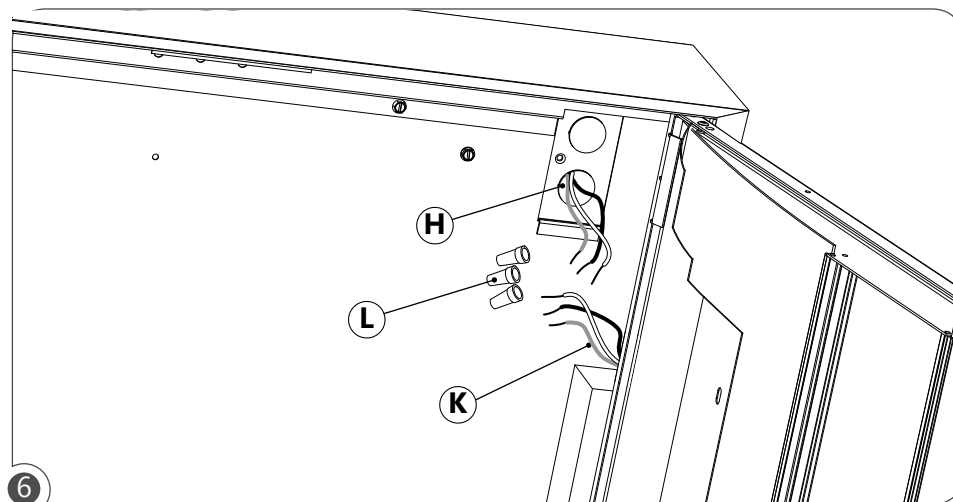

6 Inside the fixture, connect the power feed (H) to the ballast wires (K) using wire nuts (L).

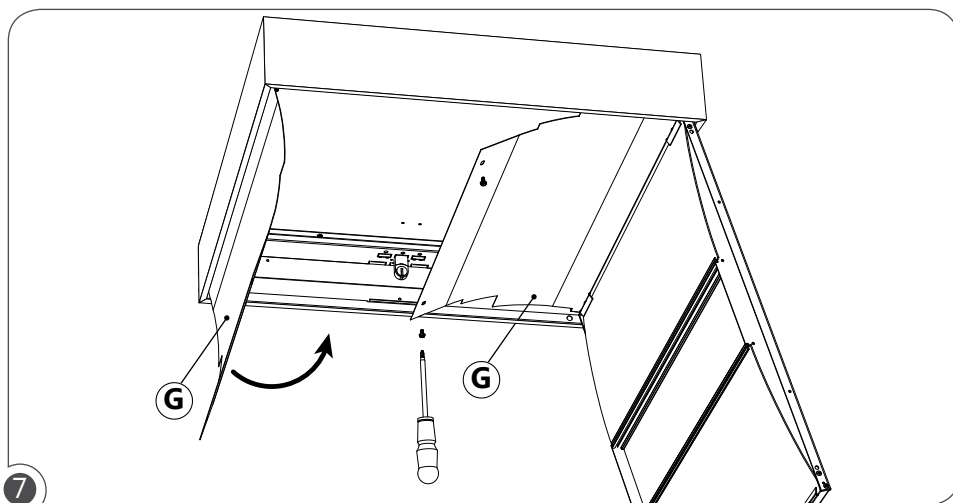


7 Screw the reflectors (G) back into place.

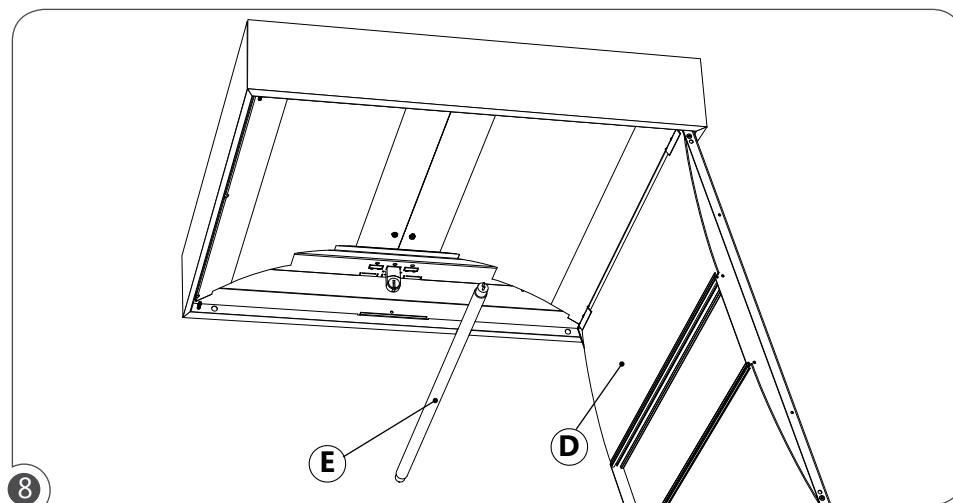

8 Re-install the Lamps (E) and close the door (D) by snapping it back into place.

# SURFACE MOUNT INSTALLATION INSTRUCTIONS

## TEMPLATE FOR HOLES AND POWER FEED

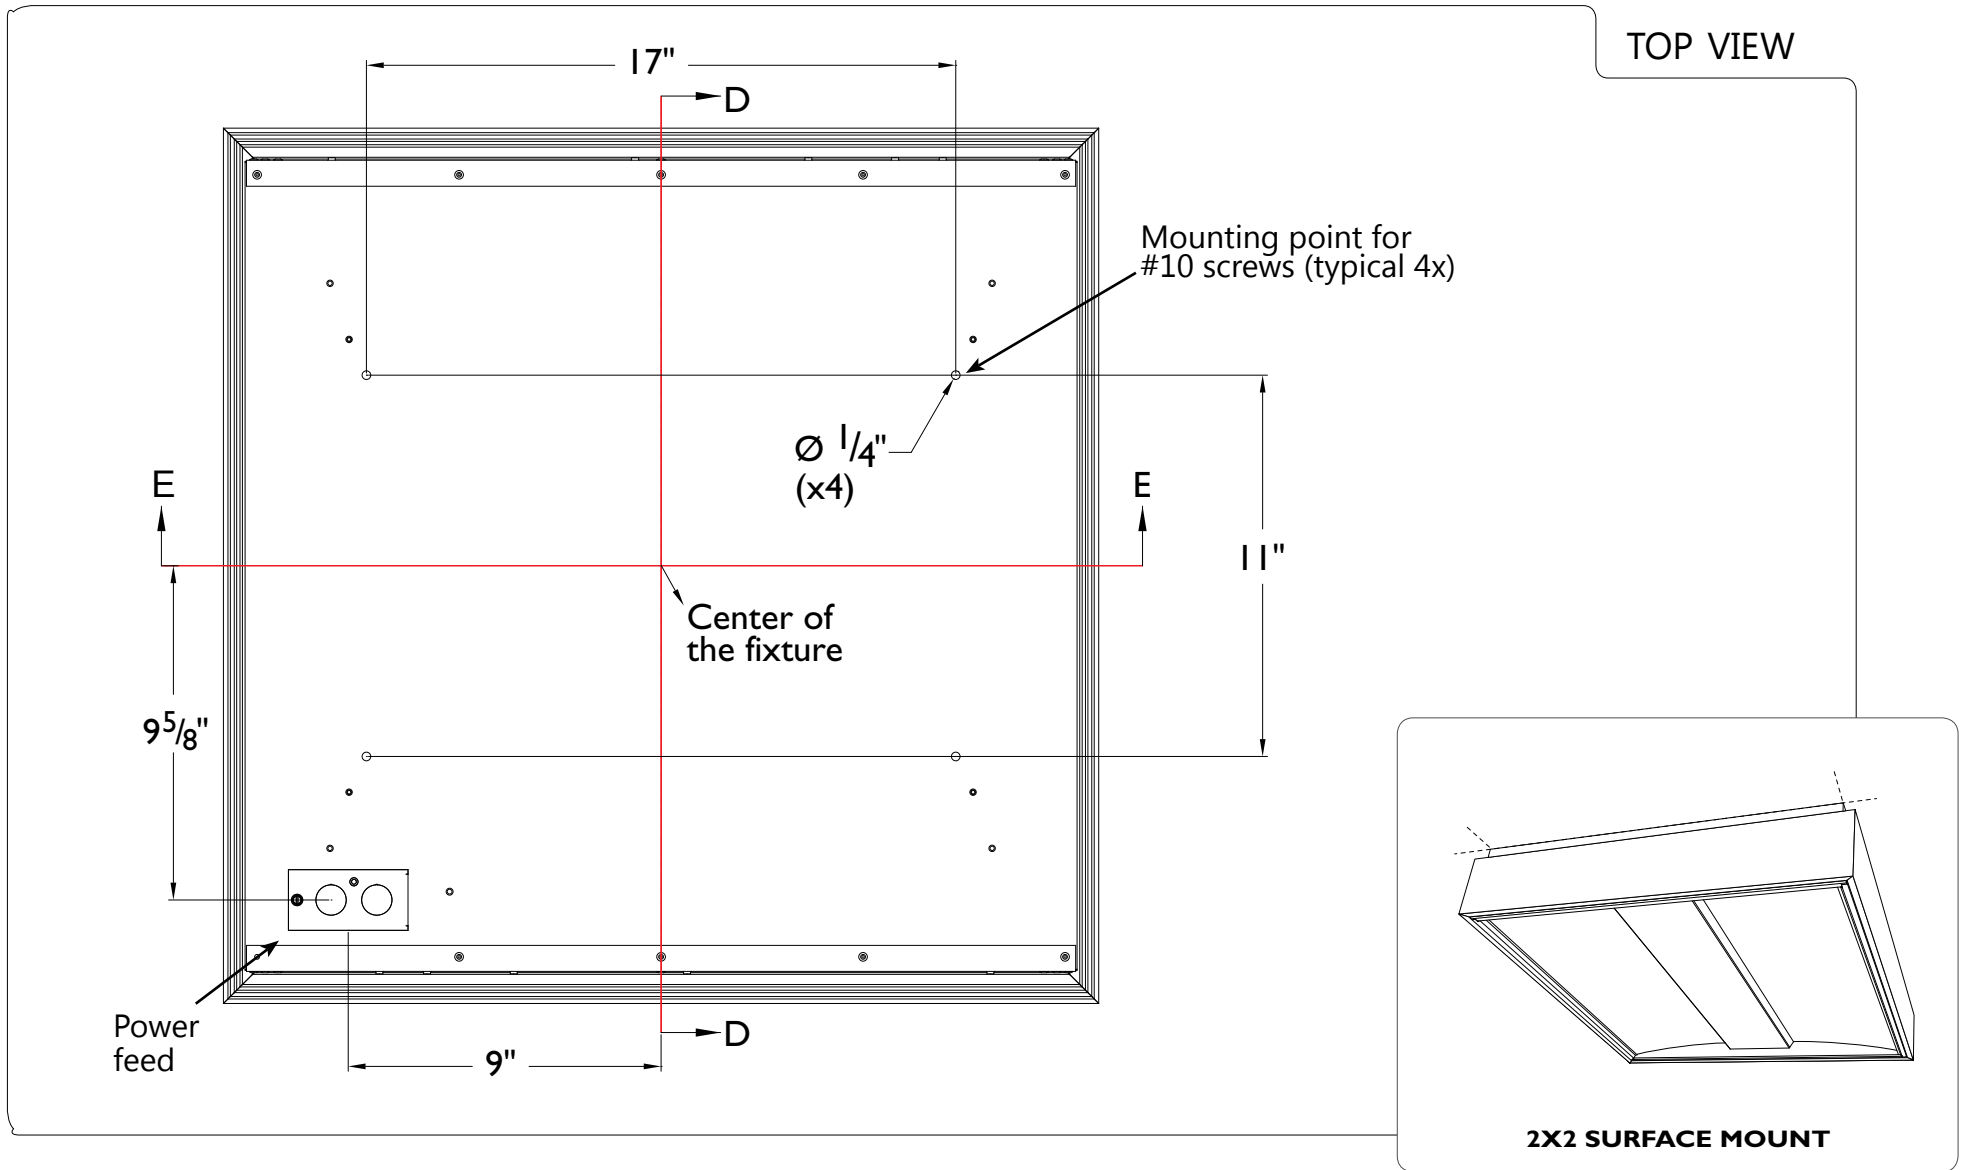

**i** Templates for DAY24, DAY22, DAY14, DAY12, DAY11 are available for download at [www.axislighting.com](http://www.axislighting.com)

FILE NAME: DAY.SM.INST

June 10, 2011



Page: 3 / 7

DAY

2x4

# SURFACE MOUNT INSTALLATION INSTRUCTIONS TEMPLATE FOR HOLES AND POWER FEED

TOP VIEW

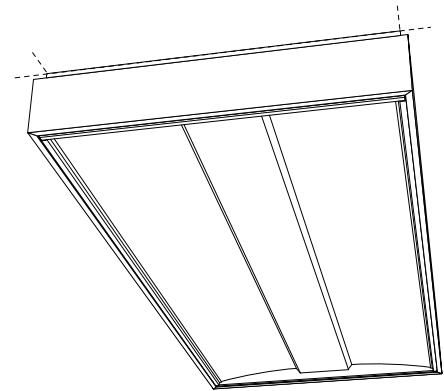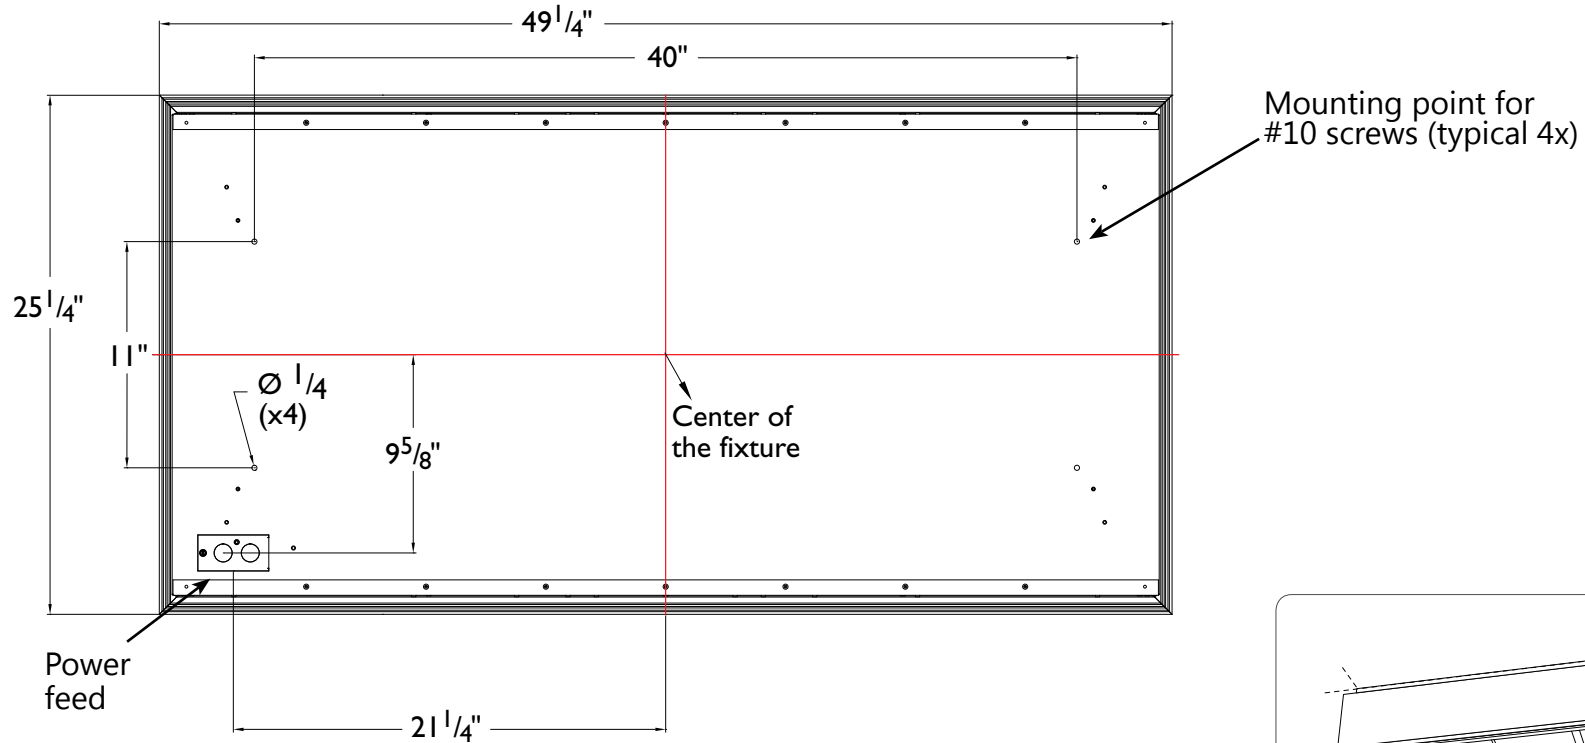

2X4 SURFACE MOUNT

**i** Templates for DAY24, DAY22, DAY14, DAY12, DAY11 are available for download at [www.axislighting.com](http://www.axislighting.com)

FILE NAME: DAY.SM.INST

June 10, 2011

ÉCLAIRAGE  
**axis**  
LIGHTING

1.800.263.AXIS  
[T] 514.948.6272  
[F] 514.948.6271  
[www.axislighting.com](http://www.axislighting.com)



**WARNING:** RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.



Product design and development is an ongoing process at Axis Lighting. We reserve the right to change specifications. Contact Axis for the latest product information.

© 2010 Axis Lighting Inc.



DAY

1x4

# SURFACE MOUNT INSTALLATION INSTRUCTIONS

## TEMPLATE FOR HOLES AND POWER FEED

TOP VIEW

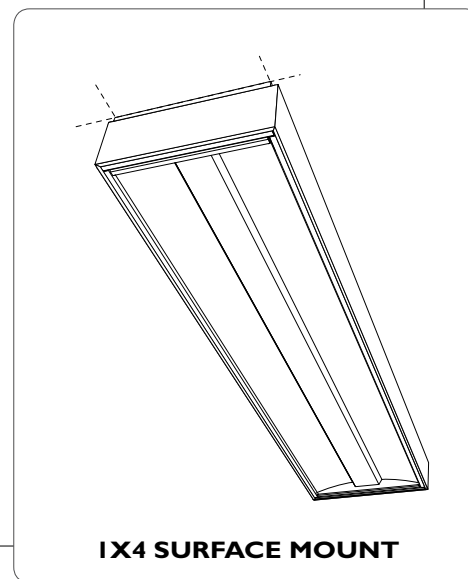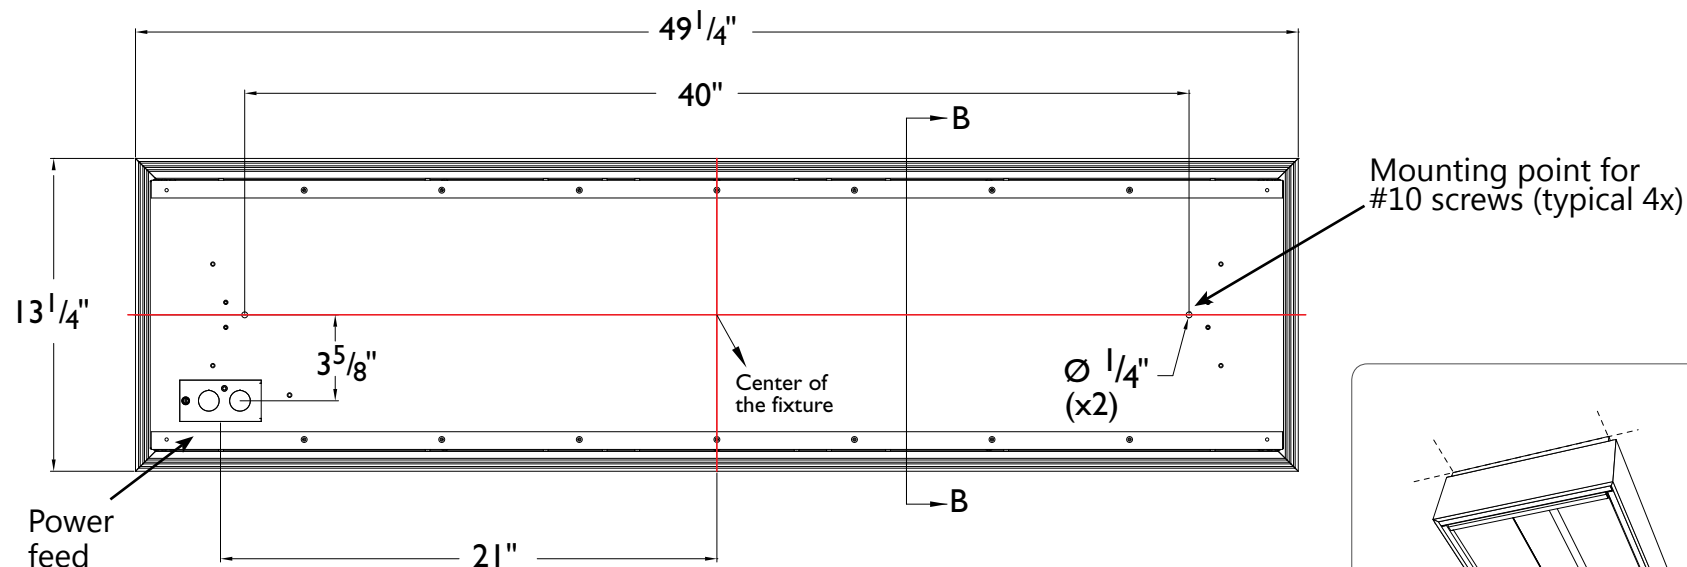

1X4 SURFACE MOUNT

**i** Templates for DAY24, DAY22, DAY14, DAY12, DAY11 are available for download at [www.axislighting.com](http://www.axislighting.com)

FILE NAME: DAY.SM.INST

June 10, 2011

Page: 5 / 7

ÉCLAIRAGE  
**axis**  
LIGHTING

1.800.263.AXIS  
[T] 514.948.6272  
[F] 514.948.6271  
[www.axislighting.com](http://www.axislighting.com)

**WARNING:** RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.





Product design and development is an ongoing process at Axis Lighting. We reserve the right to change specifications. Contact Axis for the latest product information.

© 2010 Axis Lighting Inc.

# SURFACE MOUNT INSTALLATION INSTRUCTIONS

## TEMPLATE FOR HOLES AND POWER FEED

TOP VIEW

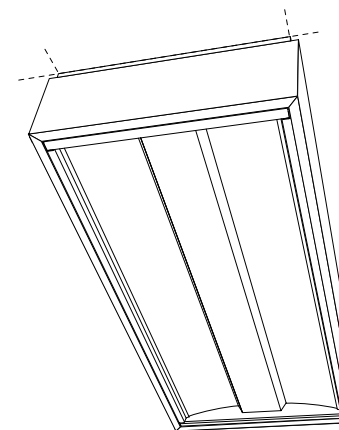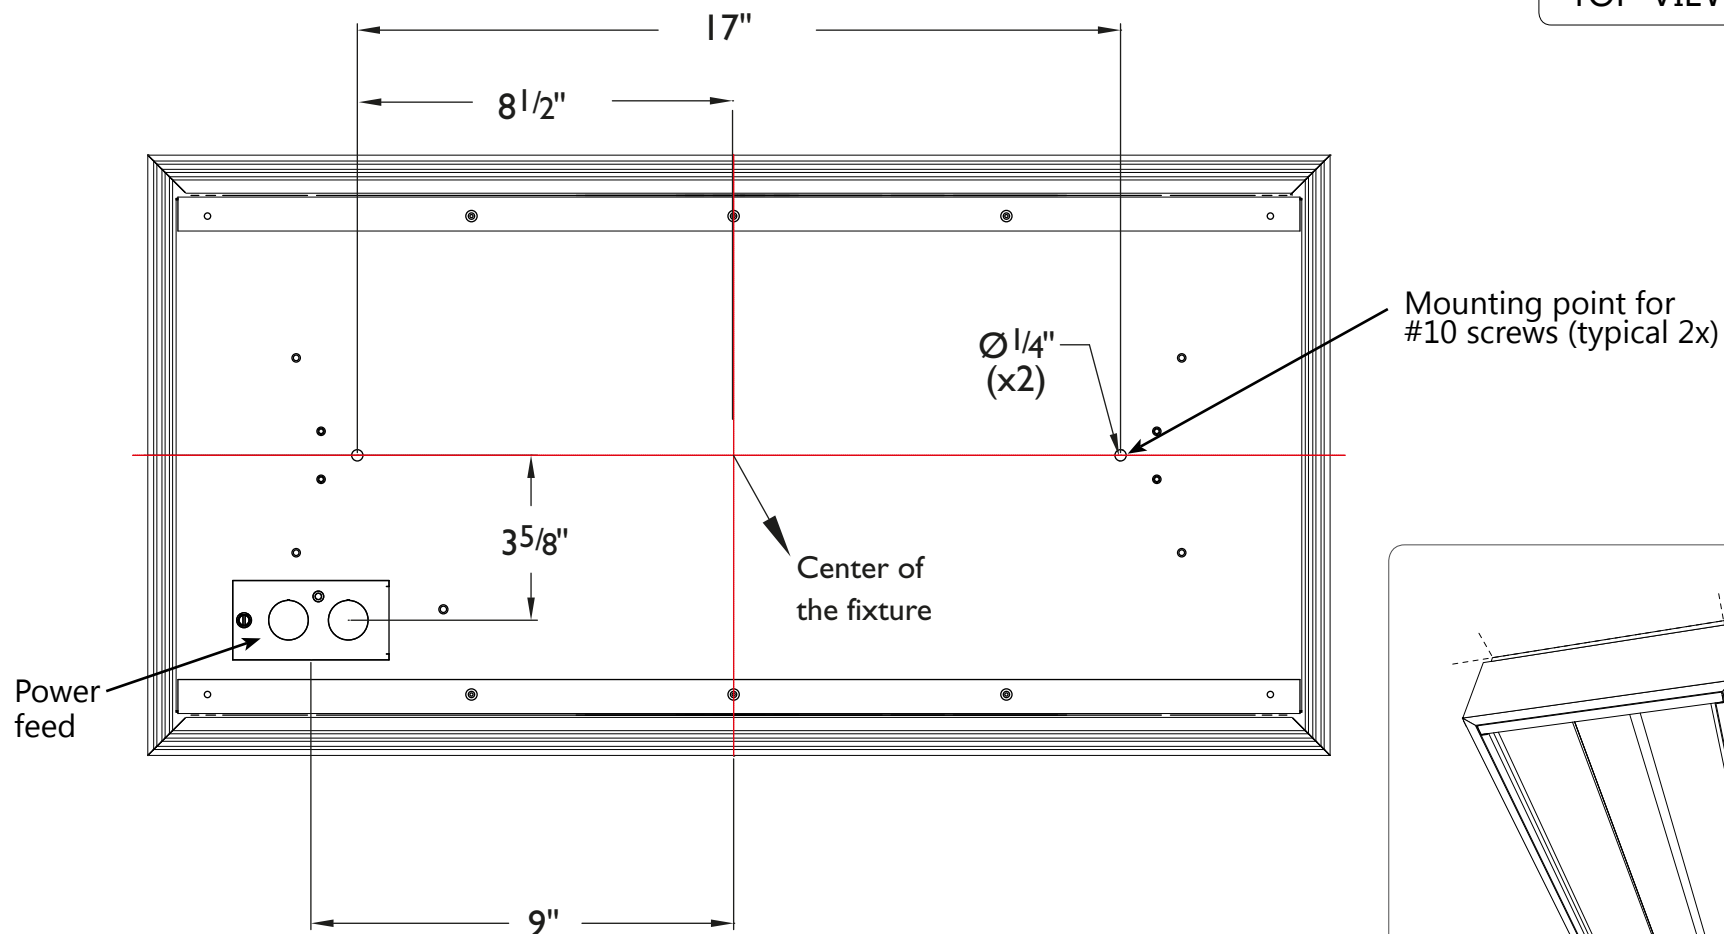

1X2 SURFACE MOUNT

**i** Templates for DAY24, DAY22, DAY14, DAY12, DAY11 are available for download at [www.axislighting.com](http://www.axislighting.com)

FILE NAME: DAY.SM.INST

June 10, 2011

ÉCLAIRAGE  
**axis**  
LIGHTING

1.800.263.AXIS  
[T] 514.948.6272  
[F] 514.948.6271  
[www.axislighting.com](http://www.axislighting.com)

**WARNING:** RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.




Product design and development is an ongoing process at Axis Lighting. We reserve the right to change specifications. Contact Axis for the latest product information.

© 2010 Axis Lighting Inc.

## SURFACE MOUNT INSTALLATION INSTRUCTIONS

### TEMPLATE FOR HOLES AND POWER FEED

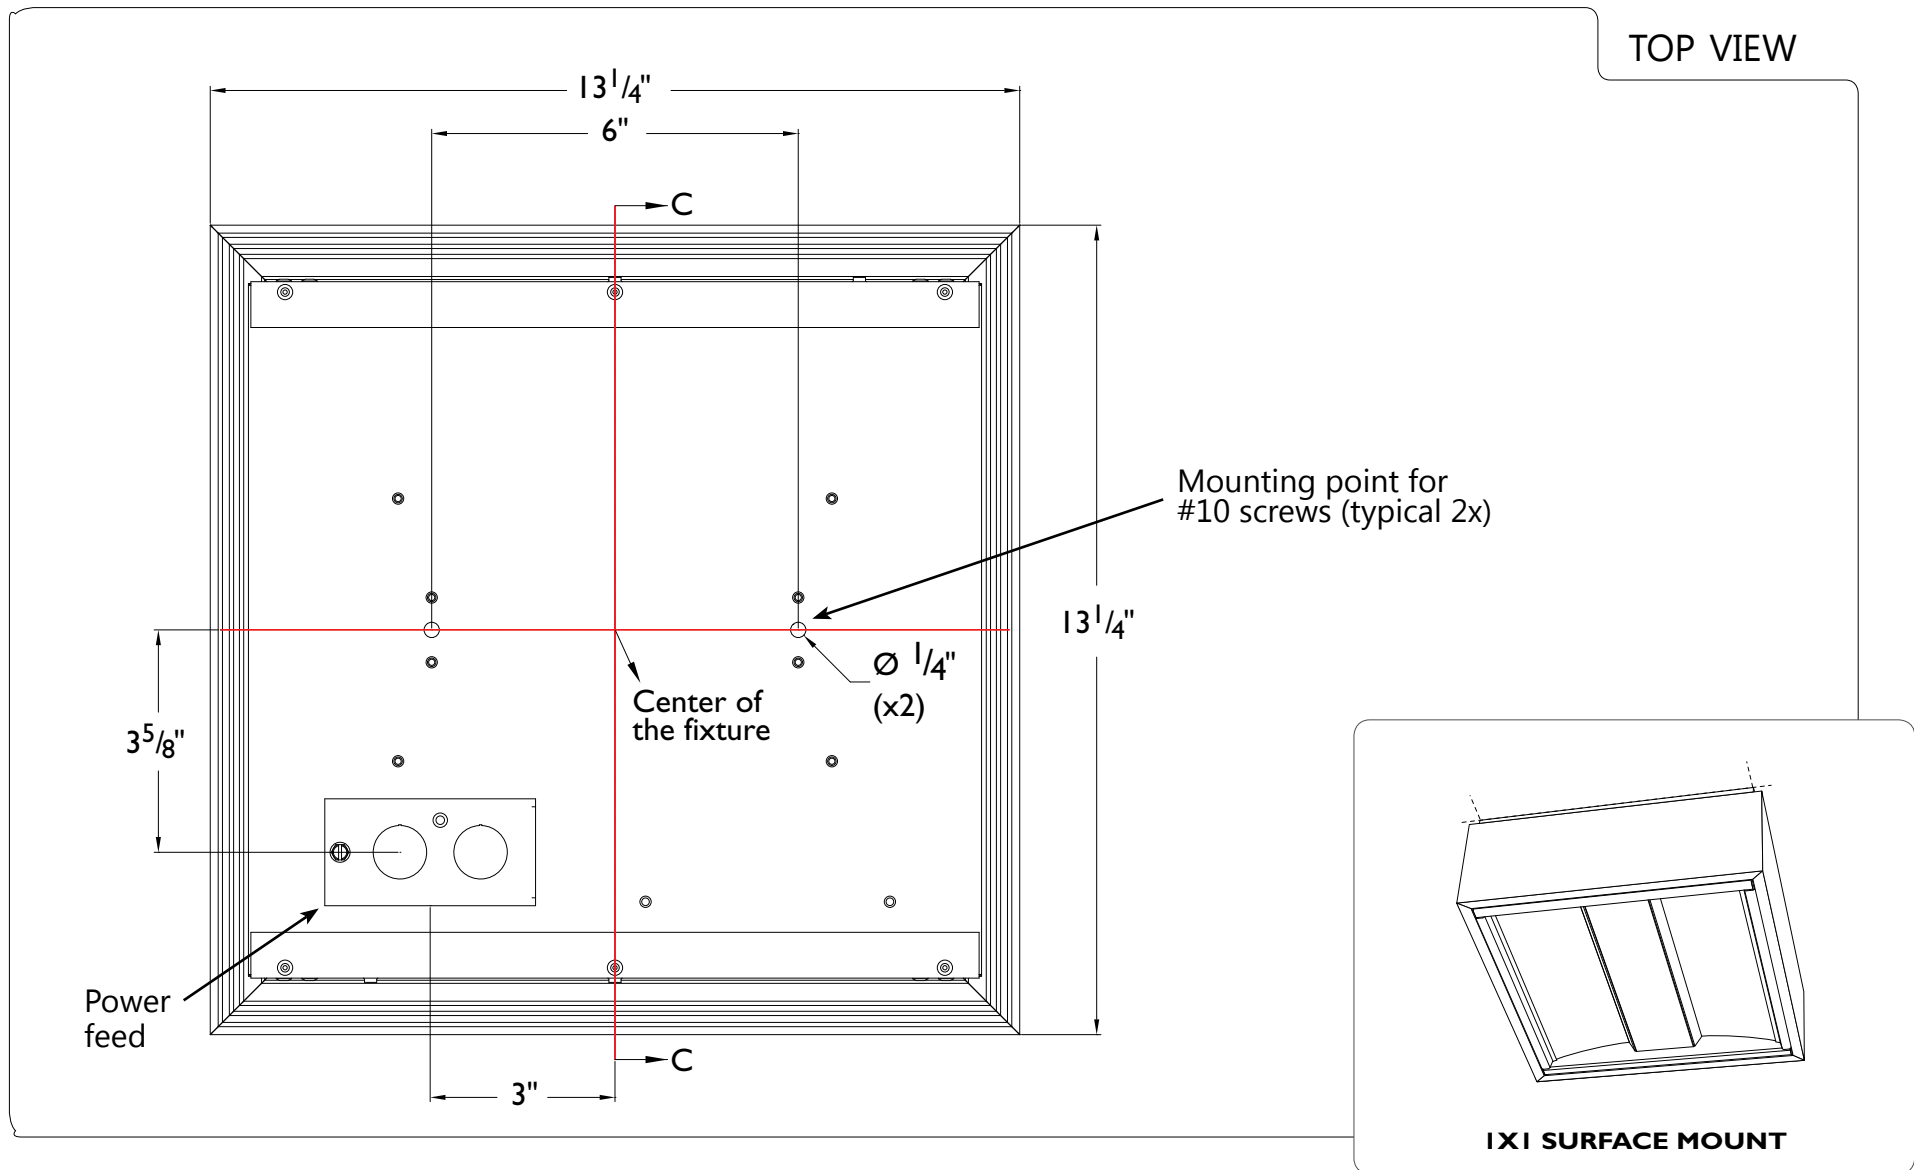

**i** Templates for DAY24, DAY22, DAY14, DAY12, DAY11 are available for download at [www.axislighting.com](http://www.axislighting.com)

FILE NAME:DAY.SM.INST

June 10, 2011

ÉCLAIRAGE  
**axis**  
LIGHTING

1.800.263.AXIS  
[T] 514.948.6272  
[F] 514.948.6271  
[www.axislighting.com](http://www.axislighting.com)



**WARNING:** RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.



Product design and development is an ongoing process at Axis Lighting. We reserve the right to change specifications. Contact Axis for the latest product information.

© 2010 Axis Lighting Inc.