


BALLAST REPLACEMENT INSTRUCTIONS FOR 2×2, 2×4, 1×4, 1×1, 1×2

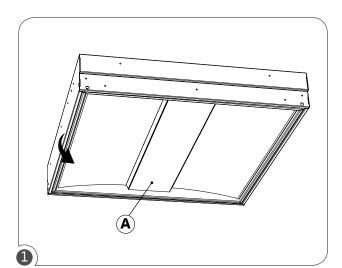


Ensure that the power to the fixture's circuit is turned off. Open the door (A) by pulling down on one side, marked with a white dot, to gain access to the lamps.

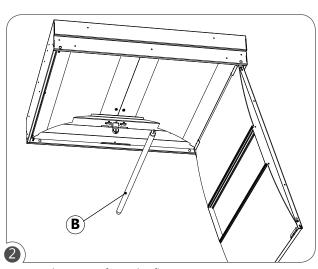


Remove lamps (B) from the fixture.

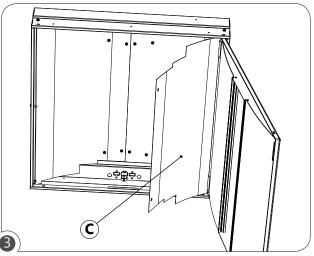


The ballast is always positioned on the hinge side of the door. Unscrew the reflector (C) with a screwdriver.

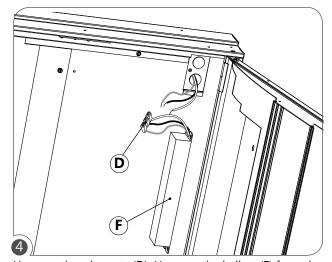

Unscrew the wire nuts (D). Unscrew the ballast (F) from the fixture. Replace the ballast and make connection with wire nuts.

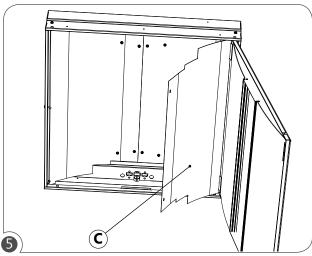

Screw the reflector (C) back into position with a screwdriver.

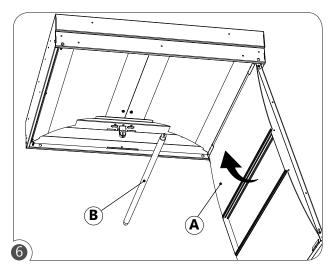

Reinstall the lamps (B) and close the door (A) by snapping back into place.

FILE NAME:DAY.BLST.INST

LIGHTING

June 10, 2011

[F] 514.948.6271

www.axislighting.com

1.800.263.AXIS WARNING: [T] 514.948.6272

RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.



Page: I / I