T-BAR CONTINUOUS ROW

INSTALLATION INSTRUCTIONS FOR 2×2, 2×4, 1×4, 1×2

BX connector (by others)

BX connector (by others)

BX connector (by others)


Knockout plate Ballast wires

Wire nuts (by others)

BX cable (by others)

Knockout plate

0

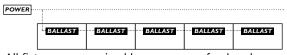

All fixtures are serviced by one power feed and contain its own ballast.



NOTE: T-bar grid must be straight and level for correct installation of continuous rows. T-bar grid must be well supported by wires tied to structure. One wire every 4 feet is recommended for each tee on the side of the run.


PART LIST

- Fixture
- Door
- Lamps (by others)
- Tiles (by others)
- T-bar grid (by others)
- Security tabs
- Security wire (by others) G
- Power feed BX cable (by others)


T-BAR STYLE MOUNTING




SECTION VIEW

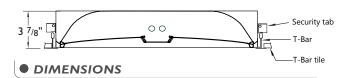


PRODUCT	FIXTURE LENGTH	FIXTURE WIDTH	T-BAR LENGTH	T-BAR WIDTH
22 FIXTURE	2315/16"	237/8"	24"	24"
24 FIXTURE	4715/16"	237/8"	48"	24"
14 FIXTURE	47 ¹⁵ /16"	11 ⁷ /8"	48"	12"
12 FIXTURE	2315/16"	117/8"	24"	12"

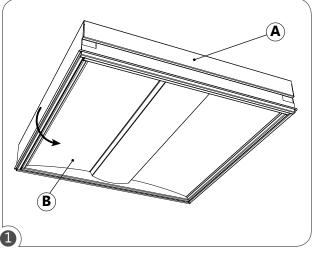


Ensure that the power to the fixture (A) circuit is turned off. Open the door (B) by pulling down on one side, marked with a white dot, to gain access to the lamps.

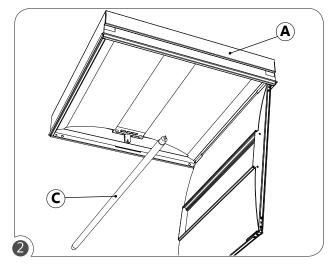

Remove lamps if installed (C) from the fixture (A).

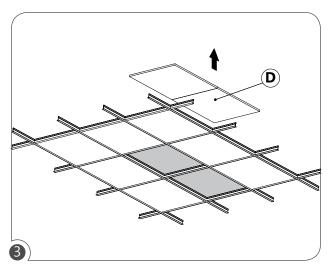

Remove the ceiling tiles (D) where the fixture will be installed and adjacent tiles for easy access when connecting the wires.

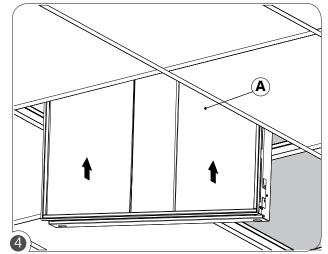

Close door and insert the fixture (A) into the ceiling as shown.

FILE NAME: DAY. CROWS. INST

June 10, 2011

WARNING:

RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.




Page: 1 / 3

Product design and development is an ongoing process at Axis Lighting. We reserve the right to change specifications. Contact Axis for the latest product information.




T-BAR CONTINUOUS ROW


INSTALLATION INSTRUCTIONS FOR 2×2, 2×4, 1×4, 1×2

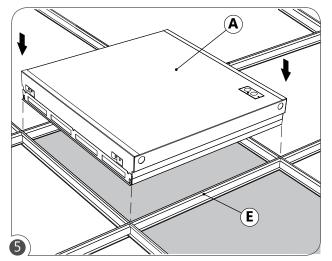


Set the fixture (A) into the T-bar grid (E).

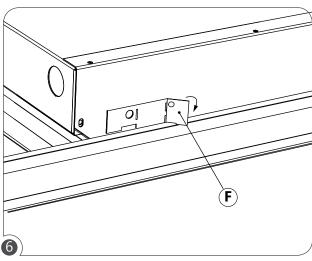


Based on ceiling type (tegular / screw slot T-bar or standard T-bar) bend a security tab (F) on each corner of the fixture to provide support. (SEE T-BAR STYLE MOUNTING Pg.1).

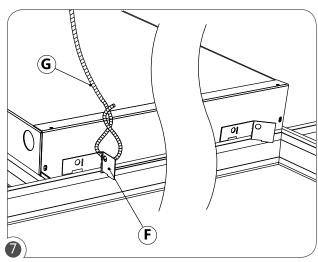


For additional safety a security wire (G) can be attached from the Security tabs (F) to the structure above.

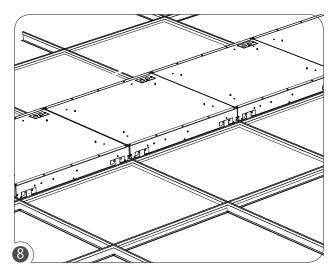

Repeat steps 1 through 7 for the remining fixtures in the row.

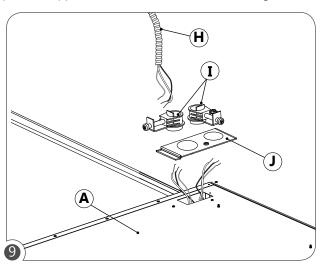

Remove knockout plate (J) from the top of the first fixture (A) and install two BX connectors (I) through the knockout plate Insert the power feed BX cable (H) into BX connector (I), and fasten by tightening screw.

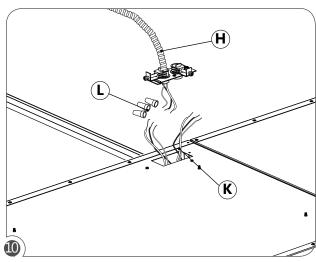

Connect wires from BX cable (H) to the ballast wires (K) by using wire nuts (L). Ensure connections comply with local and national electrical codes.

FILE NAME: DAY. CROWS. INST

LIGHTING


June 10, 2011


WARNING:


RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.




DAU INSTALLATION INSTRUCTIONS FOR 2×2, 2×4, 1×4, 1×2

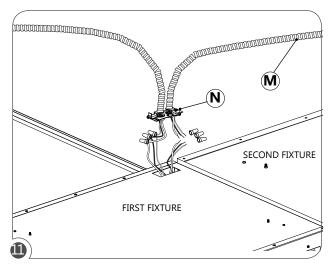

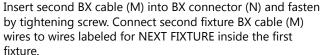


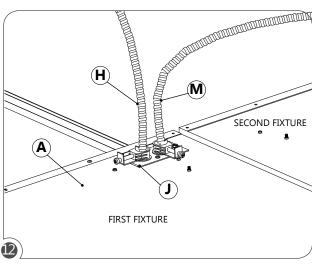

Push connected wires and wire nuts into the first fixture. Reinstall knockout plate (J) onto fixture (A) by refastening the screw of the knockout plate into the housing.

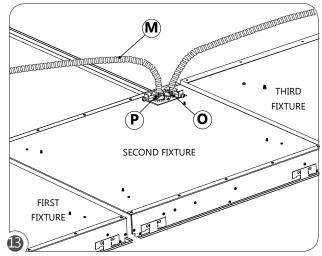


Remove knockout plate (O) from second fixture, and connect BX cable (M) to BX connector (P). Connect BX cable (M) wires to wires in second fixture. Reinstall knockout plate (O) on second fixture.

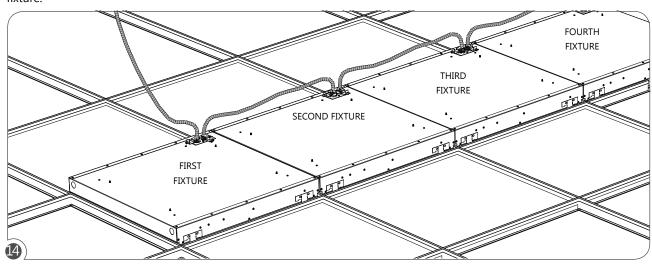

Repeat steps 9 to 13 for all fixtures in the row.

Make sure that proper alignment is maintained and all fixtures are correctly oriented in relation to other fixtures.

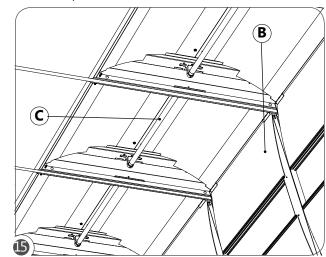

For all fixtures, reinstall lamps (C). Close the door (B). Power to the fixtures can now be safely turned on. Re-install the remaining tiles to close the ceiling.

FILE NAME: DAY. CROWS. INST

June 10, 2011

1.800.263.AXIS

[T] 514.948.6272 [F] 514.948.6271 www.axislighting.com



RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.



Page: 3 / 3