


INDIVIDUAL WITH MASTER/SATELLITE INSTALLATION INSTRUCTIONS FOR 2X2, 2X4, 1X4, 1X2

POWER

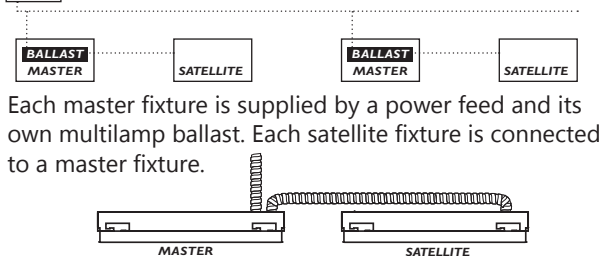


Each master fixture is supplied by a power feed and its own multilamp ballast. Each satellite fixture is connected to a master fixture.

IMPORTANT Please consult factory for maximum flex whip length between Master and Satellite fixtures.


PART LIST

- | | |
|-----------------------------|-----------------------------------|
| A Fixture - master | I Fixture - satellite |
| B Door | J Power feed BX cable (by others) |
| C Lamps (by others) | K BX connector |
| D Tiles | L Wire nuts |
| E T-bar grid | M Ballast wires |
| F Security tabs | N BX cable (by others) |
| G Security wire (by others) | O BX connector |
| H Knockout plate, master | P Knockout plate, satellite |

T-BAR STYLE MOUNTING

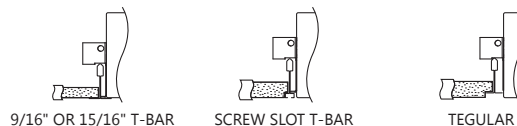


SECTION VIEW

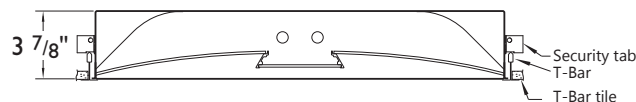


DIMENSIONS


PRODUCT	FIXTURE LENGTH	FIXTURE WIDTH	T-BAR LENGTH	T-BAR WIDTH
22 FIXTURE	23-15/16"	23-7/8"	24"	24"
24 FIXTURE	47-15/16"	23-7/8"	48"	24"
14 FIXTURE	47-15/16"	11-7/8"	48"	12"
12 FIXTURE	23-15/16"	11-7/8"	24"	12"

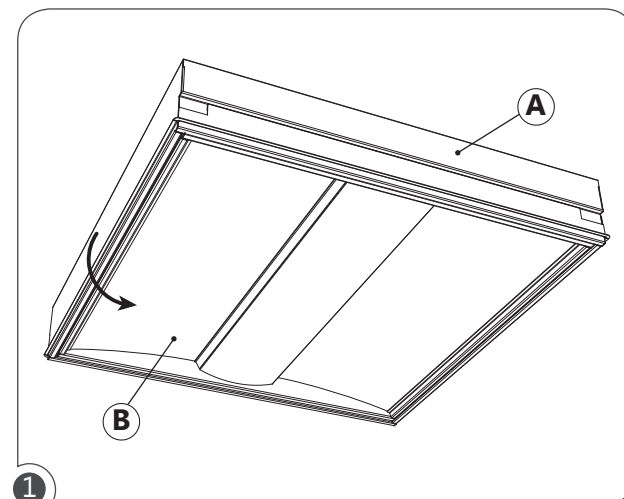


Ensure that the power to the master fixture's (A) circuit is turned off. Open the door (B) by pulling down one side, marked with a white dot to get access to the lamps.

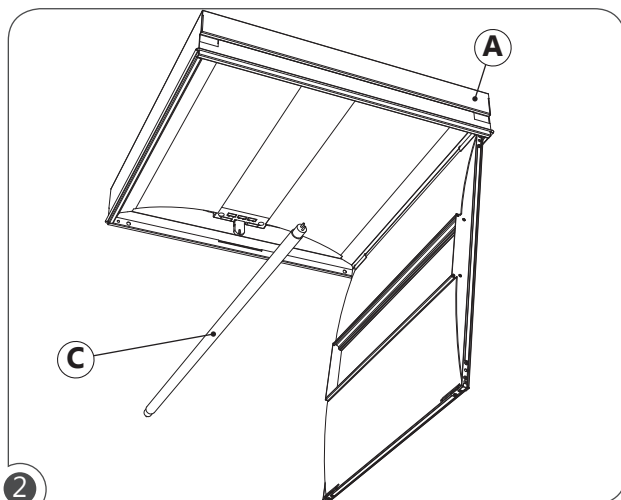

Remove lamps if installed (C) from the master fixture (A).

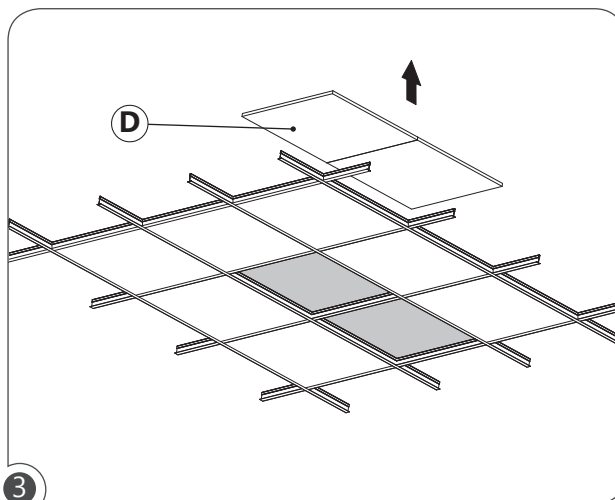

Remove the ceiling tiles (D) where the fixtures will be installed and adjacent tiles for easy access when connecting the wires.

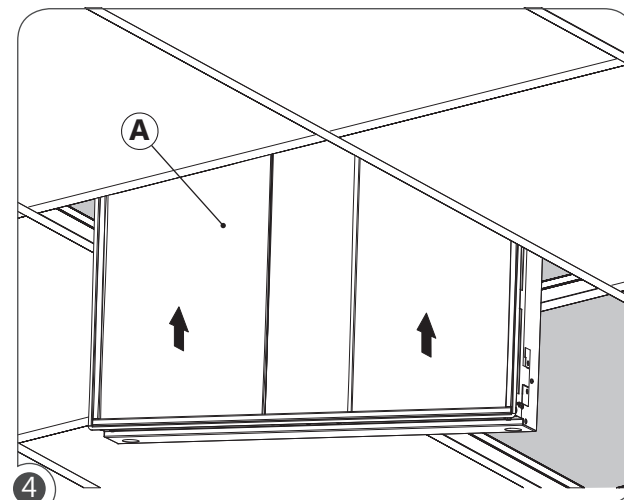

Close the door and insert the master fixture (A) into the ceiling as shown.


WARNING:




RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.




INDIVIDUAL WITH MASTER/SATELLITE INSTALLATION INSTRUCTIONS FOR 2X2, 2X4, 1X4, 1X2

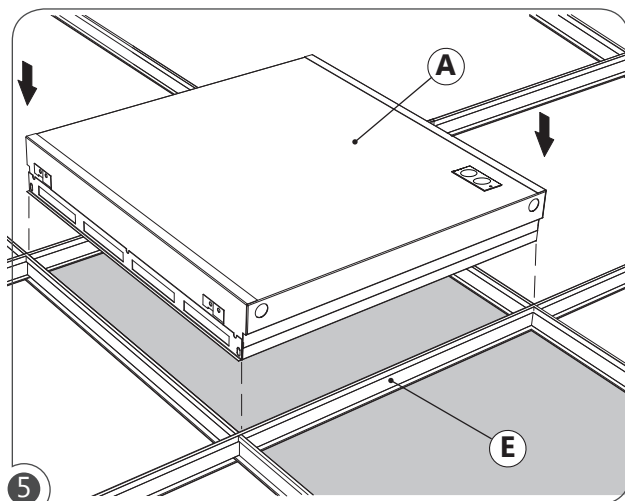


Set the master fixture (A) into the T-bar grid (E).

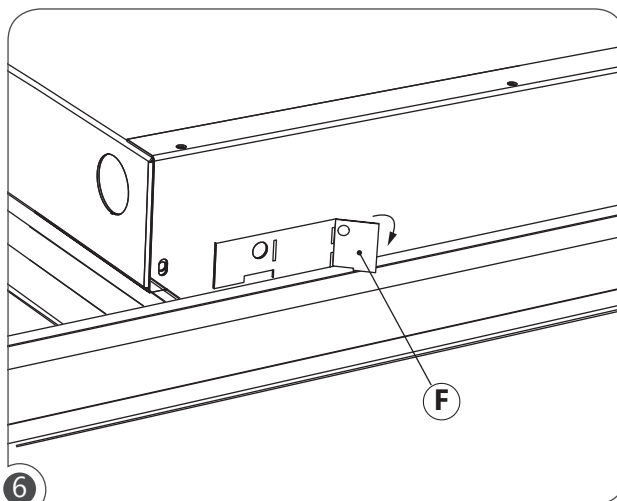


Based on ceiling type (tegular / screw slot T-bar or standard T-bar) bend a security tab (F) on each corner of the fixture to provide support. (SEE T-BAR STYLE MOUNTING Pg1).

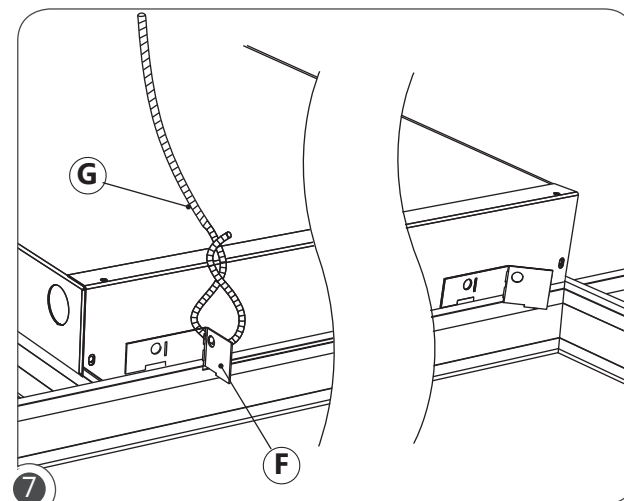


For additional safety a security wire (G) can be attached from the security tabs (F) to the structure above.

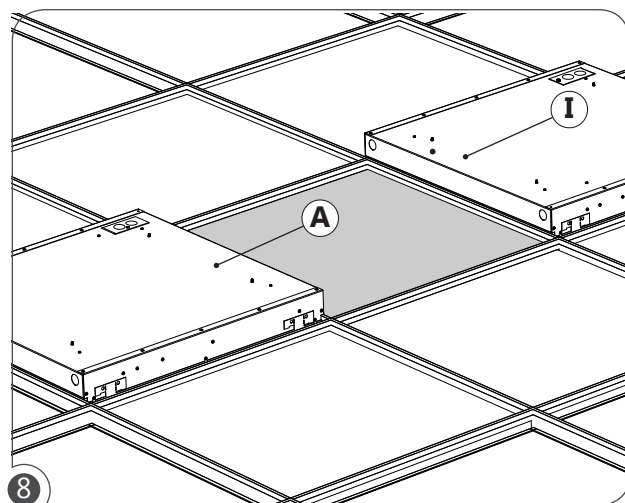

Repeat steps 1 through 7 to install the satellite fixture (I) adjacent to the master fixture (A).

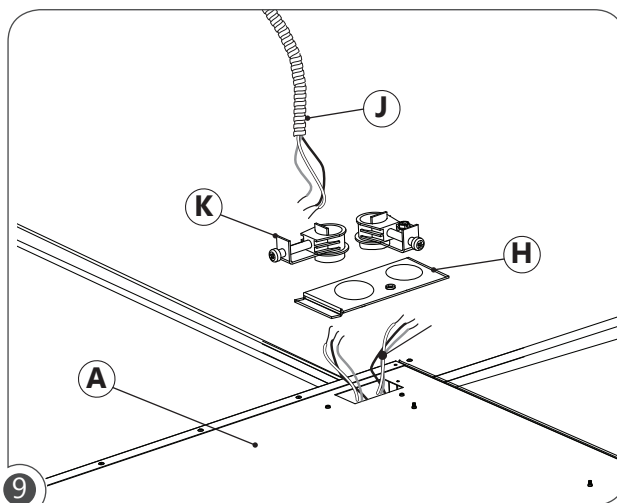


Remove knockout plate (H) from the top of the master fixture (A) and install BX connector (K) through the knockout plate (H). Insert the power feed BX cable (J) into BX connector, and fasten BX cable to BX connector by tightening screw.

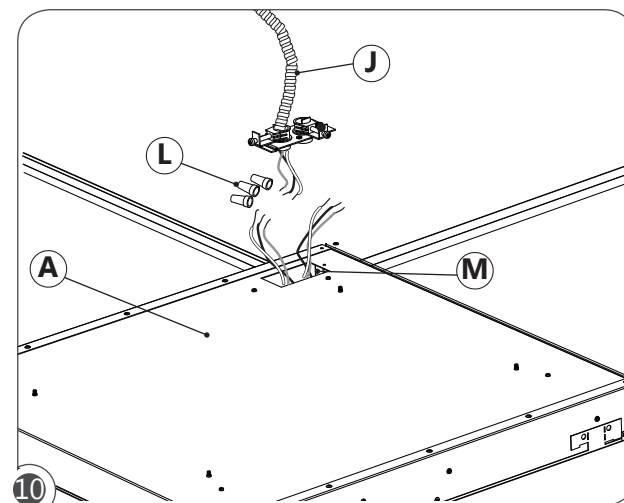


Connect wires from BX cable (J) to wires on ballast (M) by using wire nuts (L). Ensure connections comply with local and national electrical codes.


INDIVIDUAL WITH MASTER/SATELLITE INSTALLATION INSTRUCTIONS FOR 2X2, 2X4, 1X4, 1X2

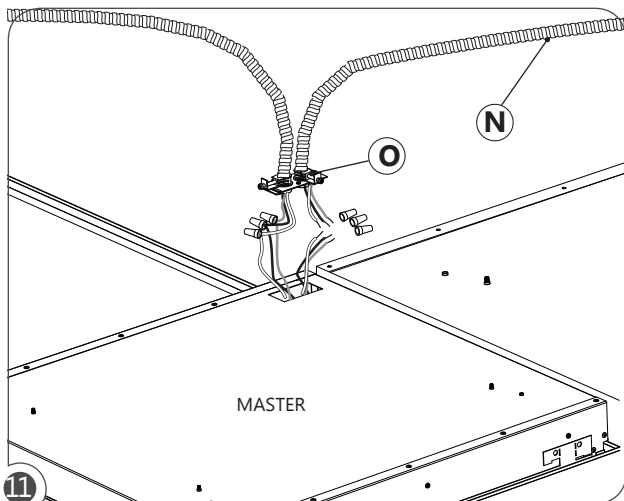


11 Insert satellite BX cable (N) into BX connector (O) and fasten by tightening screw. Connect satellite BX cable (N) wires to wires labeled for satellite inside the fixture.

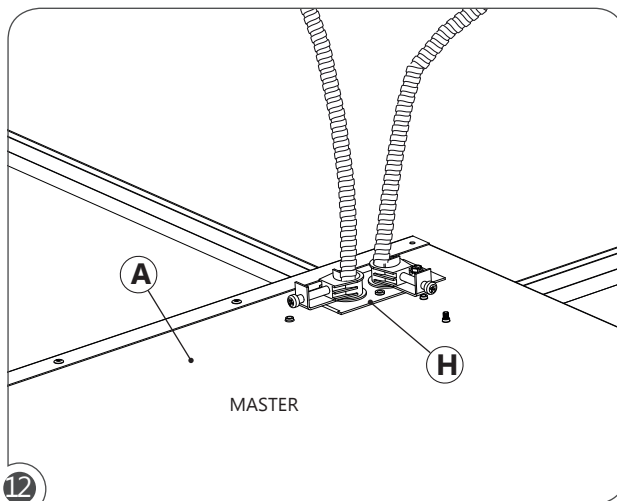


12 Push connected wires and wire nuts into master fixture (A). Reinstall knockout plate (H) onto fixture by hooking tab into hole, and refastening screw to knockout plate and housing.

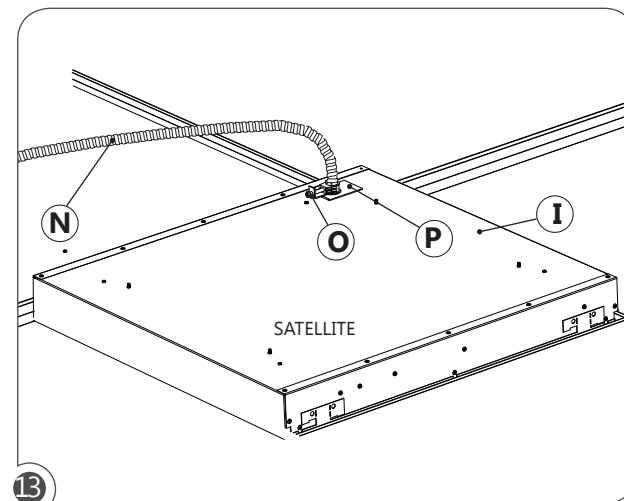

13 Remove knockout plate (P) from satellite fixture (I), and connect satellite BX cable (N) to satellite BX connector (O). Connect satellite BX cable wires to wires in satellite fixture. Reinstall knockout plate (P) on satellite fixture (I).

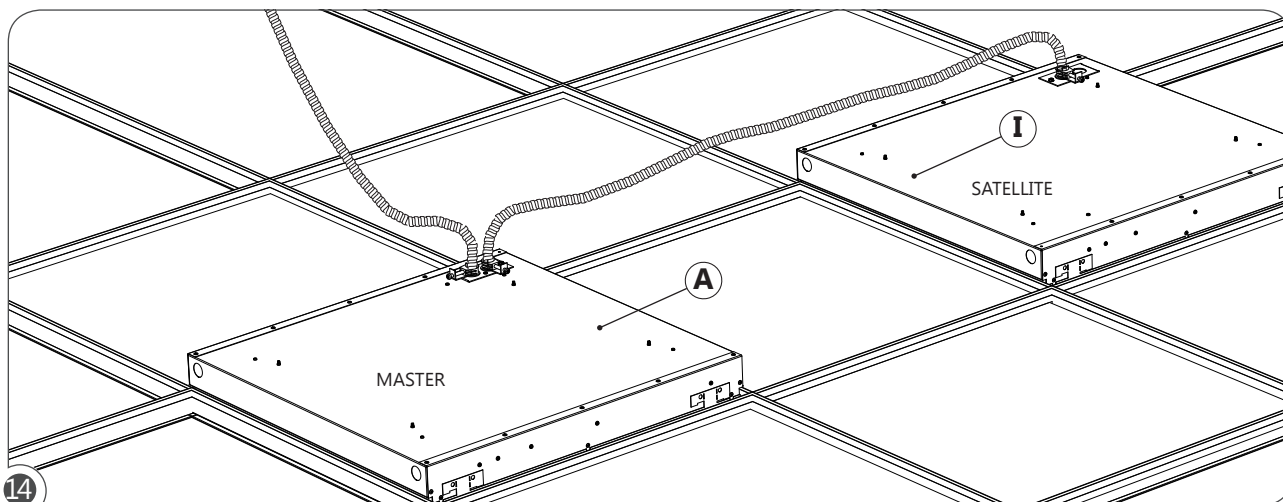

14 Make sure that proper alignment is maintained and all fixtures are correctly oriented in relation to other fixtures.

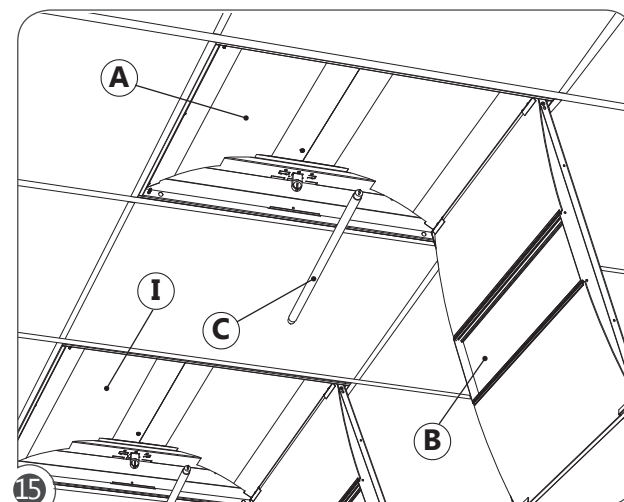

15 For both master fixture (A) and satellite fixture (I) reinstall lamps (C). Close the center door (B). Power to the fixtures can now be safely turned on. Re-install the remaining tiles to close the ceiling.