



SURFACE MOUNT INSTALLATION INSTRUCTIONS

NOTE: THE JUNCTION BOXES MUST BE SOLIDLY FIXED INTO THE CEILING BEFORE PROCEEDING WITH THE INSTALLATION.


● PART LIST

A Lens	H Washer (by others)
B Lamps (by others)	I Nuts (by others)
C Ballast cover	J Fixture 2
D Fixture 1	K Quick wire connection
E Junction box (by others)	L Aligner
F Wire nuts	M #8-32 Flat head screws
G Threaded stud (by others)	N Joiner



● ANCHOR POSITIONS

Refer to anchor positioning template on pages 3-5.


● END VIEW

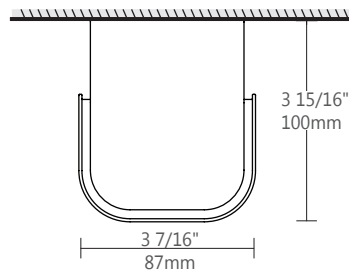


● MOUNTING POINTS

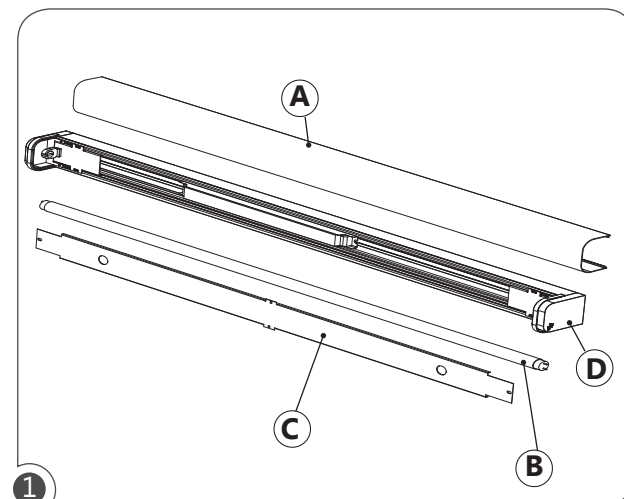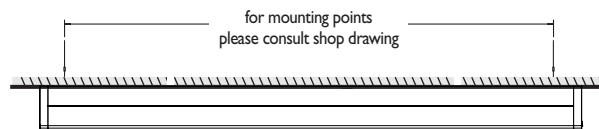


1 Ensure that the power to the fixture's circuit is turned off. Remove lens (A) and lamps (B) if installed. Remove the ballast cover (C) from fixture (D).

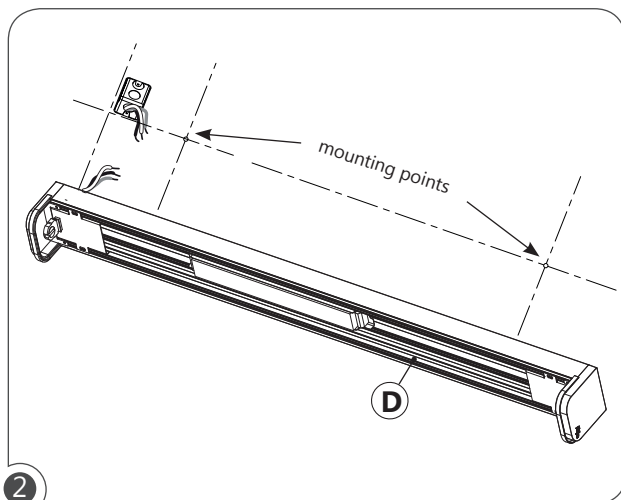

2 Locate the mounting points for the fixture (D) on the ceiling accordingly to Shop Drawing.

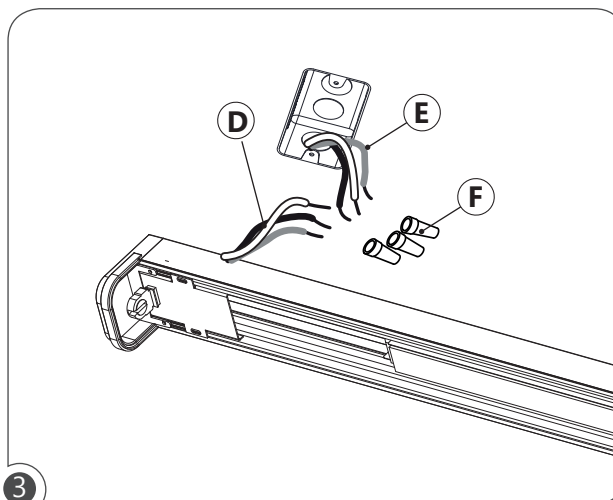

3 Connect wires from junction box (E) with the wires from the fixture (D) using wire nuts (F).

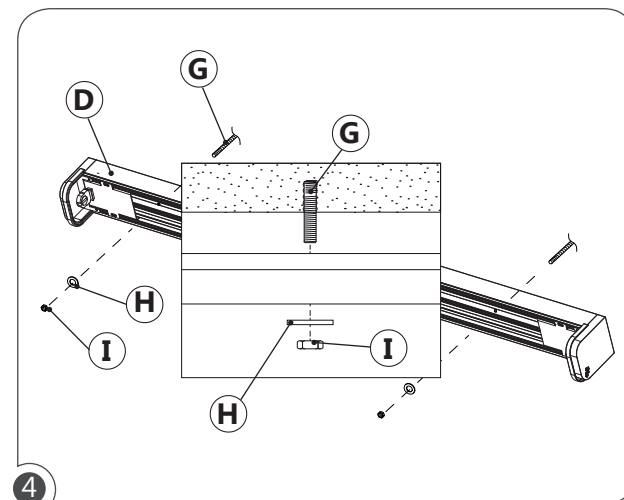

4 Fasten fixture (D) to threaded stud (G) with washer (H) and nuts (I).

FILE NAME:AR.SM.INST

April 1, 2014

ÉCLAIRAGE
axis
LIGHTING

1.800.263.AXIS
[T] 514.948.6272
[F] 514.948.6271
www.axislighting.com

WARNING:




RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.




Product design and development is an ongoing process at Axis Lighting. We reserve the right to change specifications. Contact Axis for the latest product information.


© 2010 Axis Lighting Inc.

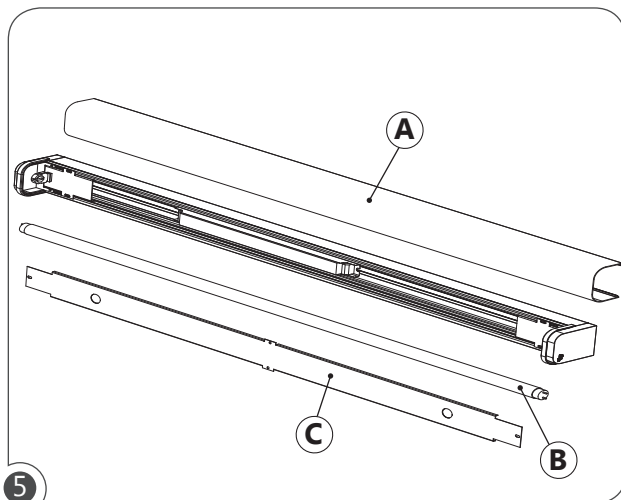


5 Unless a row installation is needed, reinstall ballast cover (C), lamps (B) and lens (A). Power can now be turned on.

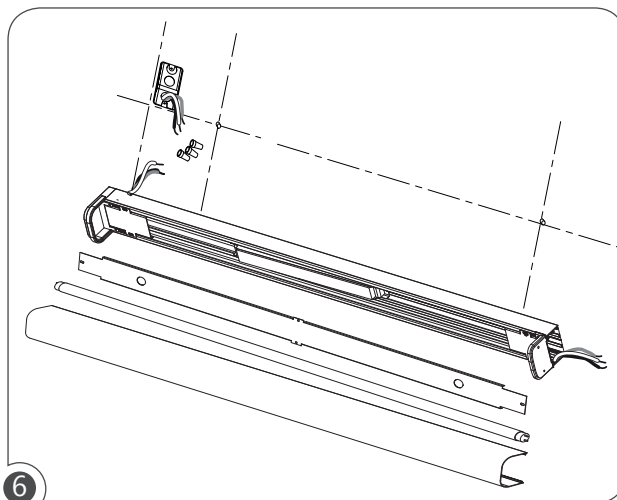


6 **CONTINUOUS ROW:** Repeat steps 1 to 4 for the first fixture in the row. Do not tighten washer and nuts completely until next fixture is connected.
NOTE: In a continuous row make sure you are mounting the last fixtures at least 8" away from the perpendicular wall.

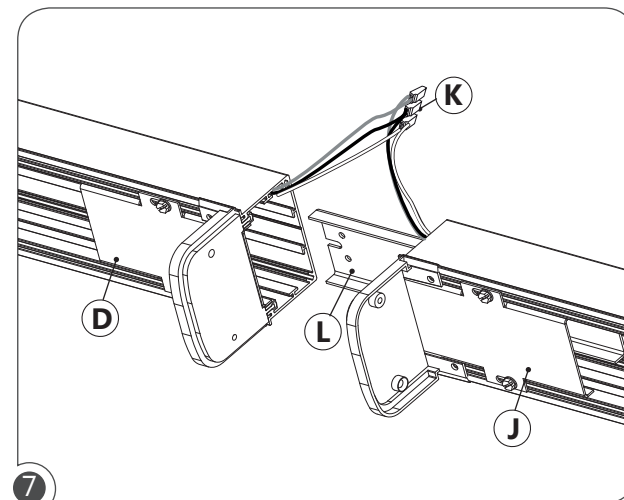


7 Make wire connection with quick-wire connectors (K). Join fixtures (D) and (J) together using the aligners (L).

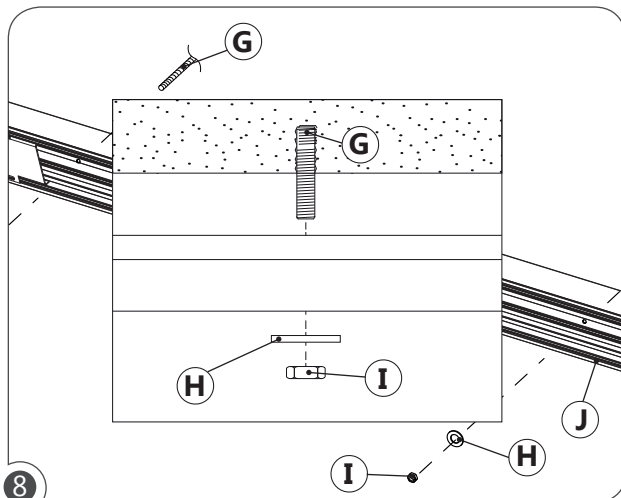

8 Fasten fixture (J) to threaded stud (G). Do not tighten washer (H) and nuts (I) completely until next fixture is connected.

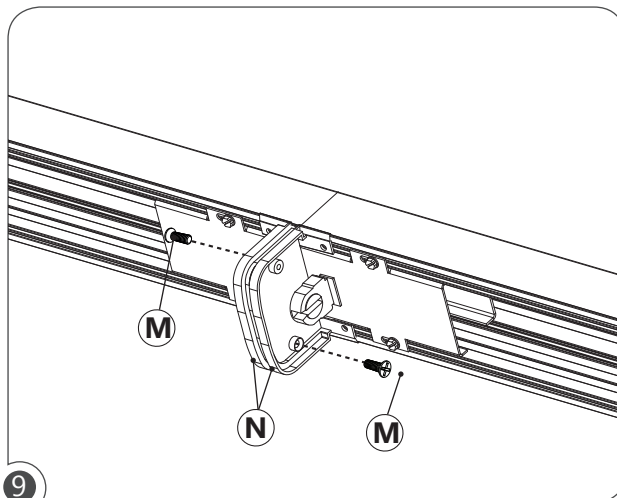

9 Slide fixtures together and screw in two joiners (N) in the middle of the joiners using two #8-32 flat head screws (M) to secure the joiners (N). Ensure the joint is tight and aligned. Repeat steps 7 and 9 for all fixtures on the run.

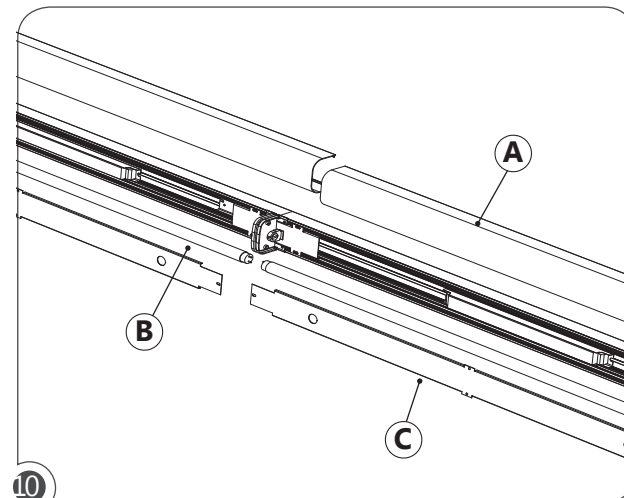

10 Tighten all the washers and nuts completely once all fixtures in the run are installed. Install ballast cover (C), lamps (B) and lens (A). Power can now be turned on.

FILE NAME: AR.SM.INST

April 1, 2014

WARNING:



RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.





Product design and development is an ongoing process at Axis Lighting. We reserve the right to change specifications. Contact Axis for the latest product information.

© 2010 Axis Lighting Inc.

AIR 4' FIXTURE

SURFACE MOUNT INSTALLATION INSTRUCTIONS TEMPLATE FOR HOLES AND POWER FEED


TOP VIEW

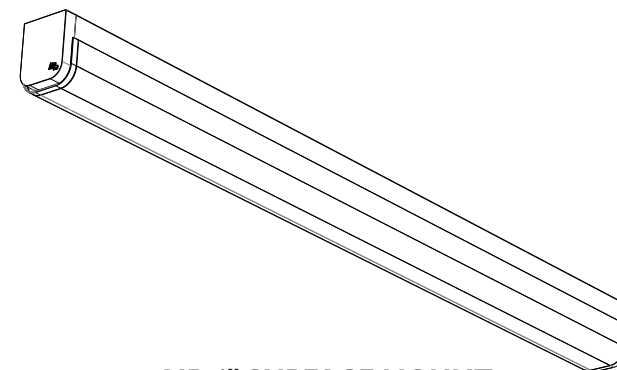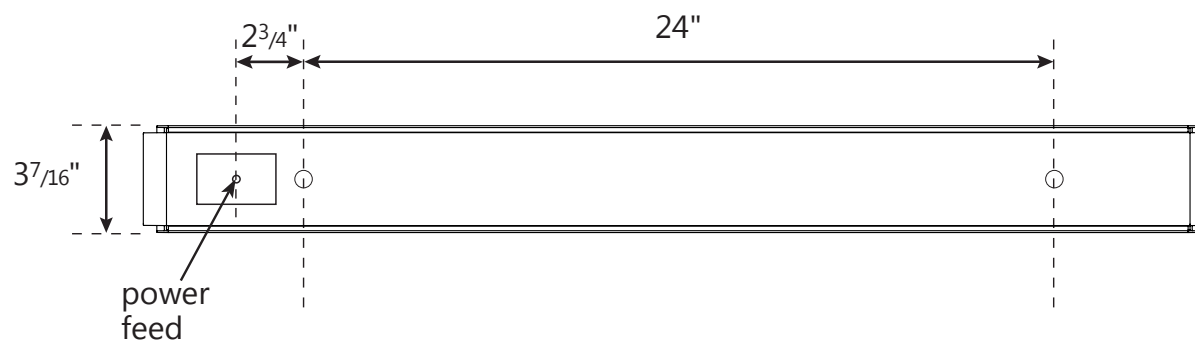

AIR 4" SURFACE MOUNT

AIR 8' FIXTURE

SURFACE MOUNT INSTALLATION INSTRUCTIONS TEMPLATE FOR HOLES AND POWER FEED

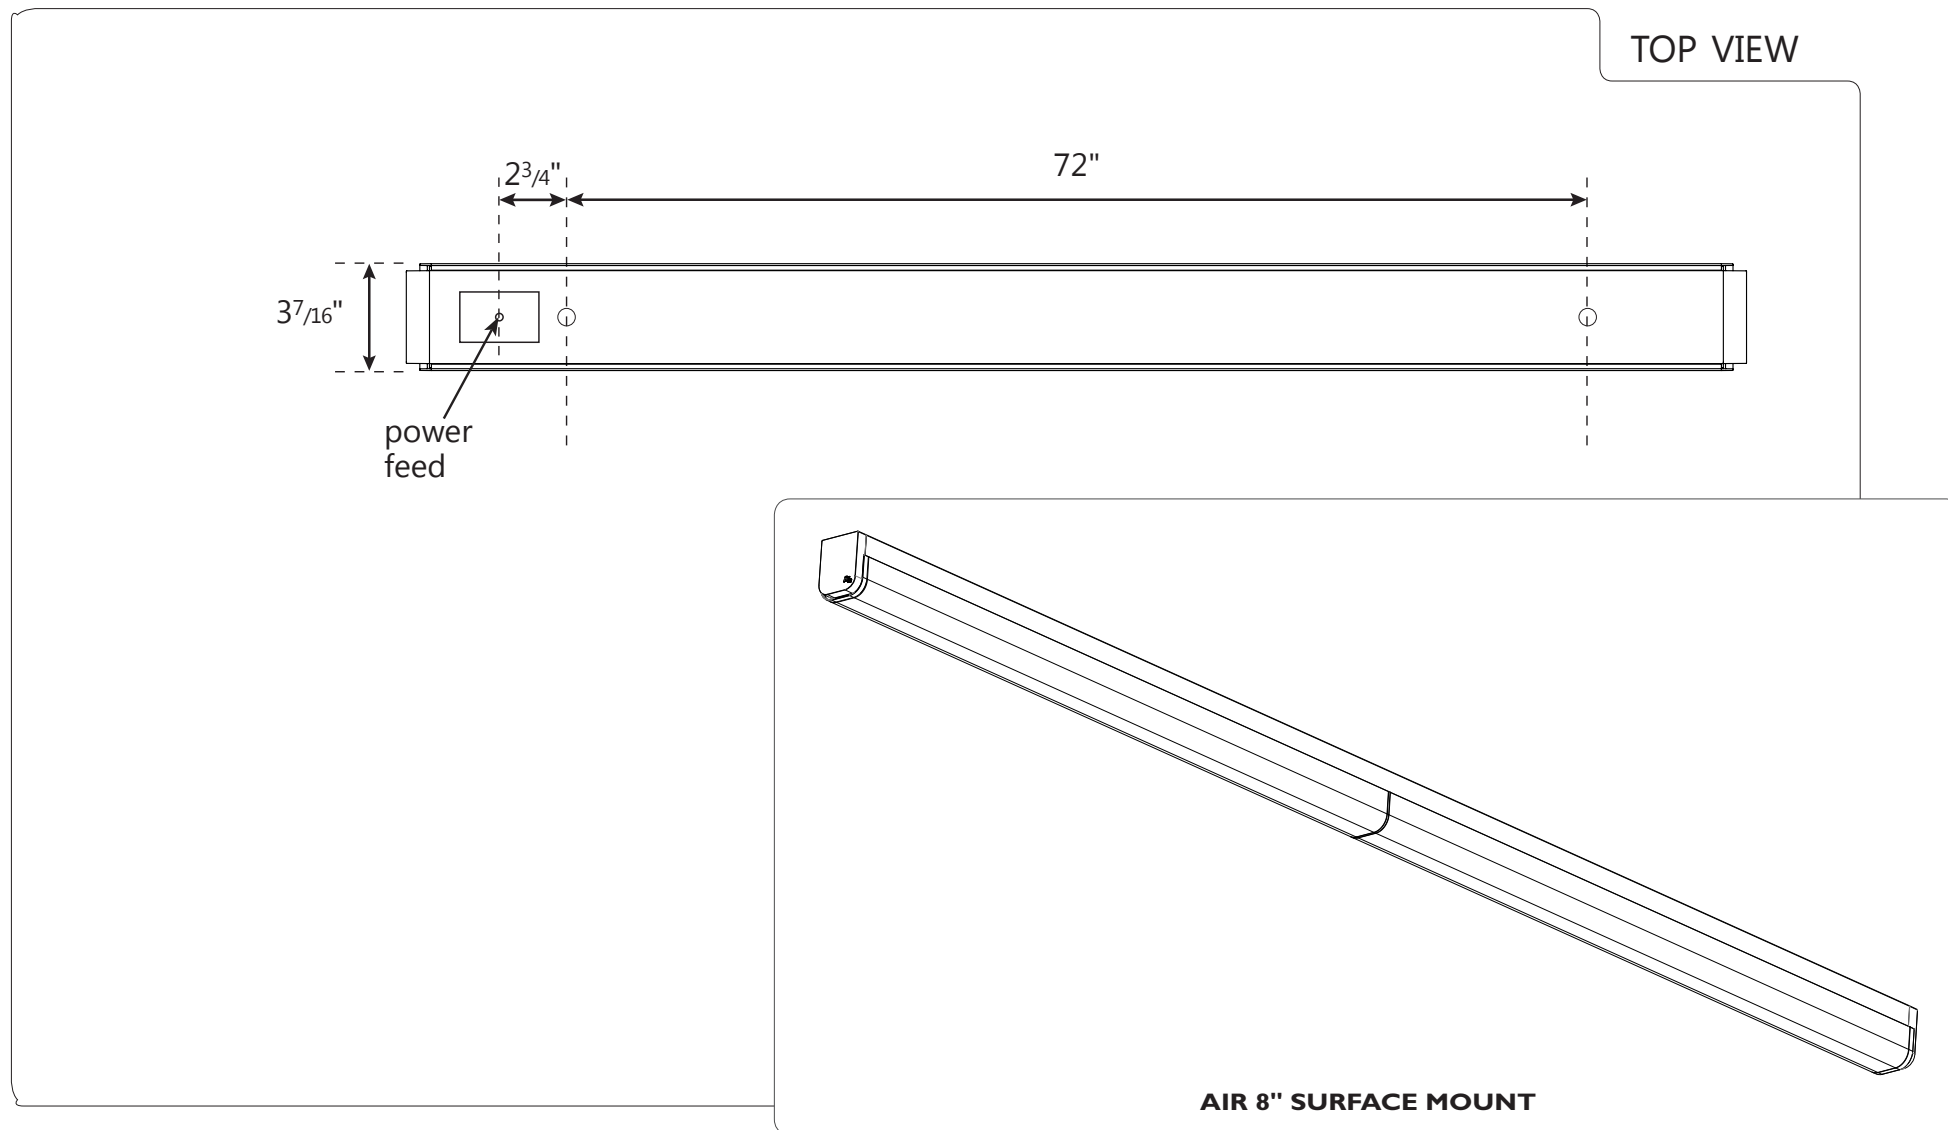



12' FIXTURE

SURFACE MOUNT INSTALLATION INSTRUCTIONS TEMPLATE FOR HOLES AND POWER FEED

