




**NOTE:** Before attempting to verify and replace the ballast, ensure that the power to the fixture's circuit is turned off. Remove lens (A) by unlocking the lens lock. Remove the lamps (B) from the fixture (C).

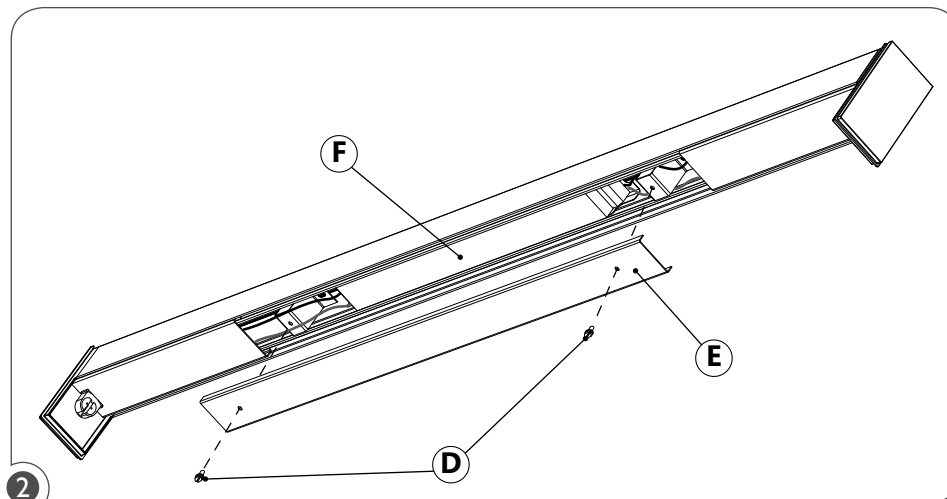

Remove ballast cover retaining screws (D) and remove the cover (E) to reveal the ballast (F).

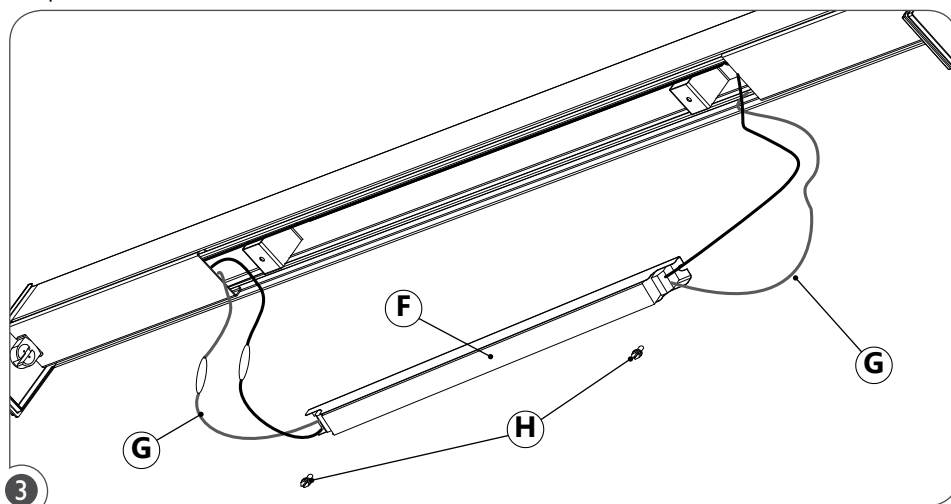

Disconnect wires (G) from the ballast (F). Remove the ballast retaining nuts (H). Replace ballast (F) and reconnect wires (G). Re-install the ballast into place and fasten retaining screws.

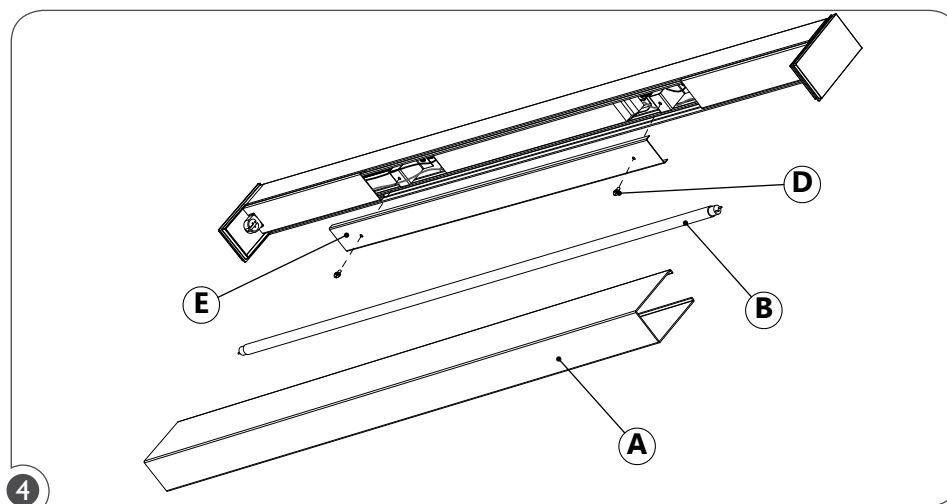

Put the ballast cover (E) back in place and fasten retaining screws (D). Re-install the lamps (B) and lens (A). Lock the lens in place using the lens lock.