 





# ROW CONFIGURATIONS & MOUNTING SPACING FOR RECTANGULAR (R) PENDANT LUMINAIRES

## ● UNIT DESCRIPTION


### INDIVIDUAL SECTION



### SECTIONS IN A CONTINUOUS ROW

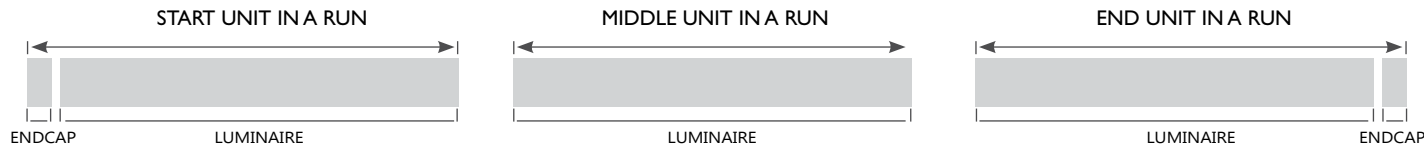

## ● LUMINAIRE LENGTHS AND ENDCAPS

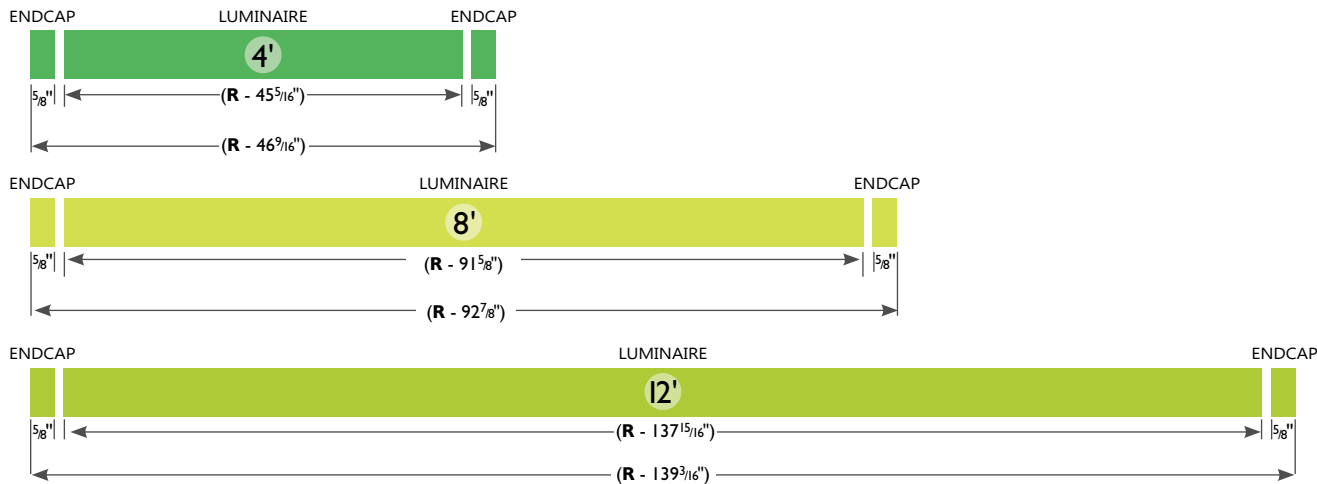


**WARNING:** RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.





# T5/T5HO - ROW CONFIGURATIONS & MOUNTING SPACING FOR RECTANGULAR (R) PENDANT LUMINAIRES

## ● ROW CONFIGURATIONS - MOUNTING SPACING

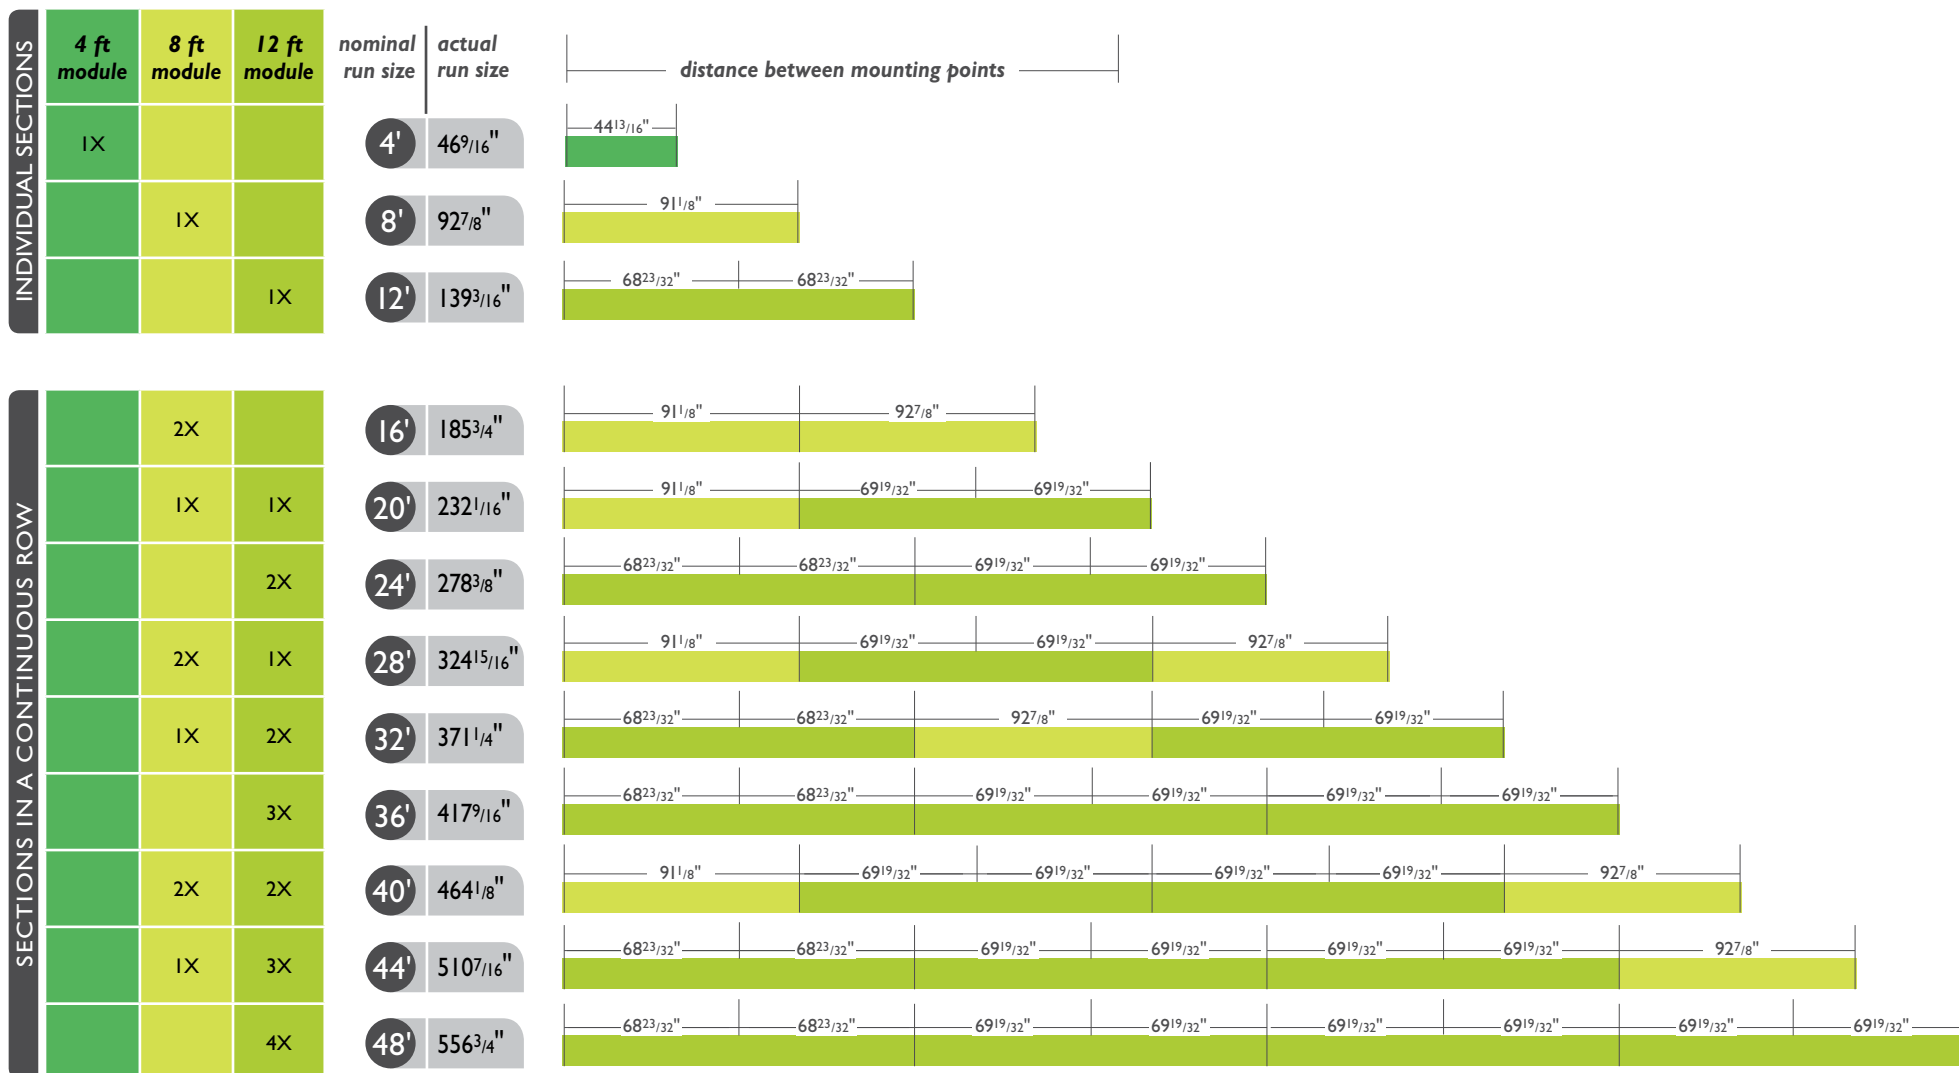

**WARNING:** RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

