




**NOTE:** Ensure that the power to the fixture's circuit is turned off before attempting to verify and replace the ballast. Remove lens (C), and the lamp (B) if installed from the fixture (A).

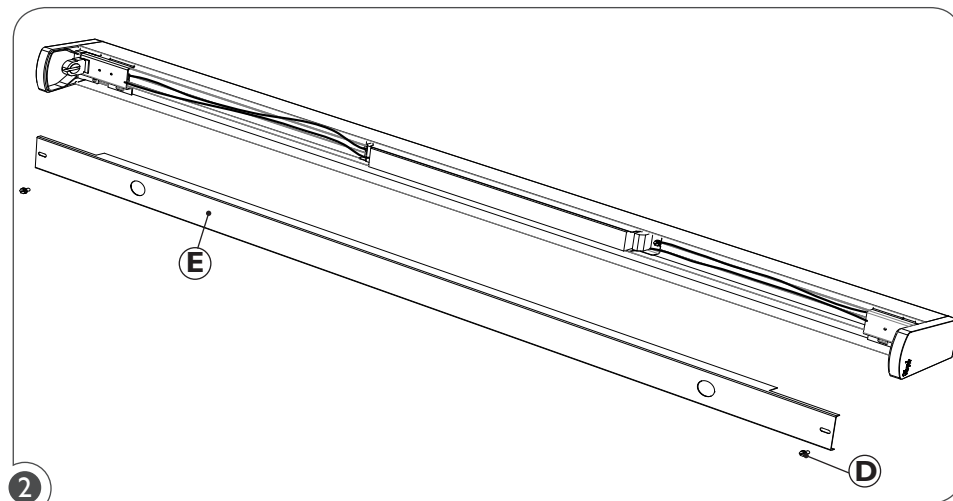

Unscrew the ballast cover retaining screws (D) and remove the ballast cover (E).

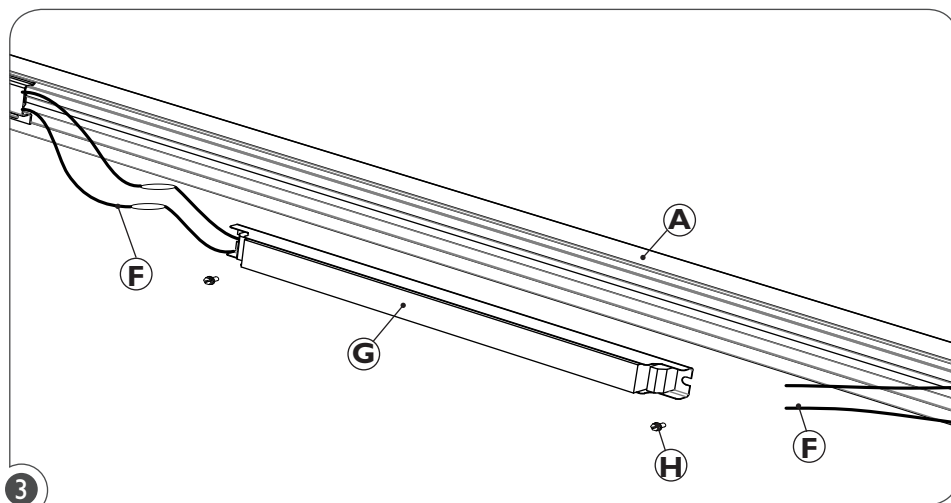

Disconnect the power wires (F) from the ballast (G). Unscrew nuts (H) and disconnect ballast (G) from fixture (A). Replace ballast (G) and reconnect to fixture (A).

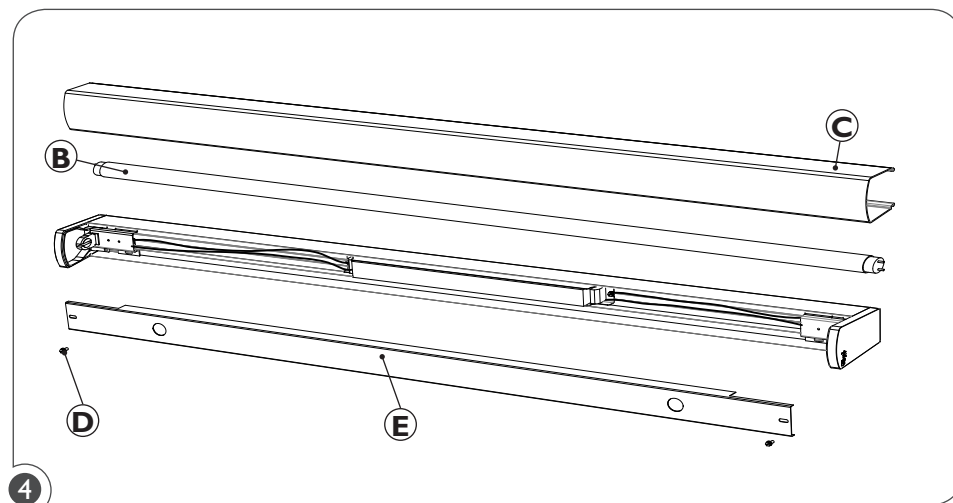

Put the ballast cover (E) back in place and fasten retaining screws (D). Re-install the lamp (B) and lens (C).



**WARNING:** RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

