
Answer[®] Locking Skin

Steelcase

If you have a problem, question, or request, call your local dealer, or Steelcase Line 1 at 888.STEELCASE (888.783.3522) for immediate action by people who want to help you.

(Outside the U.S.A., Canada, Mexico, Puerto Rico, and the U.S. Virgin Islands, call: 1.616.247.2500) Or visit our website: www.steelcase.com


© 2001 Steelcase Inc. Grand Rapids, MI 49501 U.S.A. Printed in U.S.A.

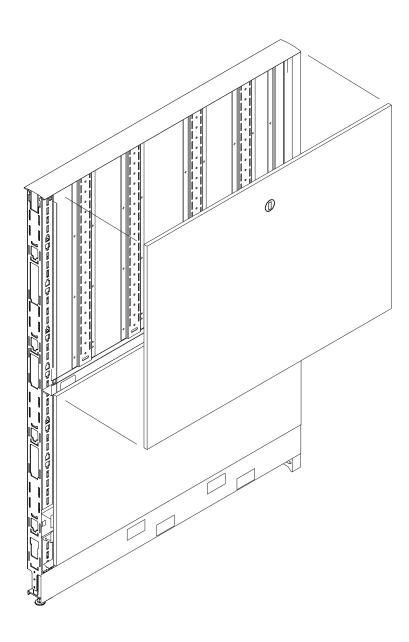

Steelcase


Step 1: Remove panel skin.

Step 2: Insert mounting bracket into vertical junction.

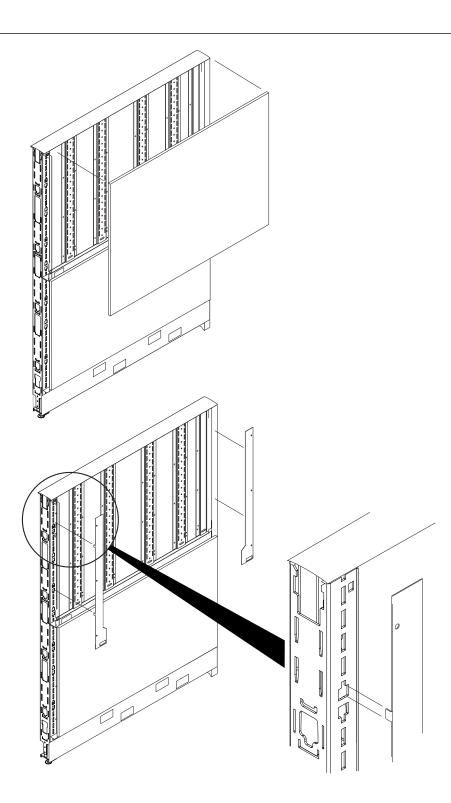

Steelcase

Step 3: Drill holes (9/64" drill bit) and install rivets.

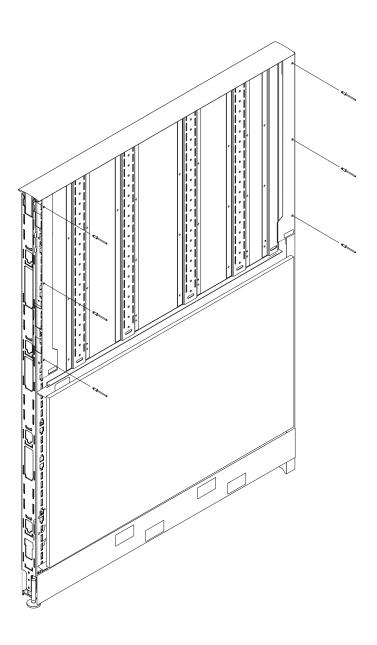

Steelcase

Step 4: Hook door tabs into bracket slots. Center door within panel and lock in place.

