

Lock Core Installation

Tools Required

- None

Package Contents

- Lock Core/Key
(key may be either rectangular or round head)

Installation

1. The key is pre-inserted into the lock core. Do not remove the key prior to lock core installation. (Figure A).
2. Prior to inserting the lock core/key be sure that the lock tenon on the end of the lock core is aligned with the cutout at the back of the drawer/door lock housing. (Figure B).
3. To install the lock core, angle the core slightly so that the raised wafer (Figure B) can be inserted into the lock housing. When the wafer is inside the housing, straighten the core and push in firmly to fully seat the core in the lock housing. (Figure C).
4. The lock core will only seat properly when the lock tenon and housing cutout are correctly aligned. You will not be able to remove the key if the core is not fully engaged and properly seated in the housing. (Figure D).

Note: Future removal of lock cores require a yellow Change Key, ordered separately.

Figure C

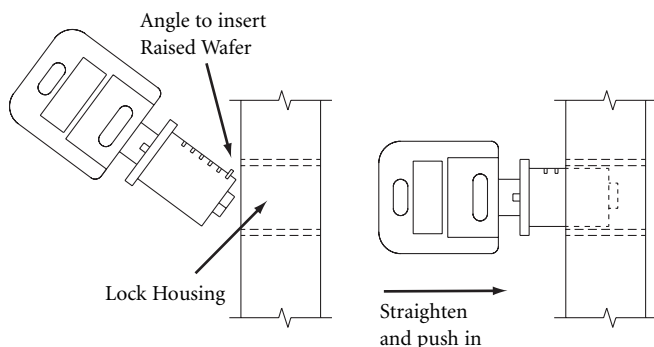


Figure A

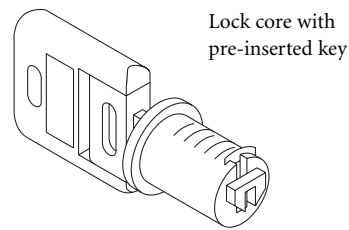


Figure B

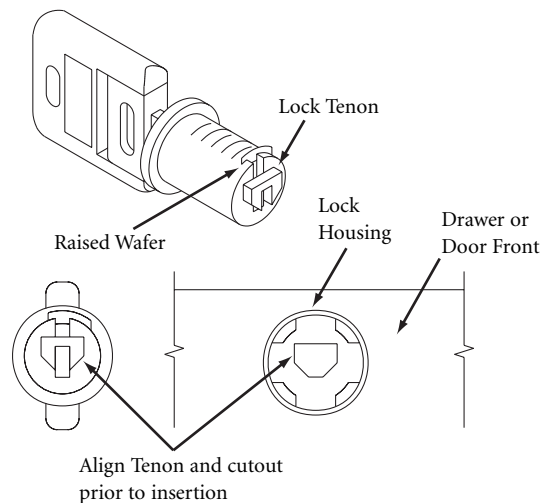


Figure D

