

Assembly Instructions ■

All Terrain® Markerboard Cart Screens

April 2015

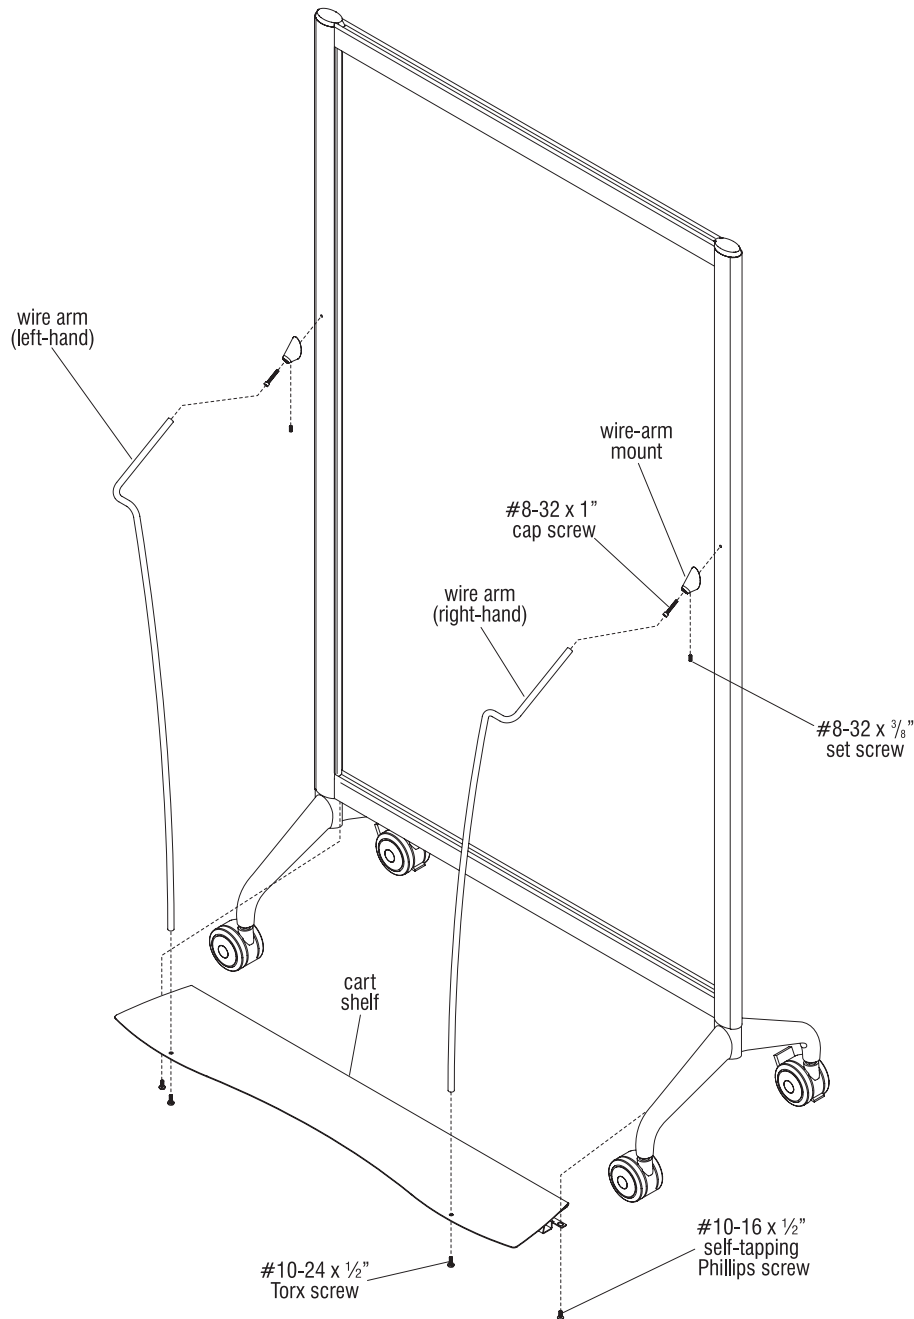


Figure 1



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

Shelf to Screen Assembly

1. Carefully remove contents from packaging and assemble legs to frame per other instructions supplied.

Note: The Figure 1 illustration shows screen in the upright position, but laying the screen back flat for assembly is easier. Take care when tipping the screen flat and rest it on a soft protective surface to avoid damage.

2. One side at a time, position a wire-arm mount over the pre-drilled hole in the vertical frame as illustrated and secure the mount to the frame using a #8-32 x 1" cap screw (Figure 1).
3. Position the cart shelf centered onto the frame, with mounting bracket under the frame. Secure the shelf to the frame using two #10-16 x 1/2" self-tapping Phillips screws through the shelf mounting bracket into the underside of the frame (Figure 1).
4. One wire arm at a time, inset the top of the wire arm into the wire-arm mount, then align the bottom mounting hole in the wire arm with the appropriate mounting hole in the cart shelf. Insert and tighten one #10-24 x 1/2" Torx screw up into the wire arm and tighten. Repeat for wire arm at opposite side (Figure 1).
5. At the top of each wire arm, insert a #8-32 x 3/8" set screw and tighten (Figure 1).

