


Parts Diagram

Altus[®] Seating
Conference Task Armchair

February 2019

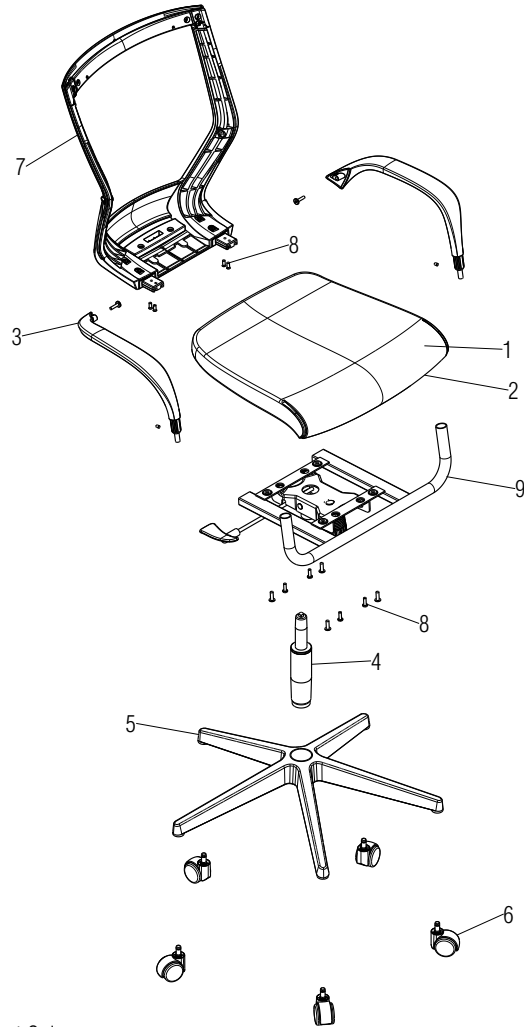

.XX = Select Color
Arms sold as full set only. Not sold individually.

Item	Part Number	Item Description	Req Qty
1	ALTSC	Slip Cover, Altus Fabric Seat Replacement	1
2	ALTRC	Cushion, Altus Fabric Seat Replacement	1
3	ALTC.LA.SET	Set, Right & Left Loop Arm (includes hardware)	1
4	15.1115.R2	Cylinder, Non-Auto Return Gas	1
	15.1116	Cylinder, Auto Return Gas	1
5	08.0080.BL	Base, Black Nylon Mountain	1
	08.0080.P	Base, Aluminum Mountain	1
6	09.0460.BL	Caster, Altus 50mm Soft Wheel Caster (hard floor)	5
	09.0465.BL	Caster, Altus 50mm Hard Wheel Caster (carpet)	5
7	ALTC.BACK.MXX	Assembly, T50 Task Chair Back	1
	ALTC.BACK	Assembly, Black T50 Task Chair Back (black)	1
8	ALTC.HDWE	Hardware Kit, Seat/Back/Cushion	1
9	ALTC.MECH	Mechanism, Seat	1

