


# Disassembly Instructions

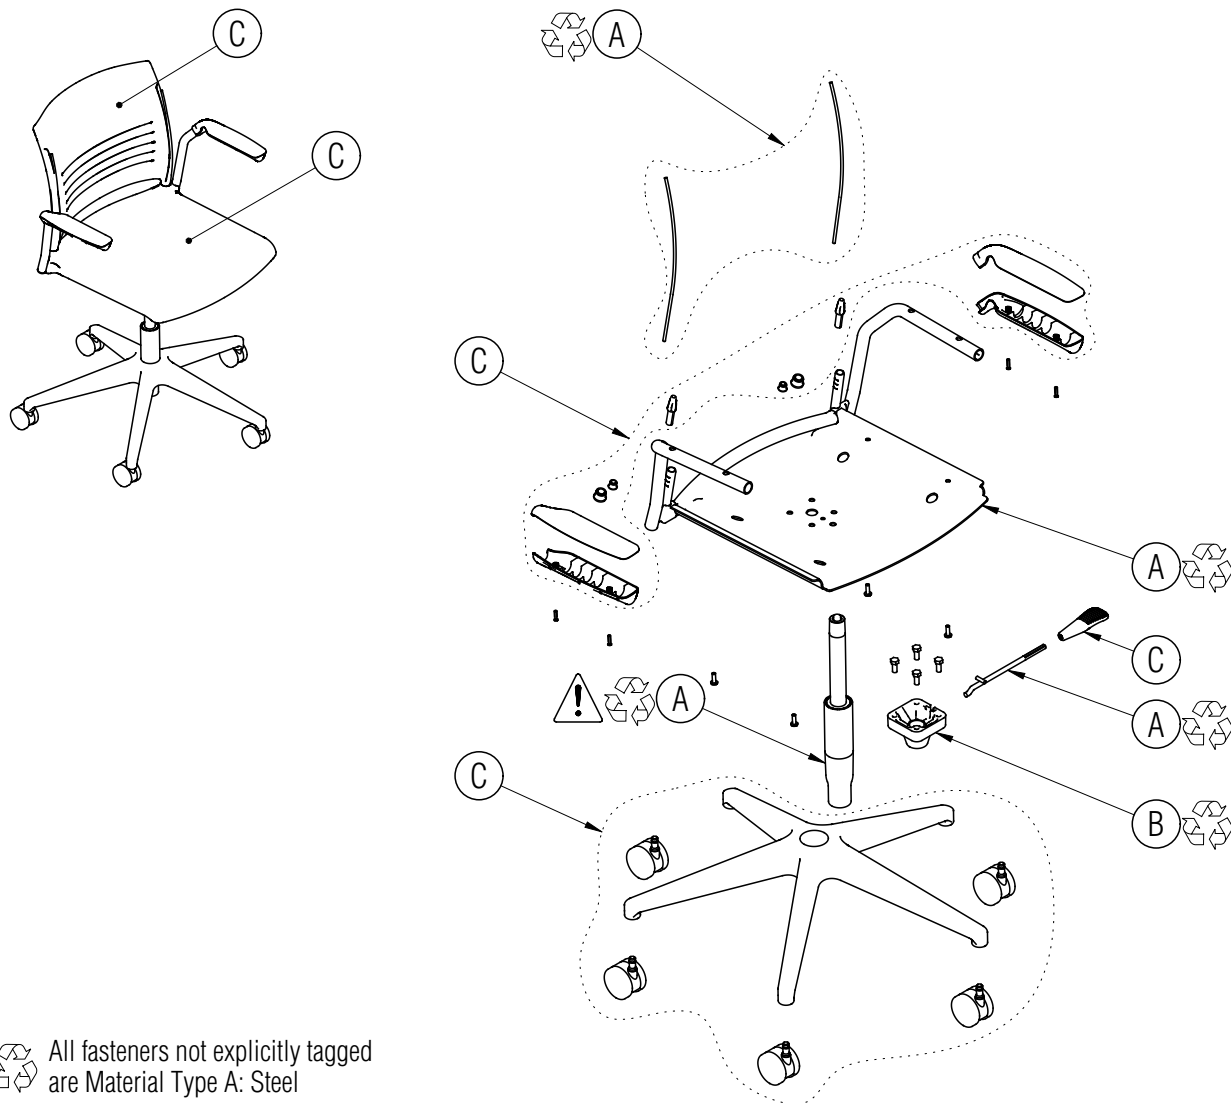

Strive Task Chair

Material Type: A. Steel B. Aluminum C. Plastic



Procedure:

1. Knock the backrest upwards off the chair frame from underneath. Pull out the backrest springs and the spring bushings.
2. Remove the screws holding the seat to the seat pan and remove the seat.
3. Remove the screws holding each arm cap to the chair frame and remove the arm caps. Pry out the plugs from underneath the chair frame.
4. Knock the seat pan off of the gas cylinder from underneath to remove it.
5. Remove the screws holding the height adjustment mechanism onto the seat pan. Pull out the height adjustment lever and pull off the paddle.
6. Knock the gas cylinder out of the chair base from underneath.

**WARNING: CONTENTS UNDER PRESSURE!  
REMOVE WITH CAUTION.**

7. Remove the casters from the chair base.

General Notes:

1. Disassembly time: 15-20 minutes
2. This procedure assumes basic familiarity with hand tools and furniture terminology: no specialized training is required
3. All materials removed and disassembled shall be sorted and segregated with like materials and disposed of or recycled according to recycling availability or waste acceptance
4. For items to be recycled, refer to KI's End of Life Recycling Matrix and KI's End of Life Recovery Options Matrix, available at [www.ki.com](http://www.ki.com)

All fasteners not explicitly tagged are Material Type A: Steel

Required Tools									
	Gloves	Safety Glasses	Phillips Screwdriver	Torx Screwdriver	Flat Screwdriver	Hex Socket Wrench	Channel Lock Pliers	Pry Bar	Rubber Mallet