


# User Guide ■

## Toggle® Adjustable Tables

Deluxe Switch

June 2013

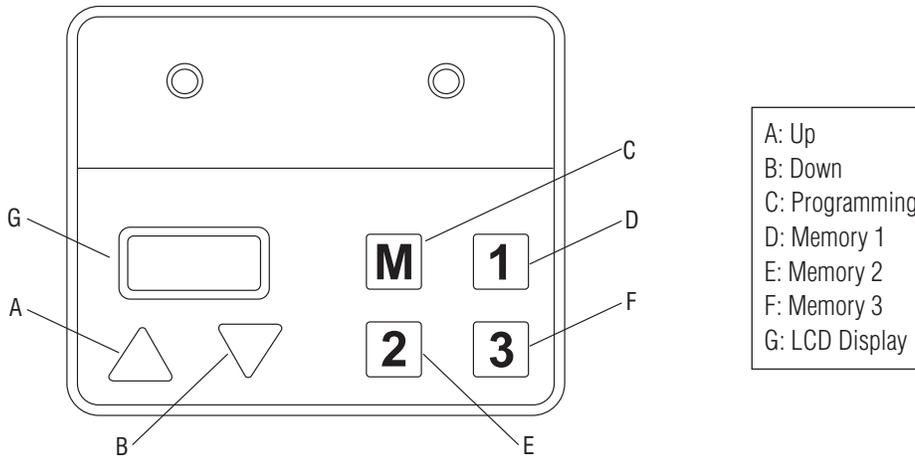

### General Introduction

Press up/down buttons and the table will adjust up and down throughout the height range. The display will show an approximate height (inches) from the floor to the top of the table surface.

### Zero Setting

Press and hold both the "Up" and "Down" buttons for approximately five to ten seconds, the table will begin to move down. Continue to hold both buttons until the table moves to its lowest factory position (26"). The table is now zero set.

### Standard Table Limits

The table comes preset from the factory with upper and lower limits at maximum (51") and minimum (26") table heights

**Warning:** Zero setting of the table will always bring the table to its lowest factory limit (26"). Be sure to remove items from under the table that may cause interference with the table understructure before performing a zero setting operation.

### Memory Settings

You may choose to program your Deluxe Switch for three preferred memory positions.

1. Press and release either the up or down button on the control pad to activate the display.
2. Press and hold the "M" button approximately two seconds until you hear a repetitive "Beeping". Press and hold the "M" button again approximately two seconds until you hear a constant "Bee" tone, you are now in the memory function setting mode.

**Memory 1:** Adjust the table to your first desired position, then press and hold the "1" button for two seconds and the tone will change to a short repetitive "Beeping" until you release the "1" button. The first memory setting is now set.

**Memory 2:** Adjust the table to your second desired position, then press and hold the "2" button for two seconds and the tone will change to a short repetitive "Beeping" until you release the "2" button. The second memory setting is now set.

**Memory 3:** Adjust the table to your third desired position, then press and hold the "3" button for two seconds and the tone will change to a short repetitive "Beeping" until you release the "3" button. The third memory setting is now set.

**Exiting the Memory Setting Mode:** Press and hold the "M" button for approximately two seconds until the "Bee" tone has stopped. You have now completed programming your memory settings.

- To use your programmed memory settings, press and hold the desired button (1, 2, or 3) the table will move to its stored memory position and stop.