



On Board Tool

- 1 Remove column cap from top of column (1a). Remove the supplied Allen wrench (1b).

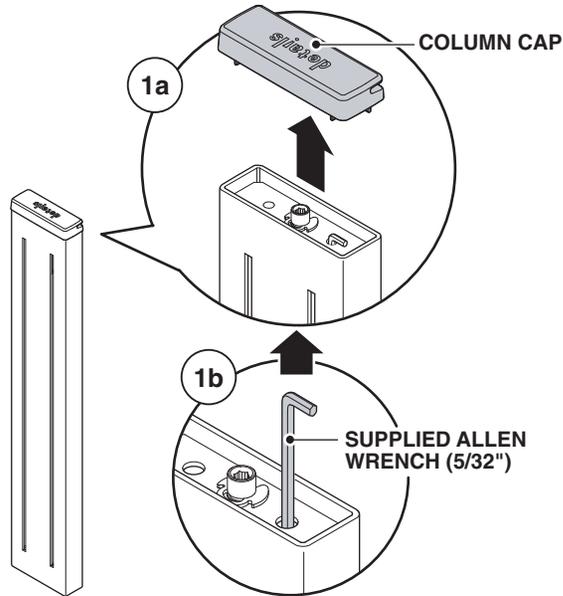

Feather Touch Tilt Adjustment


- 1 The focal adjustment handle may need to be moved upward now that your monitor is installed. Locate the adjustment screw on the monitor mount bracket assembly and adjust feather touch tilt to easily move but stay in position throughout its tilt range. Tilt monitor back 90 degrees.

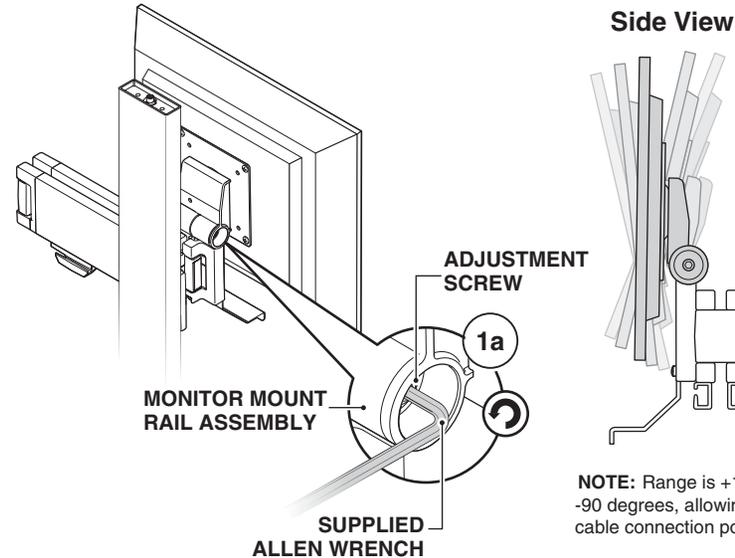

NOTE: Range is +10 degrees and -90 degrees, allowing access to cable connection points.

Handle Height Adjustment

- 1 The focal adjustment handle may need to be moved downward depending on your monitor size. Locate the two (2) adjustment screws located on the focal adjustment handle and loosen (1a). Pull focal adjustment handle downward to temporarily move the bracket out of the way (1b).

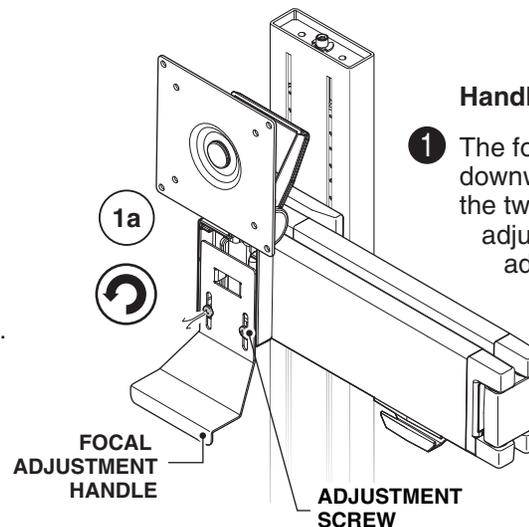

Tilt the monitor back to -90° to allow access to the screws to retighten after finding the portion that leaves the handle close to the monitor without interference.

If you have a problem, question, or request, call your local dealer, or Steelcase Line 1 at **888.STEELCASE** (888.783.3522) for immediate action by people who want to help you.


(Outside the U.S.A., Canada, Mexico, Puerto Rico, and the U.S. Virgin Islands, call: 1.616.247.2500) Or visit our website: www.steelcase.com

© 2015 Steelcase Inc.
Grand Rapids, MI 49501
U.S.A.

Printed in U.S.A.


Monitor Height Adjustment

- 1 To adjust the height of the monitor, locate the adjustment nut located on the bottom of the column. Using the supplied Allen wrench or by using a 5/32" hex bit, turn the adjustment nut right or left (1a) to make the monitor go up or down (1b).

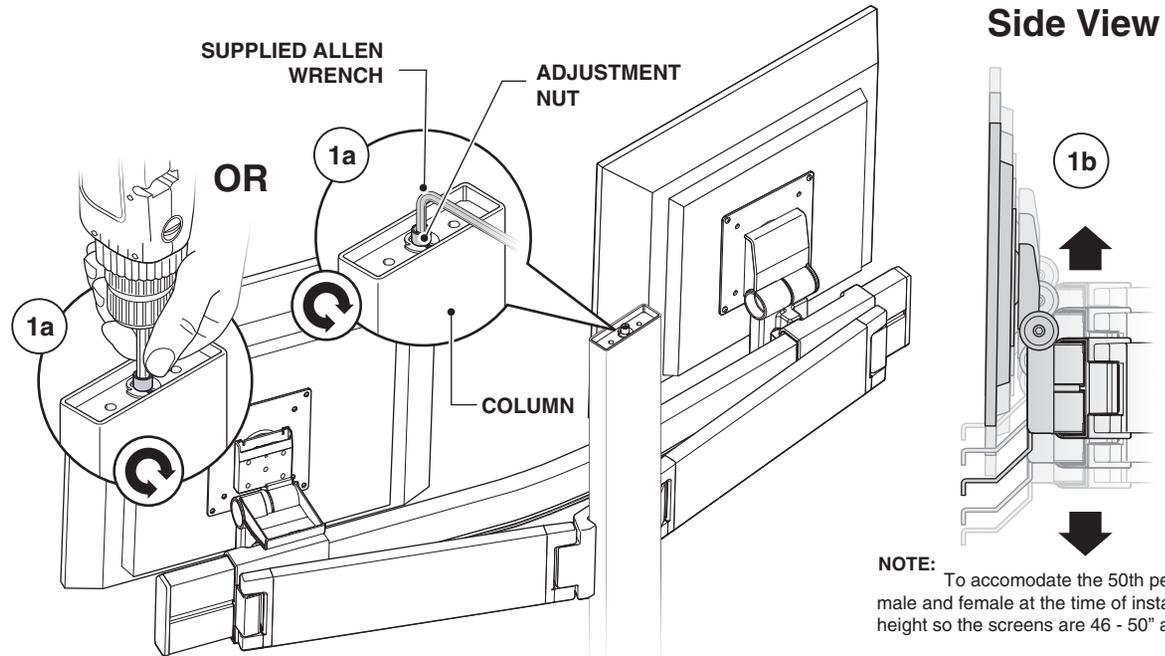

Bar Pivot Friction Adjustment

- 1 Adjust screws at bottom pivot joints with the provided wrench. Friction should be low enough to allow smooth operation, but also provide enough motion resistance to prevent undesired movement.

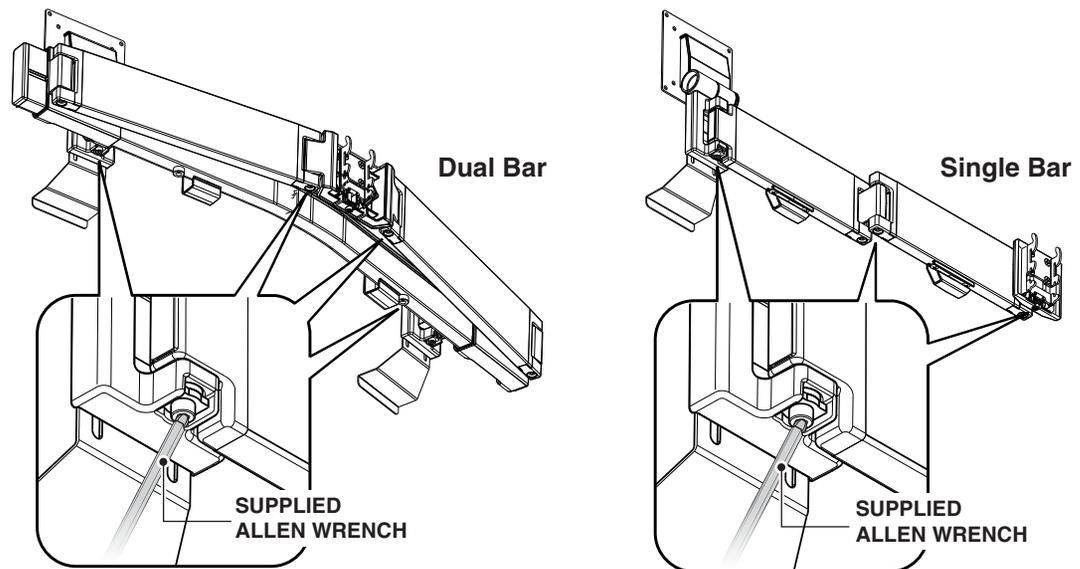

Cable Routing

1 With monitor tilted back 90 degrees, install all necessary cables into monitor. Once all cables are attached to monitor, tilt monitor back to original position.

2 Route monitor cables as shown by placing them into the wire managers located on the bottom of the arms (2a).

On Bar-over-Bar applications, cable managers for the column are provided (2b).

