 





SINGLE DIRECT MOUNT



SINGLE BAR

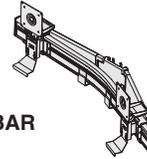



DUAL BAR FOCAL ADJUSTMENT

## Static Bar Mounting, Dual and Triple Non-Focal Adjustment



- 1 Determine in advance where you want to position your monitor.

Align teeth of monitor mount bracket assembly with slots located in the column (1a). Angle the teeth into the slots (1b) and swing monitor mount bracket assembly inward (1c). With teeth engaged in slots, press downward onto the monitor mount rail assembly (1d).

*Note: Dual Focal Adjustable shown here. Other applications are similar.*

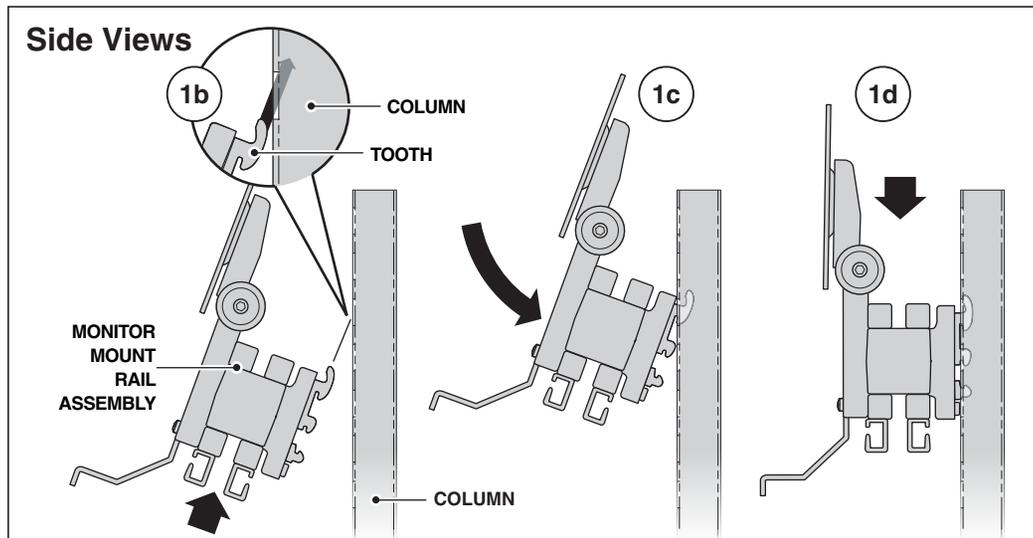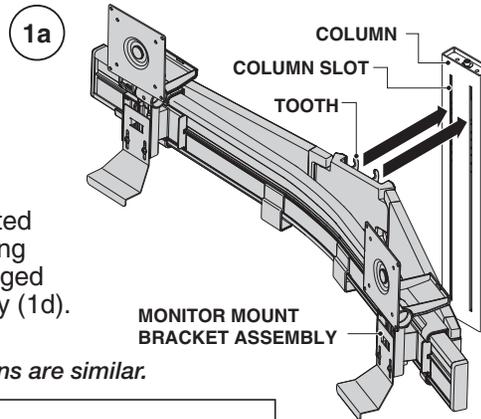

- 2 Locate the locking screw under the monitor mount bracket assembly and tighten using the "ball end" of the supplied Allen wrench (2a). As you tighten the locking screw, the tooth of the monitor mount bracket assembly will begin to move upward inside the column and tighten against the wall of the column locking the monitor mount bracket.

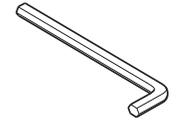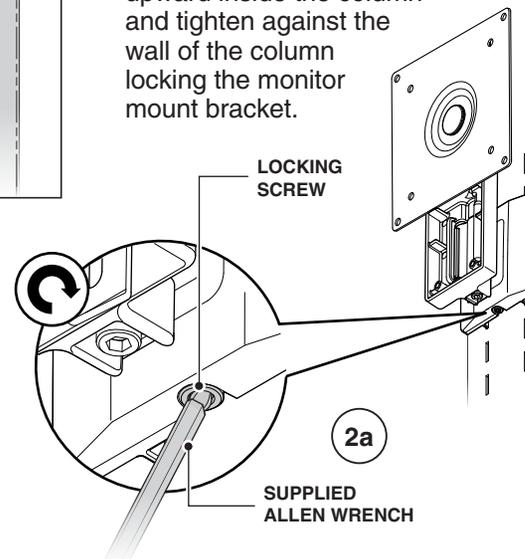

5/32" Allen Wrench (provided)

If you have a problem, question, or request, call your local dealer, or Steelcase Line 1 at **888.STEELCASE** (888.783.3522) for immediate action by people who want to help you.

(Outside the U.S.A., Canada, Mexico, Puerto Rico, and the U.S. Virgin Islands, call: 1.616.247.2500) Or visit our website: [www.steelcase.com](http://www.steelcase.com)

© 2015 Steelcase Inc.  
Grand Rapids, MI 49501  
U.S.A.

Printed in U.S.A.

- 3 Determine in advance where you want to position your two (or 3) monitors.

Align teeth of monitor mount bracket assembly with slots located in the column (3a). Angle the teeth into the slots (3b) and swing monitor mount bracket assembly inward (3c). With teeth engaged into slots, press downward onto the monitor mount rail assembly (3d).

