

If you have a problem, question, or request, call your local dealer, or Steelcase Line 1 at **888.STEELCASE** (888.783.3522) for immediate action by people who want to help you.

(Outside the U.S.A., Canada, Mexico, Puerto Rico, and the U.S. Virgin Islands, call: 1.616.247.2500)


Or visit our website: www.steelcase.com

© 2016 Steelcase Inc.
Grand Rapids, MI 49501
U.S.A.

Printed in U.S.A.

REMOVAL

1. Press down on top edge of cover and hold in place.
2. Gradually pull backward on center of cover until it unsnaps.

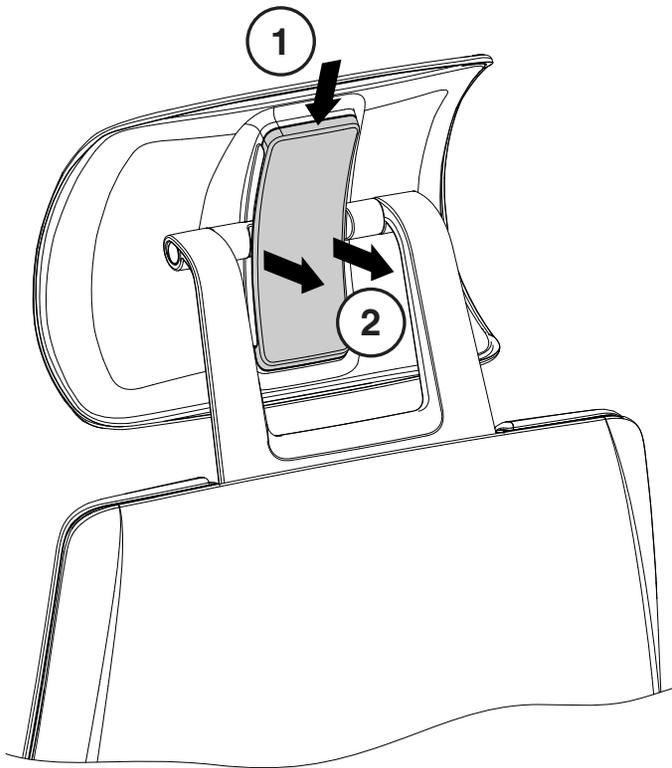

INSTALLATION

1. Make sure arrow points up. Arrow is located inside the cover.
2. Hook top edge of cover onto outer pad.
3. One corner at a time, snap the lower edge of cover onto the outer pad.

NOTE: You may need to pull backward slightly on the center of the cover to flatten/lengthen it.

