

If you have a problem, question, or request, call your local dealer, or Steelcase Line 1 at **888.STEELCASE** (888.783.3522) for immediate action by people who want to help you. (Outside the U.S.A., Canada, Mexico, Puerto Rico, and the U.S. Virgin Islands, call: 1.616.247.2500) Or visit our website: [www.steelcase.com](http://www.steelcase.com)  
© 2014 Steelcase Inc.  
Grand Rapids, MI 49501  
U.S.A.  
Printed in U.S.A.

**IMPORTANT SAFETY INSTRUCTIONS** - When using an electrical furnishing, basic precautions should always be followed, including the following: Read all instructions before using the Kiosk stand. Maximum operating temperature is 40° C.

**DANGER** - To reduce the risk of electric shock:

Always unplug this furnishing from the electrical outlet before cleaning.

**WARNING** - To reduce the risk of burns, fire, electric shock, or injury to persons:

- 1) Unplug from outlet before putting on or taking off parts.
- 2) Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
- 3) Never operate this furnishing if it has a damaged cord or plug. Return the furnishing to a service center for examination and repair.
- 4) Keep the cord away from heated surfaces.
- 5) Never operate the furnishing with the air openings blocked. Keep the air openings free of lint, hair, and the like.
- 6) Never drop or insert any object into any opening.
- 7) Do not use outdoors.
- 8) Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- 9) Risk of Electric Shock - Connect this furnishing to a properly grounded outlet only.  
See Grounding Instructions.
- 10) To reduce the risk of fire or electric shock, DO NOT expose this apparatus to rain, dripping or splashing moisture and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

**SAVE THESE INSTRUCTIONS**

This appliance is intended for commercial and institutional use only.  
Connect this appliance to a properly grounded outlet only. See grounding instructions.

**OPERATING INSTRUCTIONS** - Please refer to the attached installation instructions.



Only used at altitude not exceeding 2000m  
仅适用于海拔2000m一下地区安全使用



Only used in not-tropical regions  
仅适用于非热带气候条件下安全使用

**USER-MAINTENANCE INSTRUCTIONS**

The receptacle power block may be equipped with a circuit breaker that will shut off power in an overload condition. Press to reset the circuit breaker to restore power.

The receptacle Kiosk power cord plugs must be located near the Kiosk and be accessible to the operator. For compliance with clause 5.4.2 of IEC 60065.


**GROUNDING INSTRUCTIONS**

This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances. When the main (power supply) plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

**DANGER** - Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.



Figure 67.1  
Grounding method

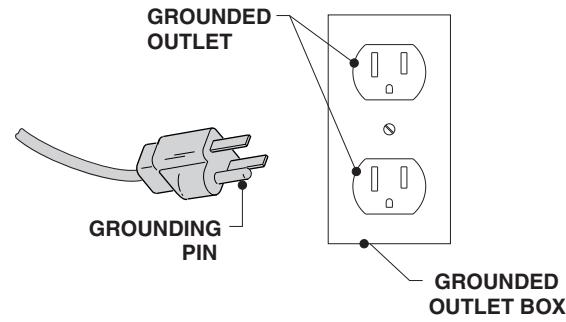

**IMPORTANT SAFETY INSTRUCTIONS****(continued)**

When using an electrical furnishing, basic precautions should always be followed, including the following: Read all instructions before using the Kiosk stand.

**WARNING-**

- 1) Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip over on to the child.
- 2) Relocating audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to the furnishing collapsing or over turning onto a child.

**CAUTION - To prevent the risk of tip over:**


- 1) Never install on unstable or uneven surfaces.
- 2) Loading of Kiosk worksurface should be limited to 25 Kg. (55 lbs).
- 3) Do not allow children to climb on or play with furniture.
- 4) Care should be taken to route all power cords and cables so they cannot be pulled by children.


**CAUTION - To prevent damage to electrical cords:**


- 1) Care should be taken to route all power cords and cables so they cannot be pulled by children.
- 2) Protect power cords from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the product.


**CAUTION - To prevent injury:**

Due to the size and weight of the unit, two people are required to move/handle the product.

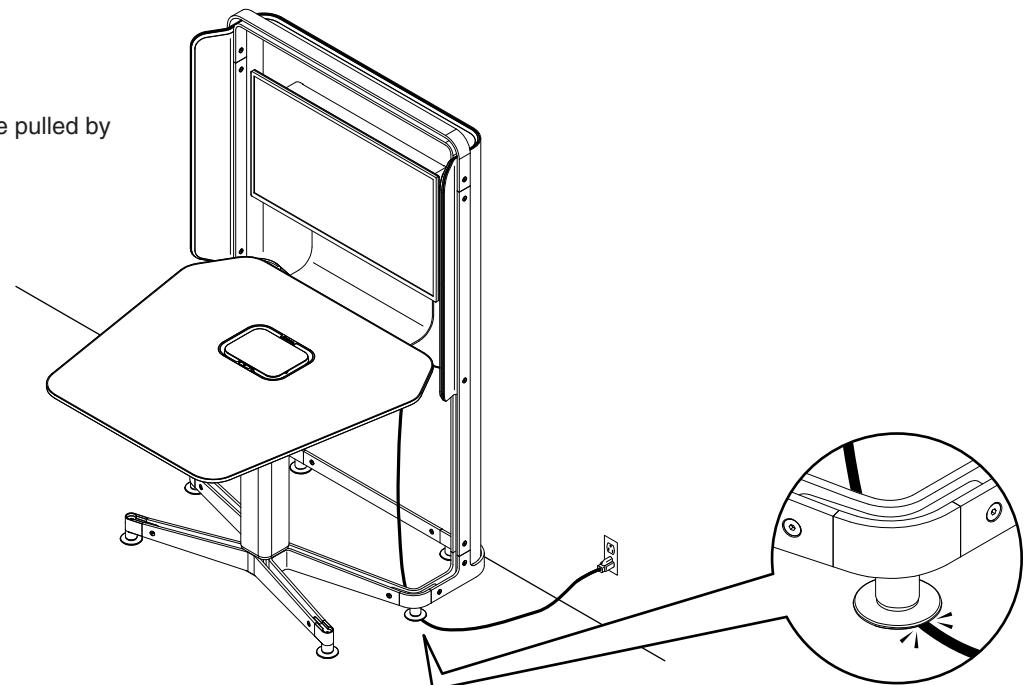

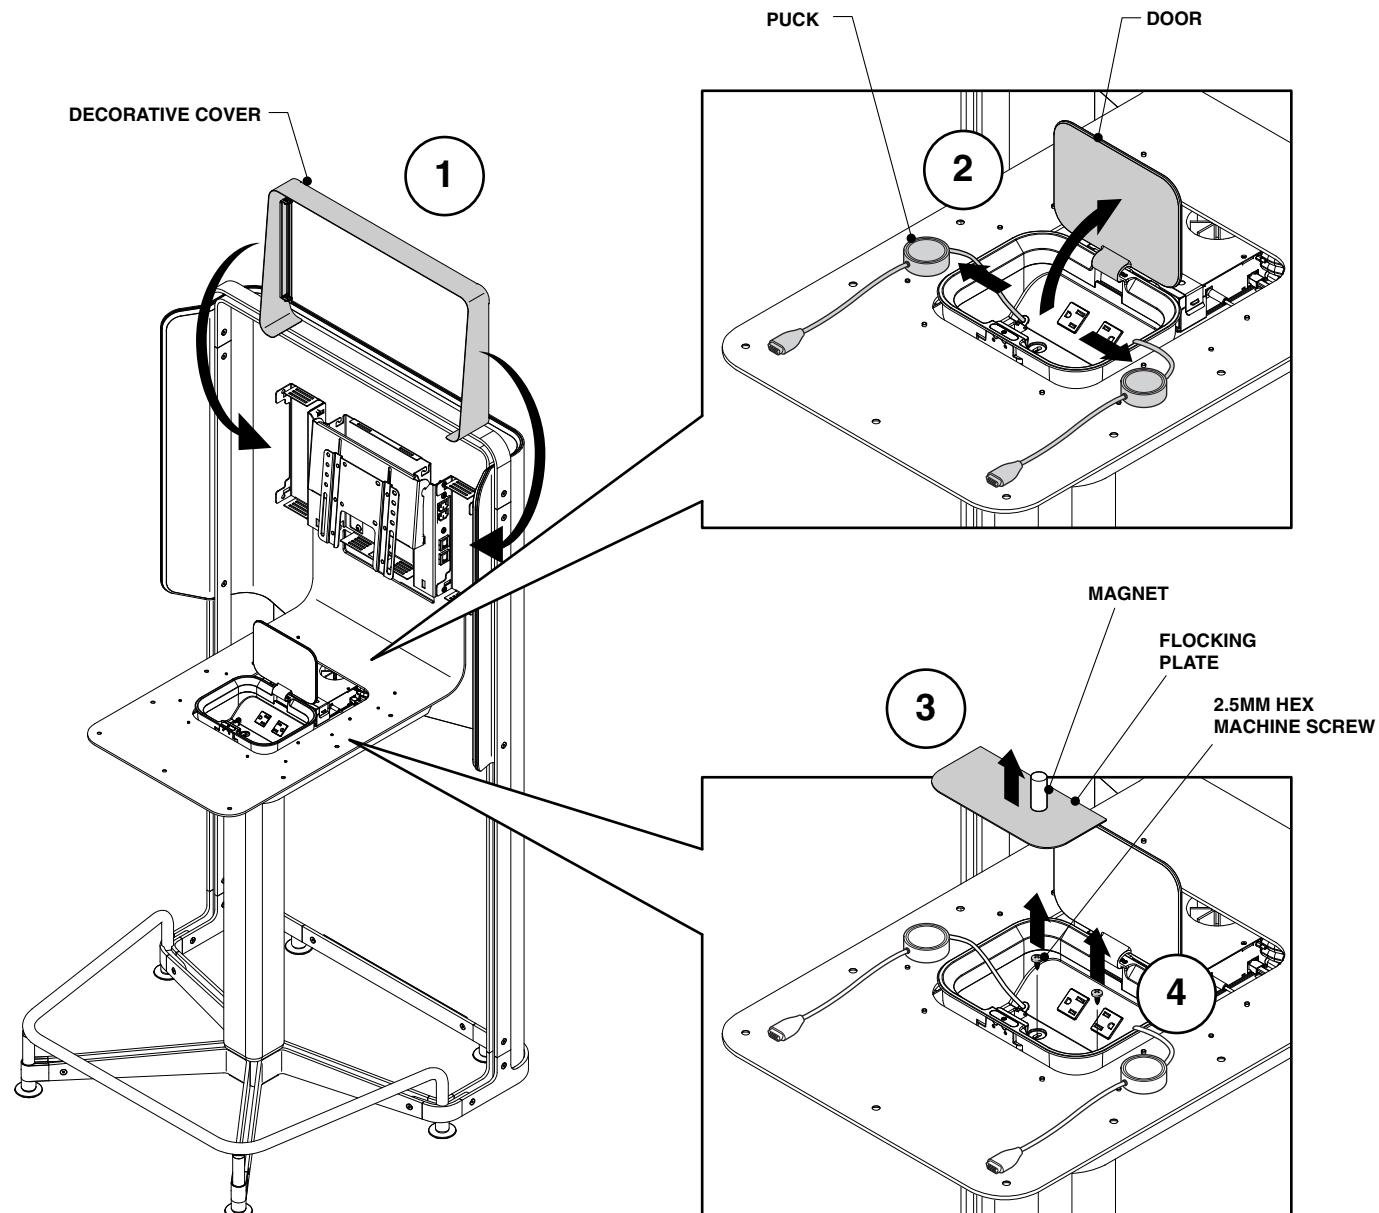

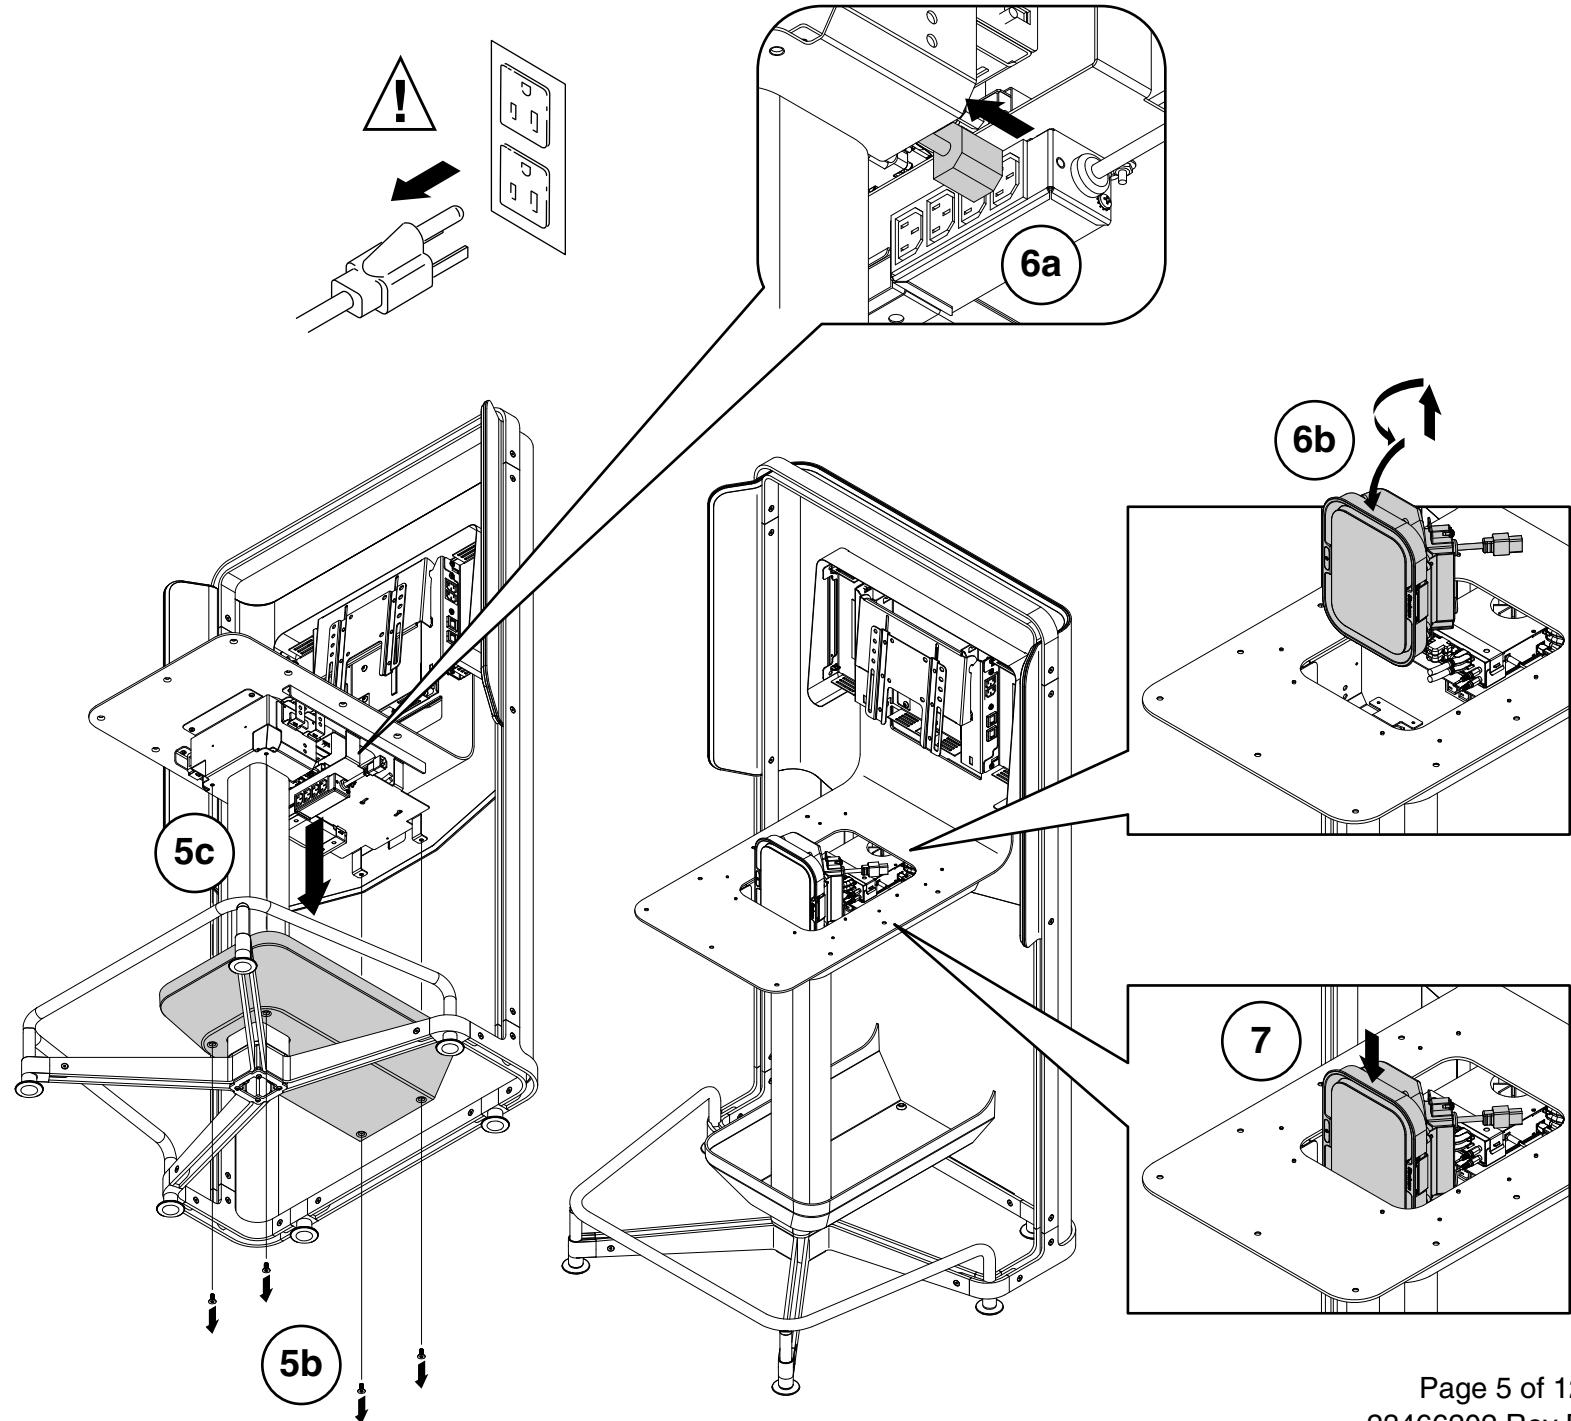

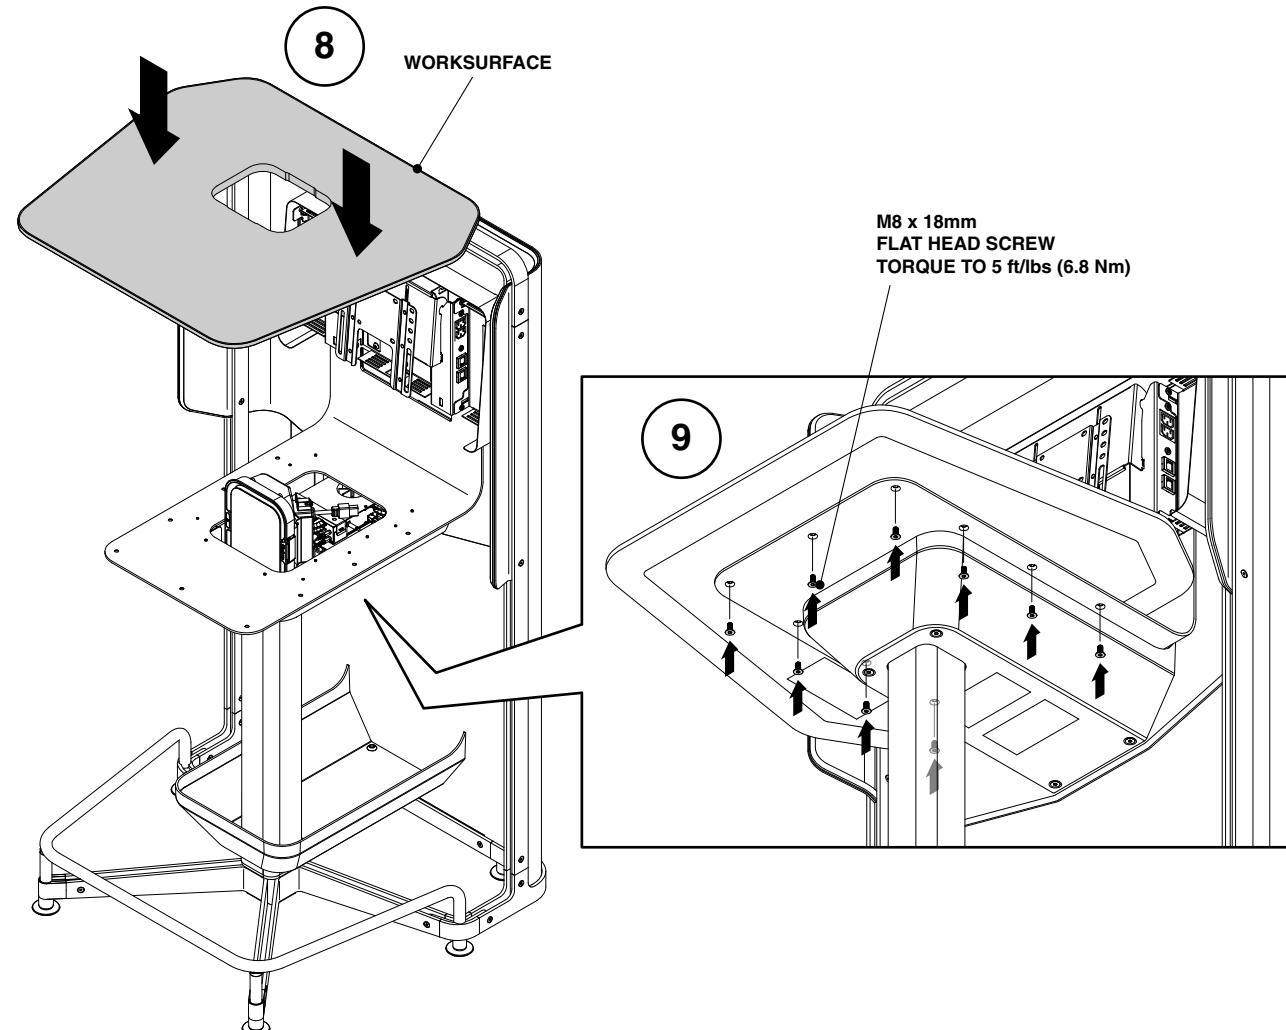

**10.** Lift out puck well and rotate to original orientation (10a). Reinstall IEC power block connection to puck well power block (10b).

**TIP:** Double check to be sure incoming power cord is fully connected to the power block.

**11.** Reinstall two (2) 2.5mm hex machine screws that were removed on page 4.

**NOTE:** To avoid damaging puck well, do not tighten to the point of causing distortion of the plastic,


**TIP:** Care should be taken when routing low voltage power indication cord during reinstallation of the kiosk puck / power housing. Double check the puck cord length for sufficient length to reach perimeter of worksurface.

**12.** Reinstall the flocking plate that was removed on Step 3. Press down until flat.

**TIP:** If excessive force is needed to seat the flocking plate, stop and inspect for unintended interference.


**13.** Loosely coil pucks and place puck in housing. Close housing door to prevent damage to pucks / housing during monitor installation.

**14.** Double check all IEC and low voltage connections. Reinstall the lower cover with the four (4) flat head screws removed in Step 5.

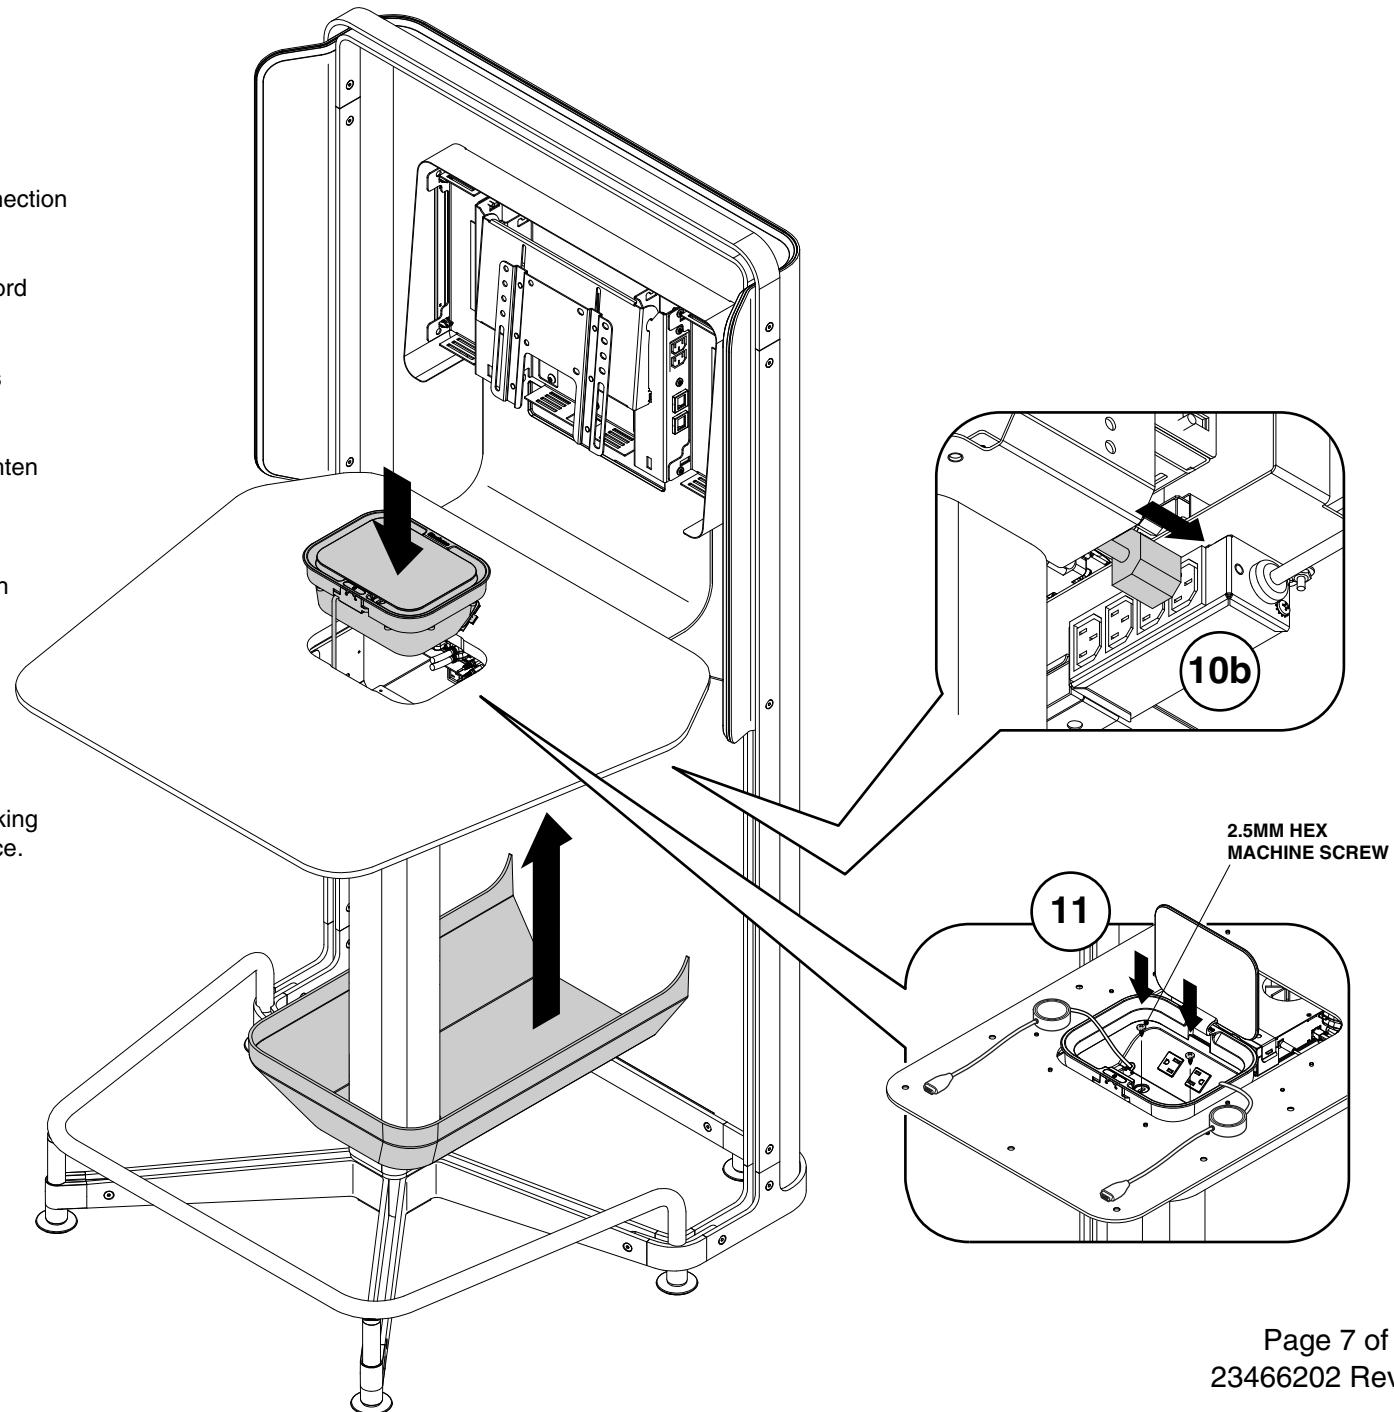


**32" Monitor Mounting Option**

**NOTE:** Maximum monitor width = 32 inches.  
Maximum weight = 50 pounds, (22 kg).

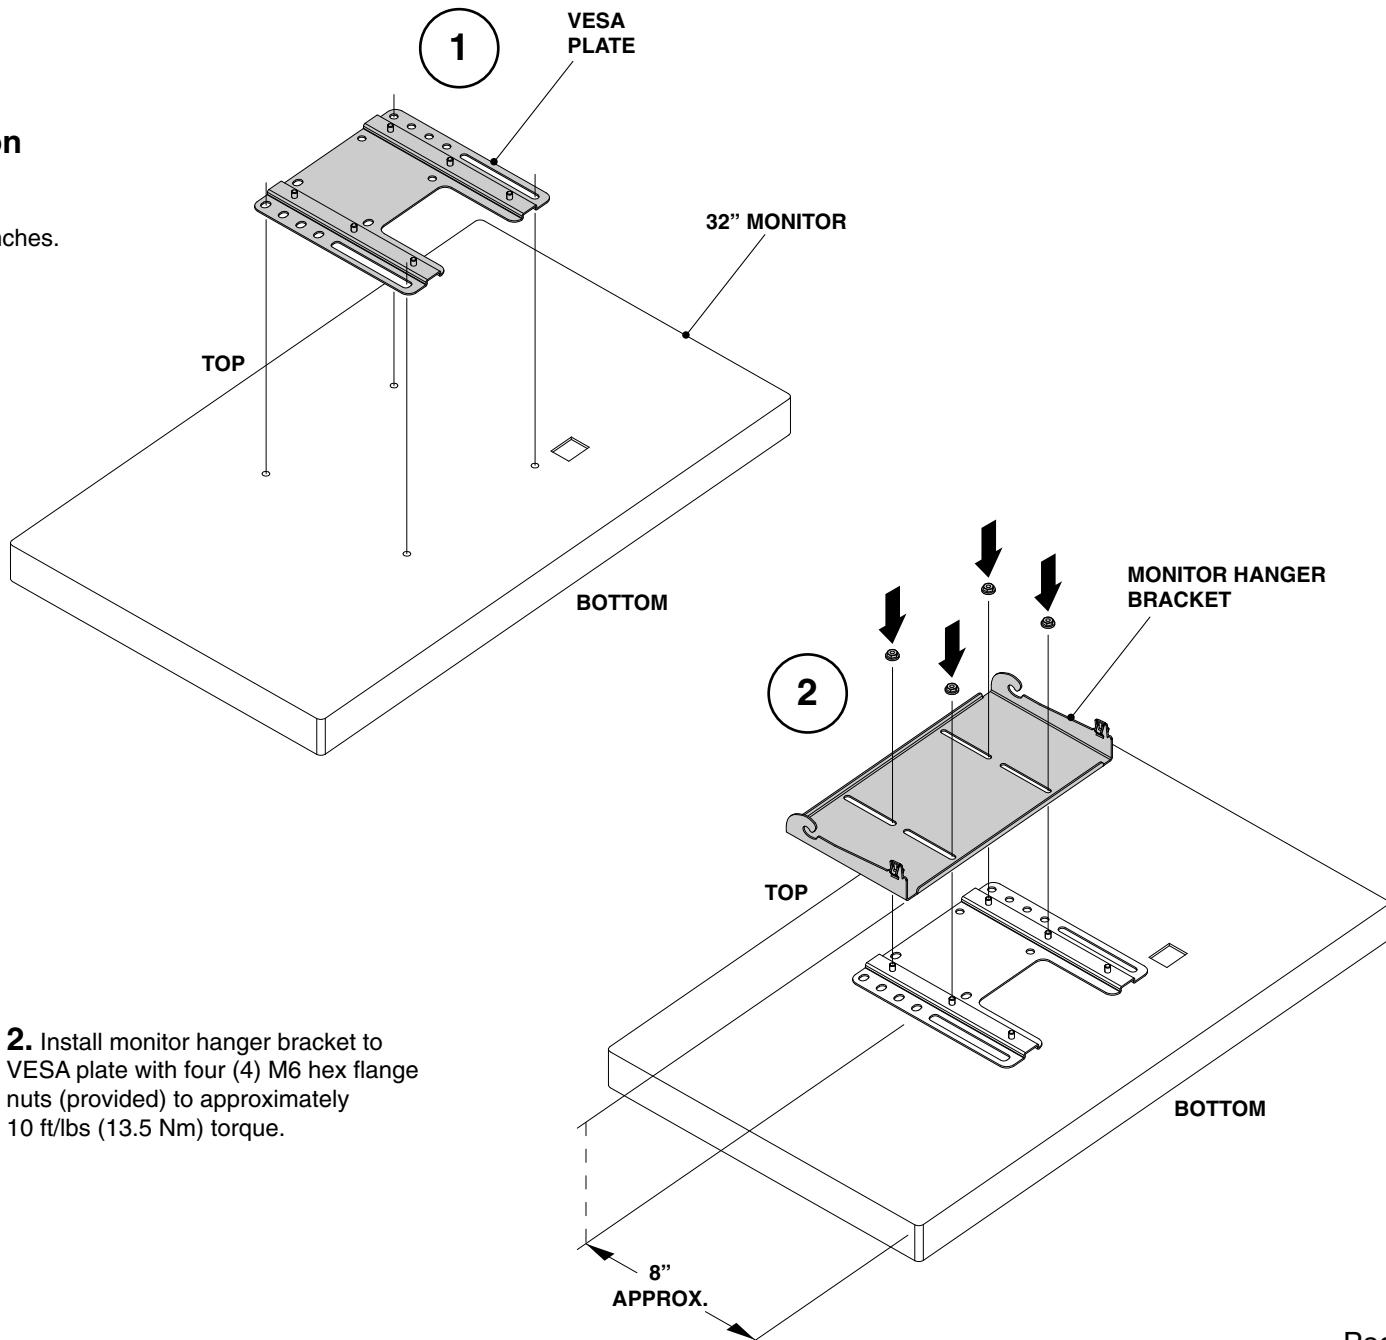

- 2.** Install monitor hanger bracket to VESA plate with four (4) M6 hex flange nuts (provided) to approximately 10 ft/lbs (13.5 Nm) torque.

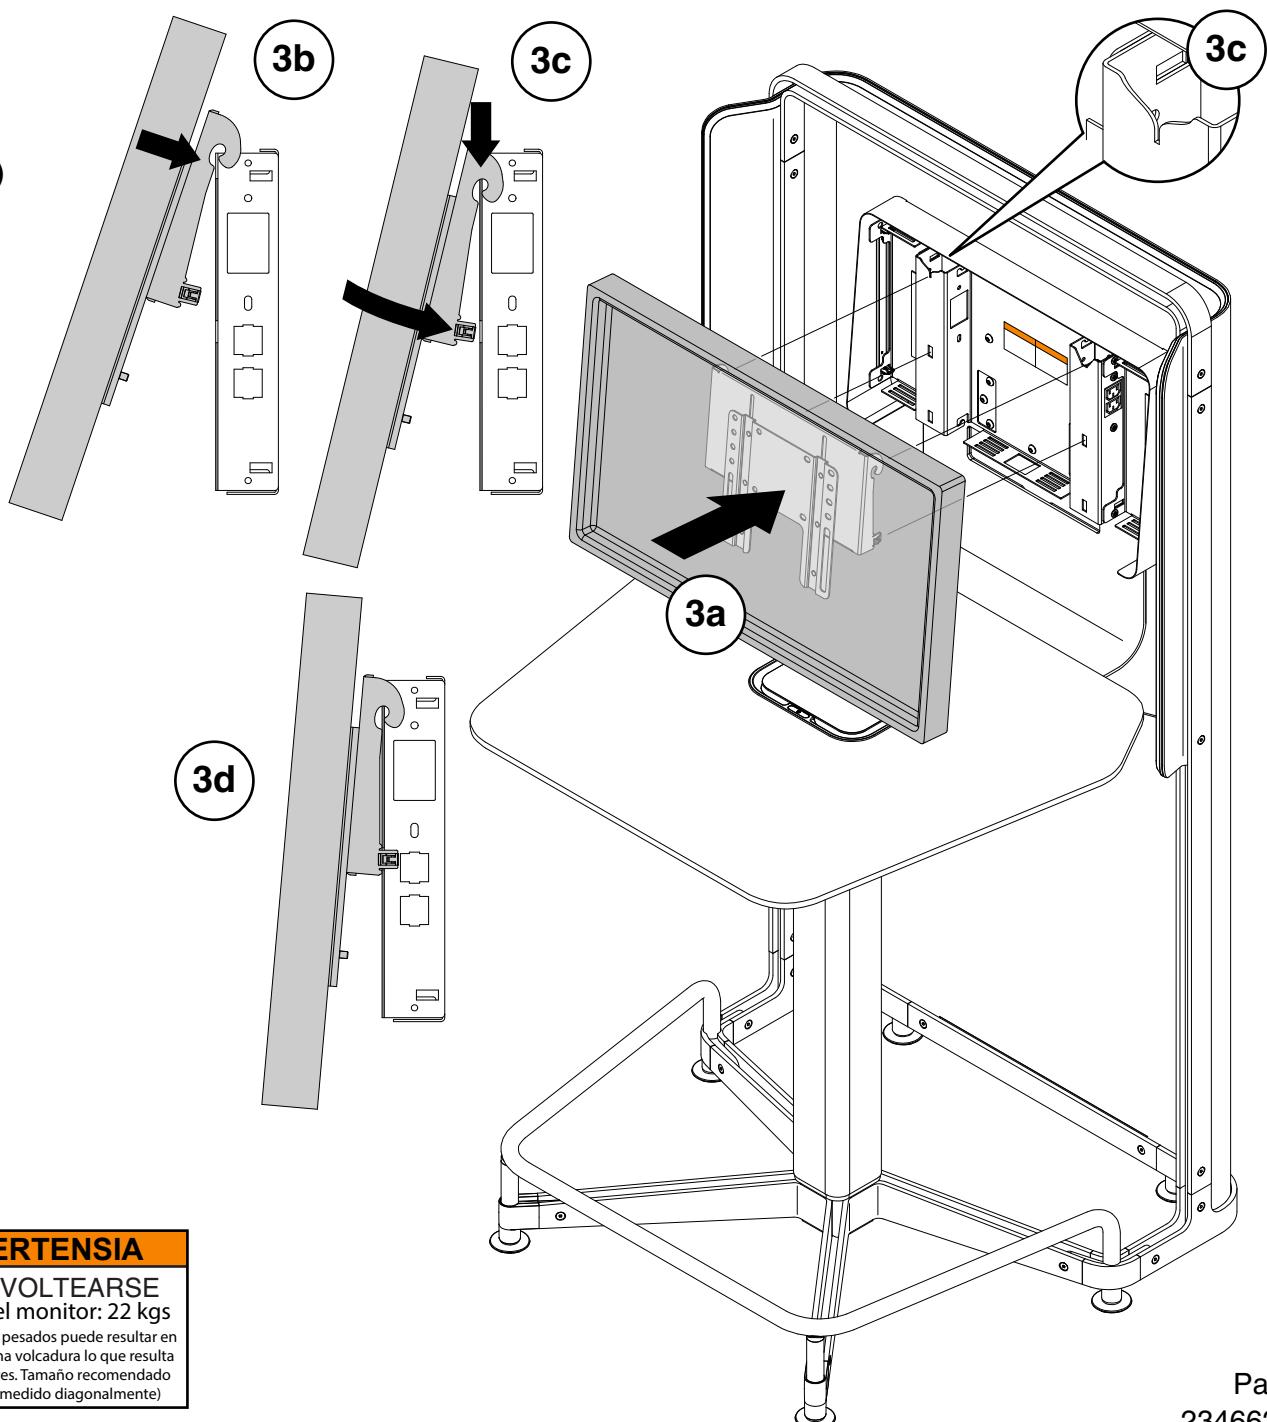**32" Monitor Mounting Option (cont.)**



**TIP:** If excessive force is needed to seat clips (greater than 5 pounds or 2.3 kg), stop and inspect for cable interference.

<b>WARNING</b>	<b>ADVERTENCIA</b>
<b>RISK OF TIPPING OVER</b> Maximum monitor weight: 50 lbs Use with heavier monitors may result in instability causing tipover resulting in death or serious injury. Intended monitor size: 32 inches (diagonal measurement)	<b>RIESGO DE VOLTEARSE</b> Peso máximo del monitor: 22 kgs El uso con monitores más pesados puede resultar en inestabilidad causando una volcadura lo que resulta en muerte o lesiones graves. Tamaño recomendado de monitor: 32 pulgadas (medido diagonalmente)

## Cisco DX80 Monitor Mounting Option


**NOTE:** Maximum monitor width = 32 inches.  
Maximum weight = 50 pounds, (22 kg).

1. Remove stand.
2. Install mounting bracket.

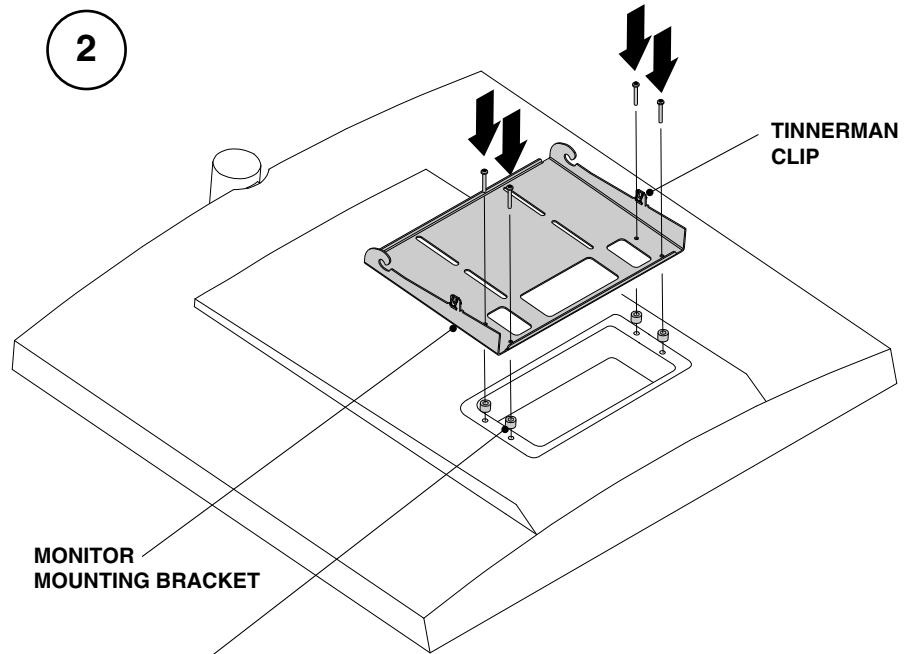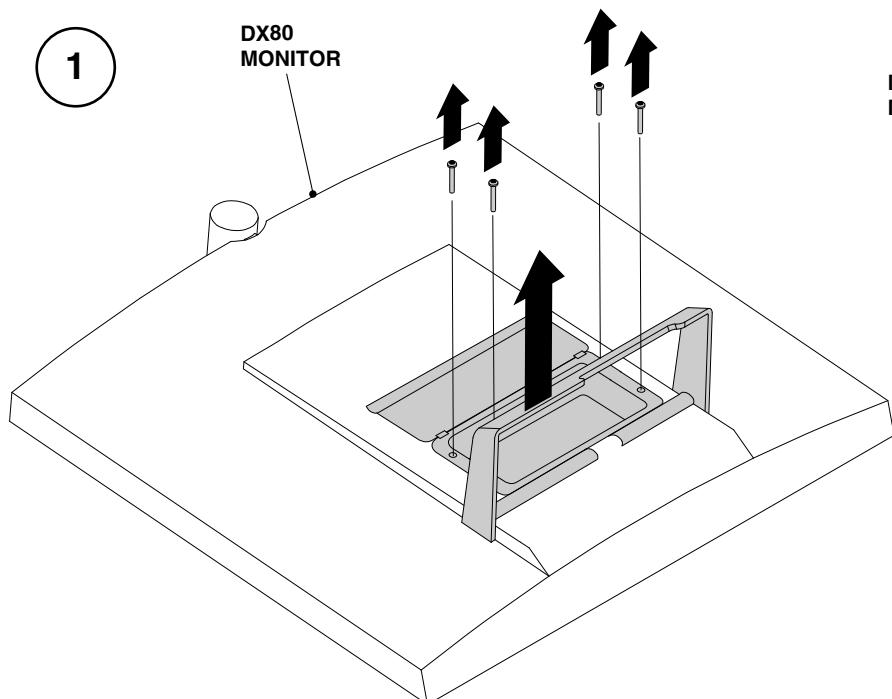

**Cisco DX80 Monitor Mounting Option  
(cont)**

**TIP:** If excessive force is needed to seat clips (greater than 5 pounds or 2.3 kg), stop and inspect for cable interference.

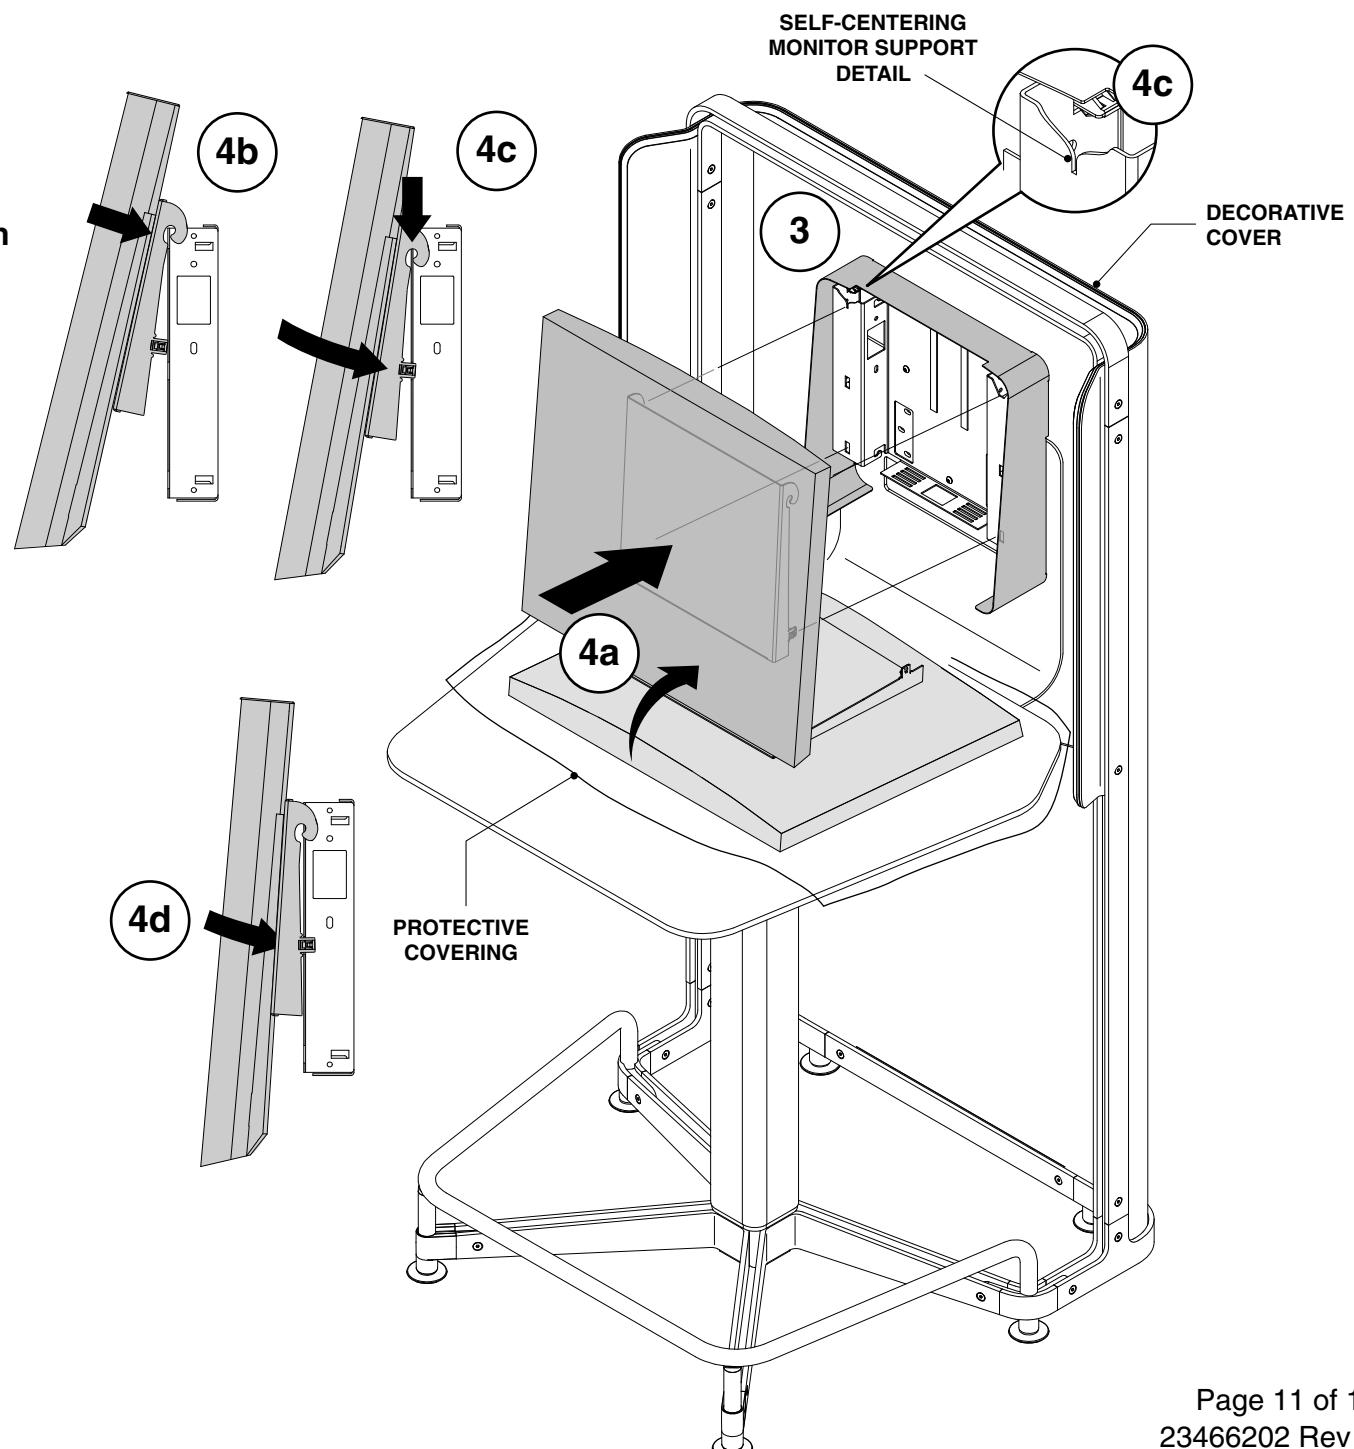

## Appendix A

### Relocating the IEC duplex

1. Remove the three (3) allen head machining screws and remove steel pan assembly.
2. Remove the two (2) phillips head screws that secure the IEC duplex.
3. Reposition IEC duplex on opposite side (as shown) and reinstall the two (2) phillips head screws that were removed in Step 2.
4. Reinstall steel pan assembly with the three (3) allen head machine screws that were removed in Step 1.

