465 Think[®] Chair (New) Lumbar Fixed & Adjustable Replacement




If you have a problem, question, or request, call your local dealer, or Steelcase Line 1 at **888.STEELCASE** (888.783.3522) for immediate action by people who want to help you.


(Outside the U.S.A., Canada, Mexico, Puerto Rico, and the U.S. Virgin Islands, call: 1.616.247.2500) Or visit our website: www.steelcase.com

© 2014 Steelcase Inc. Grand Rapids, MI 49501 U.S.A.



Page 1 of 8 939546550 Rev A

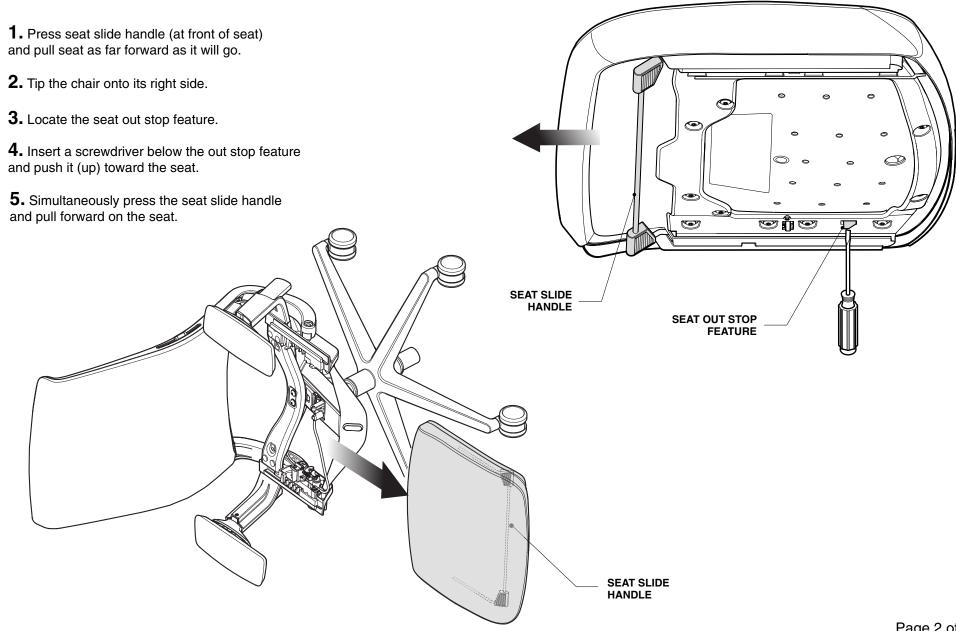

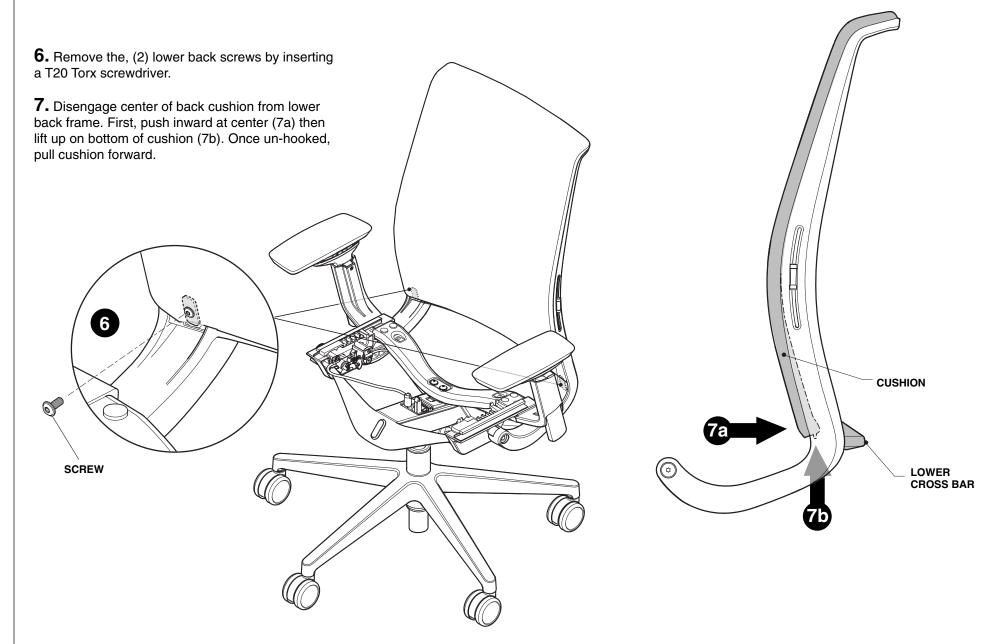


Page 3 of 8 939546550 Rev A

Adjustable Lumbar


8a. Using two (2) screwdrivers, gently pry out the lumbar handles on **both** sides of the back.

Fixed Lumbar

8b. Use screwdriver from inside back frame to gently push fixed lumbar clip out of slot. Repeat at opposite, inner side of back frame.

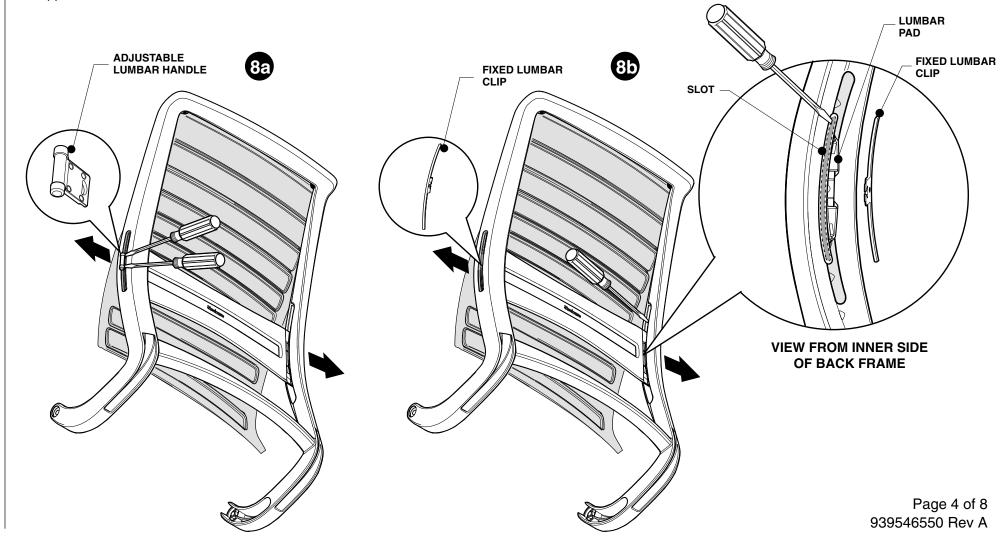

9. Push the bottom of the back cushion forward, on both sides, away from the back frame and pinch point cover (9a). Gently push lumbar pad forward from the rear and it will drop down and out of the back frame (9b).

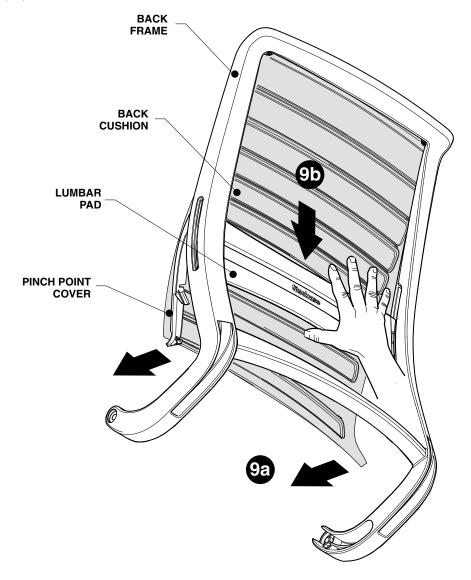





10. Set the lumbar pad on a work surface with the Steelcase Logo pointing up. Remove sliders from ends of old lumbar pad. Assemble sliders onto new lumbar pad.

NOTE: Align wider slots on sliders with wider pegs on pad.

11. Carefully take the new lumbar pad assembly with sliders and position it between pinch point covers and back frame.(Reverse Step 9).

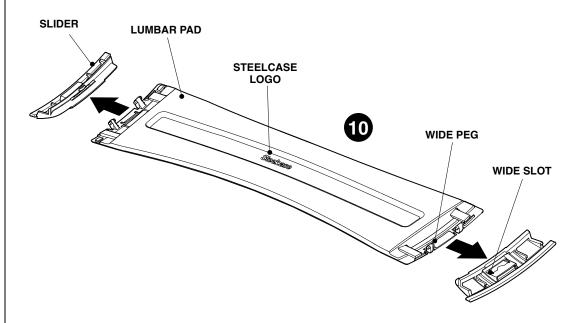


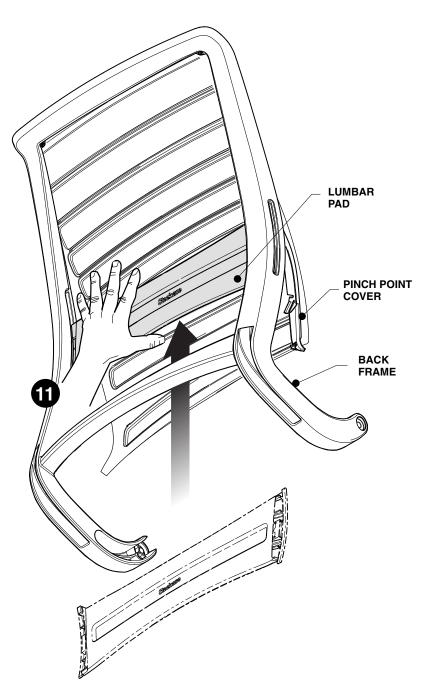

12. Snap in new lumbar handles (or fixed height clips) through slots on back frame and into lumbar pad receivers.

NOTE: Handles are not handed, but must be oriented as shown. (The 4 circle imprints face towards the back).

13. Temporarily snap in center of back. Reinstall the screws removed in Step 6, into each lower corner of the back. From the back center of the chair, squeeze the cushion and back frame together to finish the back cushion assembly.

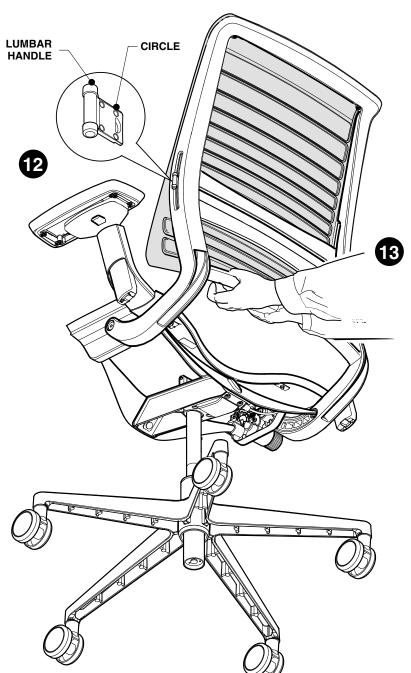

Page 7 of 8 939546550 Rev A

Steelcase® **14.** Assemble the seat onto the chair by aligning slots in the seat with the slide bearings. Push seat from the front while simultaneously pressing the seat slide handle. Push the seat with enough force to move beyond the seat out stop feature. Once positioned, press the seat slide handle and pull the seat forward to verify the seat is properly assembled to the chair. SLIDE **BEARING** SLOT **SEAT SLIDE** HANDLE