

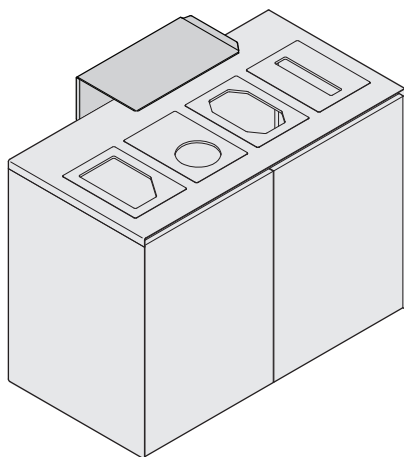



SHELF (page 2)

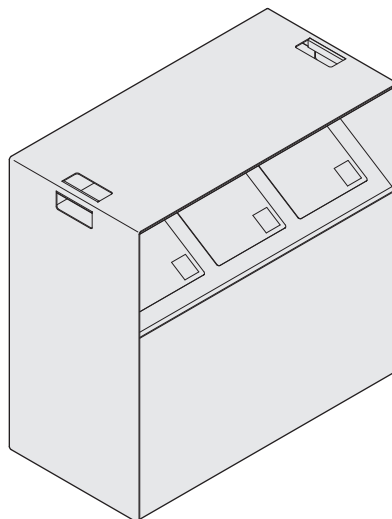



DISPLAY (page 3)

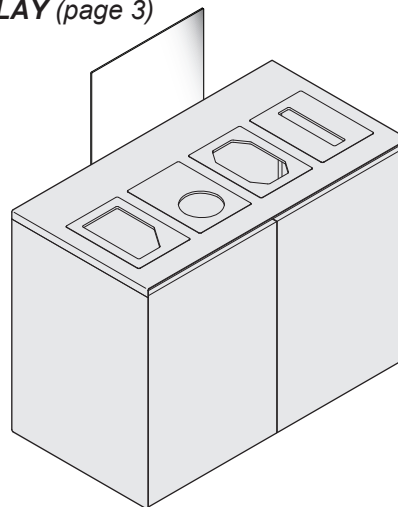

MOBILE UNIT

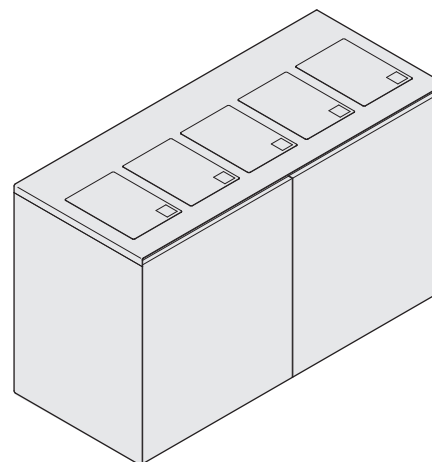

FIVE OPENINGS


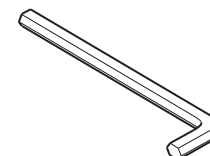
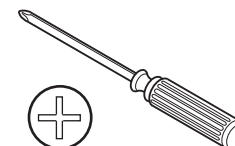


5/16" Wrench

If you have a problem, question, or request, call your local dealer, or Steelcase Line 1 at 888.STEELCASE (888.783.3522) for immediate action by people who want to help you. (Outside the U.S.A., Canada, Mexico, Puerto Rico, and the U.S. Virgin Islands, call: 1.616.247.2500) Or visit our website: www.steelcase.com
© 2004 Steelcase Inc.
Grand Rapids, MI 49501
U.S.A.
Printed in U.S.A.


SHELF INSTALLATION

1. Open doors and remove trash containers.
2. Align holes in the shelf weldment with holes in rear of cabinet.
3. Secure weldment loosely with (2) bolts, (2) washers, and (2) nuts as shown.
4. Tighten set screw.
5. Tighten bolts and nuts from step 3.
Maximum torque: 8 in. - lbs.

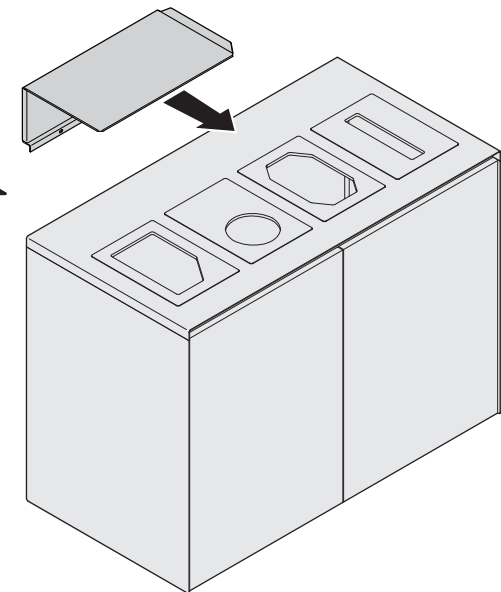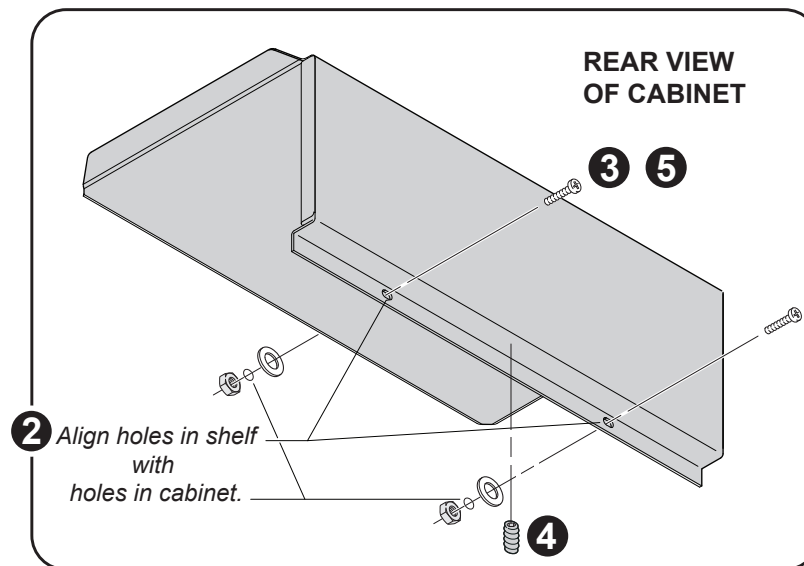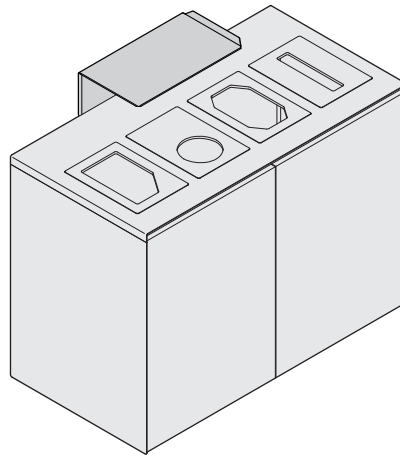


DISPLAY INSTALLATION

1. Open doors and remove trash containers.
2. Align holes in the display weldment with holes in rear of cabinet.
3. Secure weldment with (2) bolts and (2) nuts as shown.
4. Lower acrylic display into position.

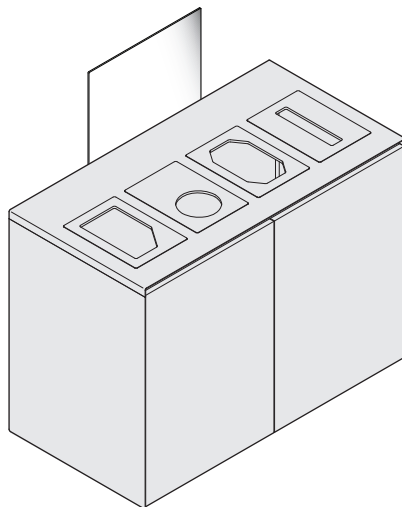

Note: if acrylic sheets are bowed out, switch them front to back.

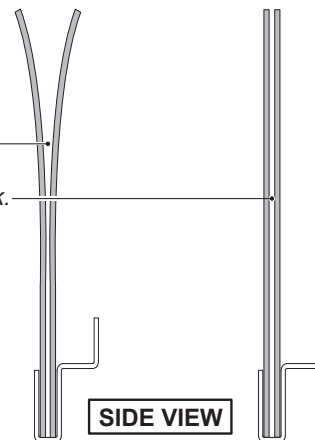

REAR VIEW OF CABINET

