

## Installation Instructions

### Exposed Wall Mount Sink Faucet and Gooseneck Spout with EverClean™ Finish

7293.152  
7293.252

Congratulations on purchasing your American Standard faucet with EverClean finish found only on American Standard faucets.

#### EverClean Finish

- One wipe effortlessly removes spots
- Eliminates the need for cleaners and scrubbing
- Permanent surface protectant remains beautiful for the life of the faucet
- EverClean™ available on: Polished Chrome, Satin Nickel, Stainless Steel, Polished Brass (or any combination of these finishes)

Certified to comply with ANSI A112.18.1M  
M968264 REV. 1.1

To ensure that your installation proceeds smoothly-please read these instructions carefully before you begin.



 
#### TOOLS REQUIRED



Channel Locks



Adjustable Wrench





Plumbers' Putty or Caulking




Phillips Screwdriver

#### ROUGHING-IN DIMENSIONS

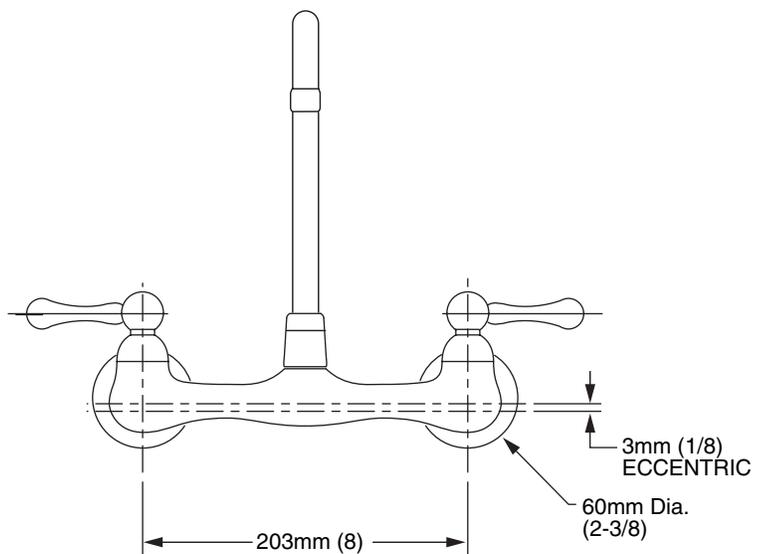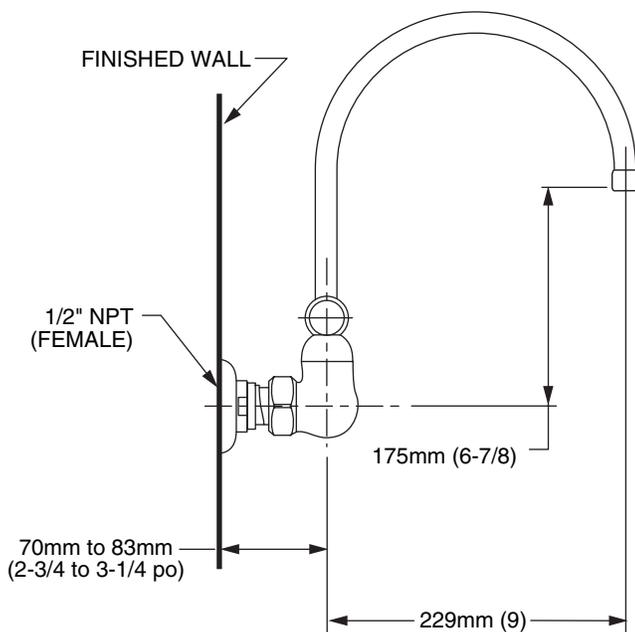


#### 1 ROUGH-IN

- Prepare water supply lines per "Roughing-in Dimensions". Install 1/2" NPT. SUPPLY NIPPLES

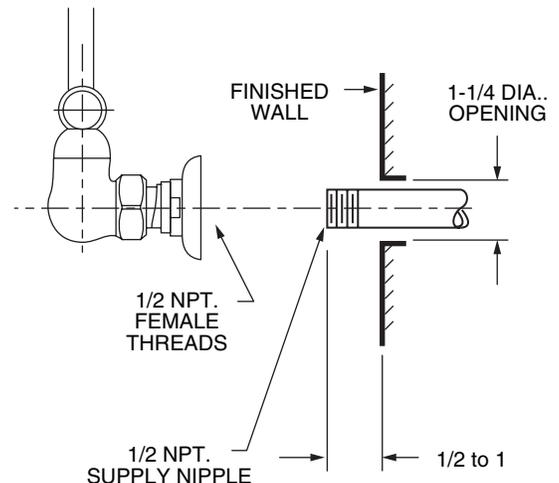

## 2 FINISH INSTALLATION

- Apply thread sealant or teflon tape to SUPPLY NIPPLES (1).
- Slide COUPLING NUTS (2) onto INLET SHANKS (3).
- Thread ESCUTCHEONS (4) fully onto INLET SHANKS (3).
- Thread INLET SHANKS (3) onto SUPPLY NIPPLES (1). Distance between INLET SHANK (3) outlets must be 8" to match the VALVE (5).
- Insert RUBBER WASHERS (6) into INLET SHANK (3).
- Attach VALVE (5) to INLET SHANKS (3). Tighten both COUPLING NUTS (2) firmly.

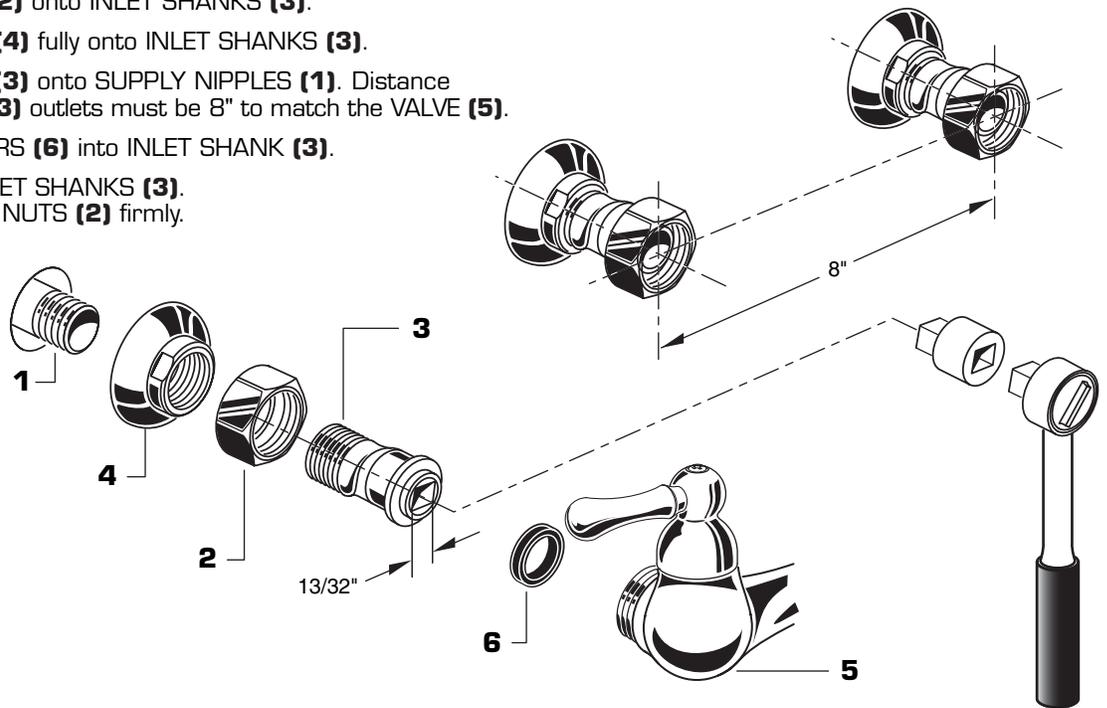

## 3 TEST FAUCET

- Remove AERATOR (1).
- Turn HANDLES TO **OFF** POSITION.
- Slowly turn water supplies on and check all connections for leaks.
- Operate HANDLES to flush water lines thoroughly.
- Turn HANDLES to **OFF** position and replace AERATOR (1).
- Thread ESCUTCHEONS against finished wall.



## 4 SERVICE

- To change direction of handle rotation, proceed as follows:
  - Turn HANDLE to OFF position.
  - Remove HANDLE SCREW and HANDLE.
  - Remove SPRING CLIP (1).
  - Lift STOP WASHER (2), turn 90° and replace.
  - Replace SPRING CLIP (1).
  - Replace HANDLE and HANDLE SCREW.
- AERATOR may accumulate dirt causing distorted and reduced water flow. Remove AERATOR and rinse clean.
- If spout drips, operate handles several times from OFF to ON position. Do not force - handles turn only 90°.

