Installation Instructions for

MonoRail FreeJack Connector

TECH LIGHTING®

SYSTEM CONNECTORS
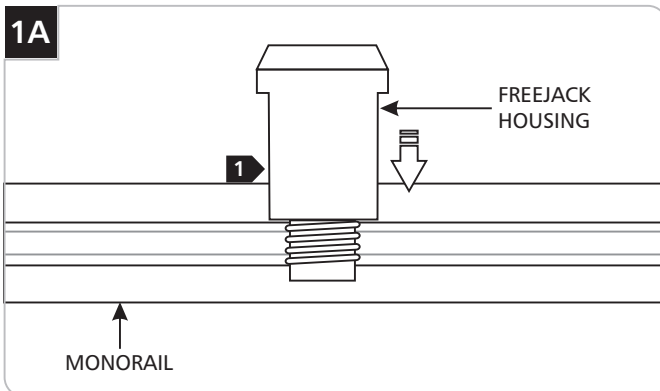
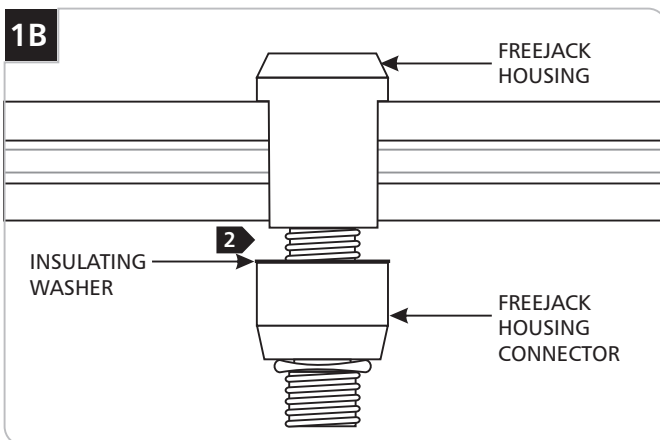**GENERAL PRODUCT INFORMATION:**

This product is suitable for indoor dry locations only.

This product should be used with Tech Lighting MonoRail system only.

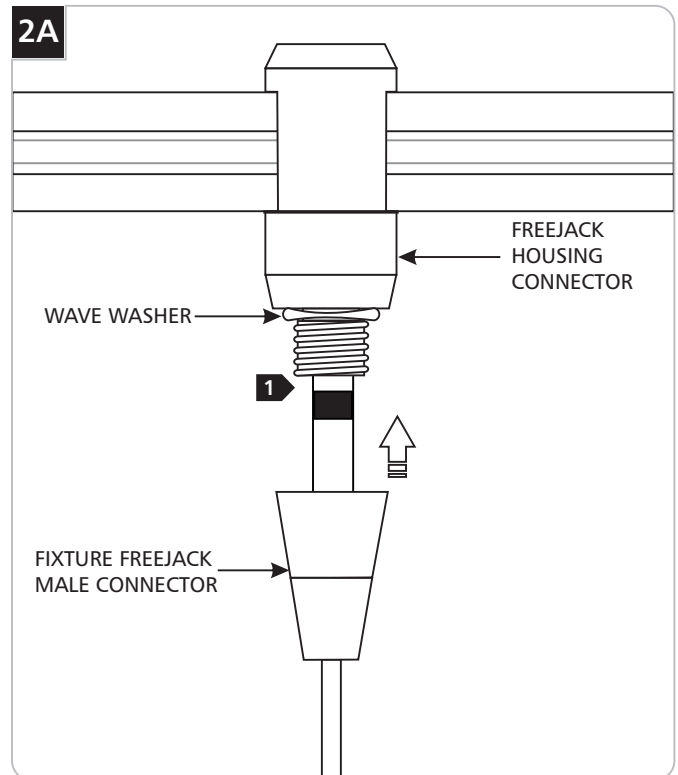## Install the FreeJack Connector onto the MonoRail

1A

FREEJACK HOUSING

1

MONORAIL

1 From top of the MonoRail place the FreeJack housing onto the MonoRail.

1B

FREEJACK HOUSING

2

INSULATING WASHER

FREEJACK HOUSING CONNECTOR

2 From bottom of the MonoRail tighten the FreeJack housing connector to the FreeJack housing.

Connect the FreeJack Fixture to the MonoRail FreeJack Connector

2A

FREEJACK HOUSING CONNECTOR

WAVE WASHER

1

FIXTURE FREEJACK MALE CONNECTOR

1 Push and screw the fixture FreeJack male connector all the way into the FreeJack housing connector.

SAVE THESE INSTRUCTIONS!

A Generation Brands Company