

# Kable Lite FreeJack Connector

700KABCO\_

1.6




## GENERAL PRODUCT INFORMATION:




This product is suitable for indoor dry locations only.

This product should be used with Tech Lighting Kable Lite system only.




## Resizing the Kable Lite FreeJack Connector

**NOTE:** Kable Lite FreeJack connector comes with 8" cable separation rods.

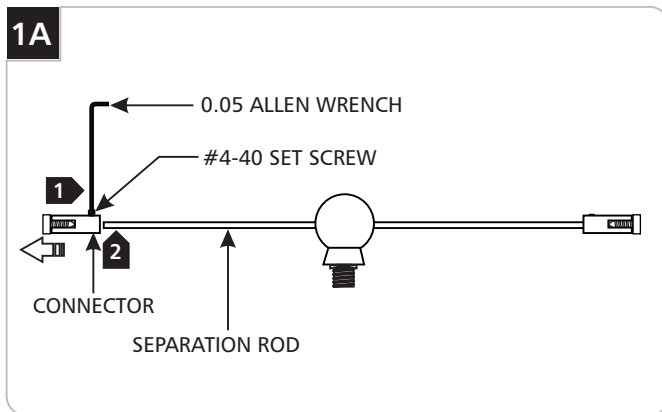


- 1** Loosen (Do Not Remove) the #4-40 screw on the connectors with the 0.05 Allen wrench.
- 2** Remove the connectors.
- 3** Use the chart to determine the separation rod size.

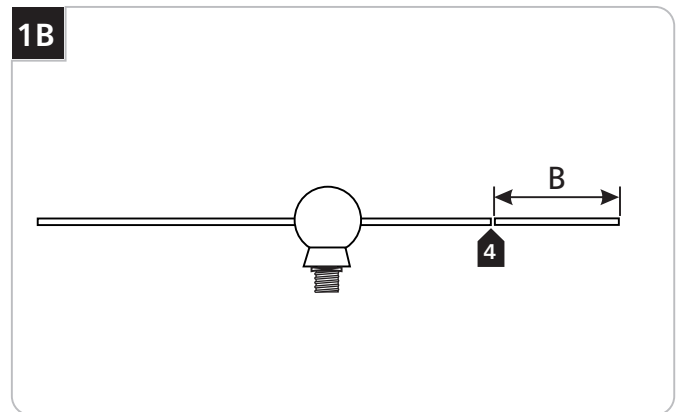

- 4** Use a sharp cutter or a hacksaw to cut the separation rods.

CABLE SEPARATION	AMOUNT TO CUT FROM EACH SEPARATION ROD (B)
8"	—
5-1/2"	1-1/4"
3-1/2"	2-1/4"
2"	3"


1C

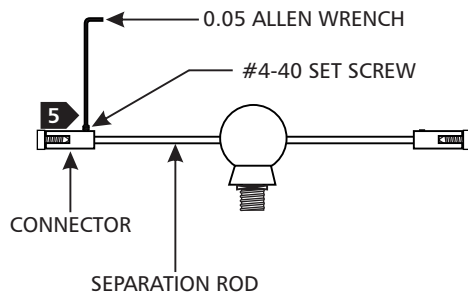

- 5 Replace the connectors at the end of the separation rods and tighten the #4-40 set screw with the 0.05 Allen wrench.

## Attaching the Kable Lite FreeJack Connector to the Kable Lite Cables


2A

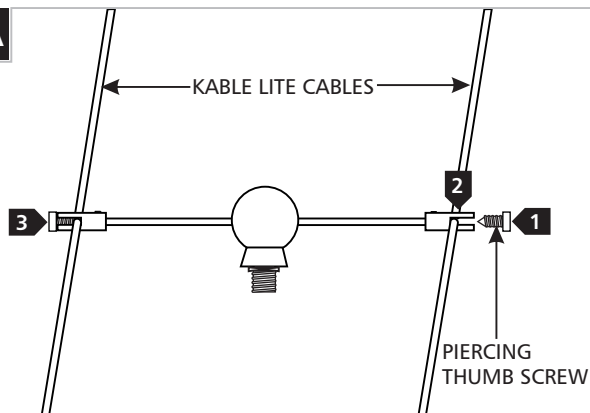

- 1 Remove the piercing thumb screws from connector ends.
- 2 Place the connectors onto the Kable Lite cables.
- 3 Replace and tighten the piercing thumb screws.

## Installing the Fixture

3A

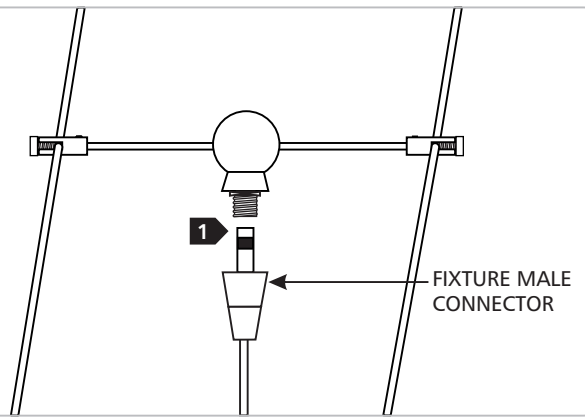

- 1 Screw the fixture FreeJack male connector into the Kable Lite FreeJack connector tight.

**SAVE THESE INSTRUCTIONS!**



**TECH LIGHTING®**

7400 Linder Ave, Skokie, IL 60077  
847.410.4400

[www.techlighting.com](http://www.techlighting.com)

© 2008 Tech Lighting, L.L.C. All rights reserved. The "Tech Lighting" graphic is a registered trademark of Tech Lighting, L.L.C. Tech Lighting reserves the right to change specifications for product improvements without notification.  
A Generation Brands Company