
INSTALLATION INSTRUCTIONS / LEUCOS U.S.A.

MODULO S 22 - S 31 - S 35 - S 22/CL



A1 Enclosed





One installer



Revised

25 Luglio 2006

WARNING: - DISCONNECT POWER BEFORE INSTALLATION. INSTALL IN ACCORDANCE WITH THE NATIONAL AN LOCAL ELECTRICAL CODES. - FOLLOW DIRECTLONS CAREFULLY TO AVOID SCRATCHING THE GLASS DIFFUSER.


- 1. ILL. 1 Attach the metal canopy "A" to the junction -box.
- 2. ILL. 1-2 Guide the electrical wires through the rubber rings "Z" and in one of the 2 lateral holes "F" of the metal cone and the steel wire through the central hole of the canopy "B". PLEASE NOTE: IN ORDER TO PASS THE ELECTRICAL WIRES THROUGH THE CANOPY. IT IS NECESSARY TO PUNCH A HOLE WITH A SCREWDRIVER INSIDE THE CANOPY "B".
- 3. ILL. 3 Slightly loosen the fitting "S". Pass the steel cable through the central hole of the fitting "S". This fitting is pressured fit. In order to secure the steel cable push the fitting toward the top. Having determined the correct height of the fixture, secure the steel cable by screwing the fitting "S". In order to properly secure the steel cable, we suggest passing the steel cable through the fitting "J". Clamp the cable in position with the fitting "J" screw.
- 4. ILL.3 Connect the fixture's electrical wires to supply wire connectors of the proper size leaving excess wire for decorative "swag" below canopy "B" if desired. NOTE: DURING WIRING TAKE CARE TO GUIDE THE LAMP WIRE THROUGH THE PLASTIC CLAMP "X" AND LOCK IT BY THE SIDE PLASTIC SCREW.
- 5. ILL.2 Slide the canopy "B" up to rest against the ceiling and secure it in position with set screw "H".


PLEASE NOTE: USE THE ALLEN WRENCH PROVIDED INSIDE THE CANOPY"B".

- **6.** Center fitting "Z" on the steel cable and fit the two electric wires into the appropriate slots.
- 7. ILL.1-4 Remove the glassholder "N" from the socket assembly "M" by turning counterclockwise to unlock the two parts. Guide the socket assembly "M" through the glass diffuser "C". Slip glassholder "N" through the sochet "M"by turning it clockwise to the stop. Then back-out lock screw "P" from the hole in socket "M". Lower glass diffuser onto alassholder.
- **8.ILL 4** Back-out the blocking black screw "Y" of the opening of the lampholder. PLEASE NOTE: EACH GLASS IS AN INDIVIDUAL HANDBLOWN PLACE.
- 9. ILL.4 and 5. There fore each may have a different weight distribution. Should the glass not set level after installation, it can be levelled as illustrated by the arrows in ILL.5 by:
 - 1 rotating the glass while firmly holding the socket assembly and/or.
- 2. Sliding the cable retainer slightly with in its slot. After having balanced the glass diffuser properly secure the cable retainer by locking it with the set screw "P".
- **10.** Install the light bulb. Restore power.

MODULO S 22 - S 31 - S 35 - S 22/CL - CELINE S :

max 1x100W - 120V - E26 - TYPE A19

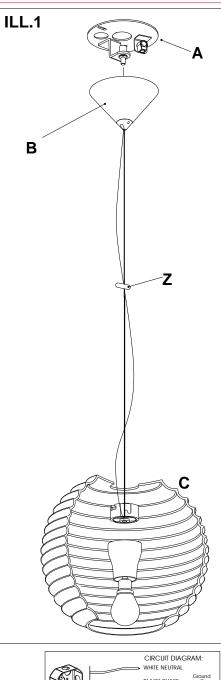



For additional informational please contact your local dealer or LEUCOS U.S.A. At: Tel. (732) 225-0010 - Fax (732) 225-0250

