



TAMPER RESISTANT TAPE

Installation Instructions

EverGlow Tamper Resistant Tape is available as hazard (striped) or guidance (full glow) film products. Luminance of HI150 is our standard product; HI300 is available for those applications requiring twice the luminance. This proprietary film can be installed successfully on most clean, dry uniform surfaces.




Common applications for the hazard tape include obstacles, pipes, fire fighting equipment extending into the exit path and other locations that require special notice. Guidance tape is typically used on door frames and hardware, base molding and handrails. Guidance tape can be used to mark stairs, but consideration should be given that tape is not as durable a product as our aluminum markers or coating products.

EverGlow tape DOES NOT LIFT and CANNOT BE REPOSITIONED once applied to a properly cleaned surface. All users should test a small piece of product for satisfactory adhesion prior to installing large portions.

Surface: the application surface **MUST** be clean of any contaminants and dry **BEFORE** the tape is applied. Use a non-ammonia containing cleaner such as 409, Fantastik or Simple Green. The surface must be uniform. Loose paint must be removed from painted surfaces. Surfaces which chalk or haze must be cleaned and sealed. Concrete surfaces must be cured and sealed. Oil, water or other contaminants expressed by concrete or other surfaces will attack the solvent based acrylic adhesive.

Temperature: Apply this tape at room temperature, typically at temperatures above 50 F (10 C). The solvent based acrylic adhesive takes 24 hours to set-up and gain maximum strength.

Application Method: Do not stretch this tape when applying to the surface. Remove only a few inches of the release liner as necessary to initially apply the tape and as you progress down the line. Do not touch the adhesive with your fingers before applying to the surface.

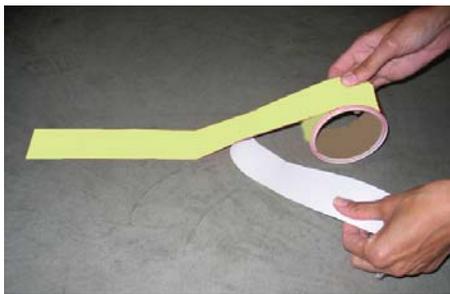

Firmly rub or roll the tape in the same direction as it was applied on the initial pass. Do not stretch or tear the tape. Repeat rubbing or rolling as necessary to insure tape has completely conformed to the surface.

Note. Performance of EverGlow tape depends entirely upon surface preparation. Consider all surfaces to be contaminated and follow surface prep instructions. Contaminants may include but are not limited to oils, grease, sand, dirt, dust, loose aggregate, curing compound, mud, soil and salt. All users should evaluate a small piece of tape for satisfactory adhesion PRIOR to full installation.