

# Accord<sup>®</sup> Mounting Clip

## Quick Reference Instructions

Affixing Mounting Clips for Accord Side Track Assemblies without thin metal backer.

Small sign modules up to 300mm x 300mm (12" x 12"), consistent with appropriate surface conditions, generally may be attached using the double sided adhesive tape which is factory applied to the back of the Side Tracks. It is recommended, however, that all modules beyond this size be attached with both VT (double-sided vinyl tape) and Mechanical Fasteners using the Side Track Mounting Clip.

If your sign assembly does not incorporate a thin metal backer,\* follow these installation steps:

1. Mark the mounting location with light pencil marks or removable tape, making sure the sign assembly is level and plumb.
2. Remove both the Header and Base SignBands to gain access to the Side Track profiles.
3. Peel protective liner from double-sided vinyl tape and press firmly into position.

▶ *Caution: Double-sided adhesive tapes are very aggressive and may be difficult to remove or reposition once they touch-off on the mounting surface. Make certain your sign is correctly positioned, level and plumb before pressing into position. Applying pressure will activate adhesive and better insure the adhesive conformation to the surface and insure it reaches its maximum holding potential.*

4. Attaching Mounting Clips: A minimum of four clips should be used for each directory or signs that exceed 300mm x 300mm (12" x 12").






Mounting Clips have a protruding 'pin' that matches holes in the plastic Side Track Clip. Align and press these into position. (Fig. 4)

Mark the hole location with a pencil or awl, then remove the clip.

5. Drill a hole for the anchor or screw appropriate for wall conditions. Set the anchor, then replace the Mounting Clip and insert the screw. Tighten snugly, but do not overtighten.

▶ *Mechanical Fasteners are not included with your order, owing to varying wall conditions. A wide range of suitable fasteners are available locally, and selecting the appropriate fastener is the responsibility of the installer.*

6. Reinstall Header and Base SignBands.

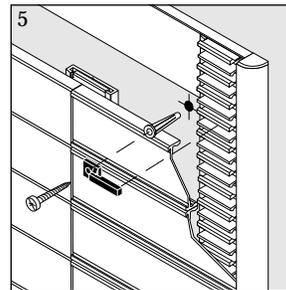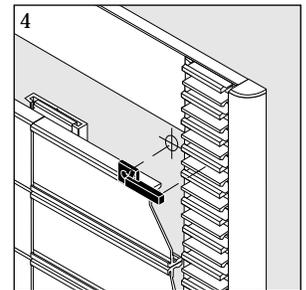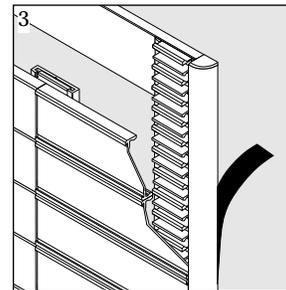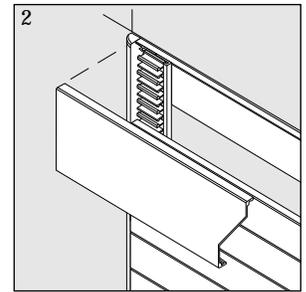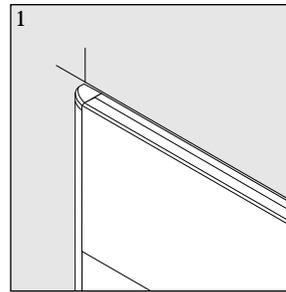

\*If your sign has a thin metal backer, simply drill a 3/16" diameter hole in four places for wall anchor locations.