


## Installation Instructions

### Corner Guards

CG-.75 · CG-1.5 · CG-2 · CG-3



1-877-MY-KWALU (695-9258) • kwalu.com

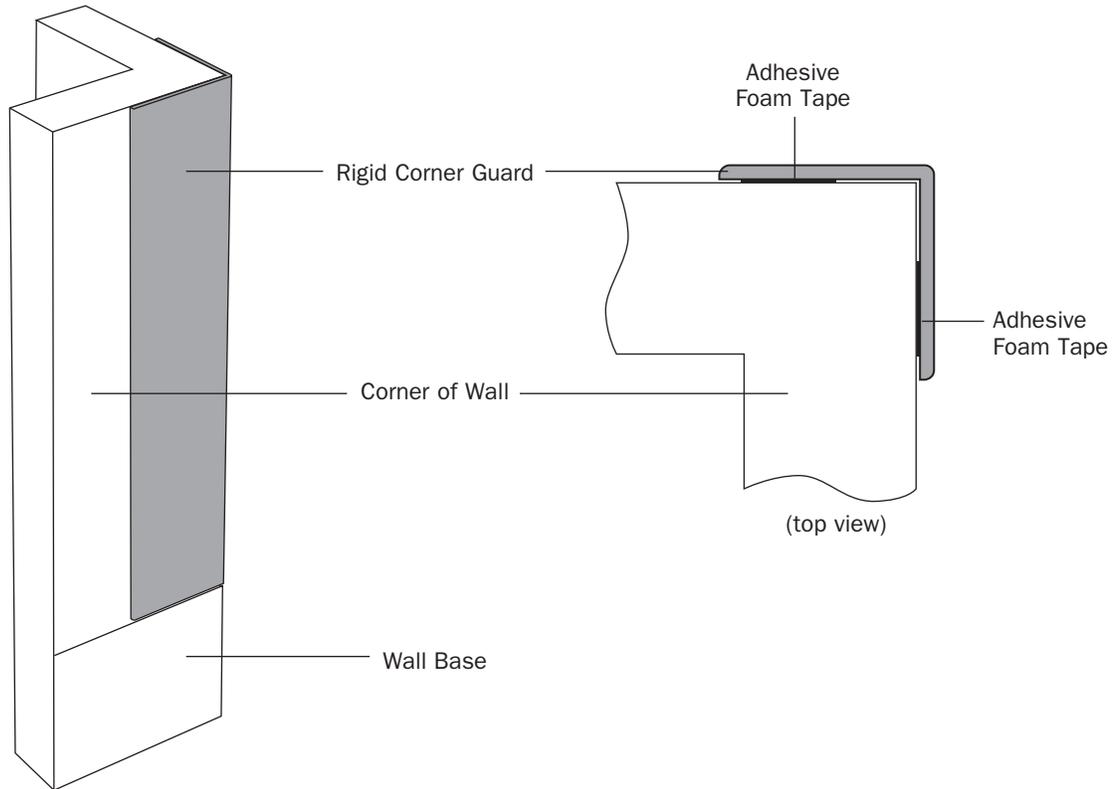

#### Delivery, Storage and Handling:

1. All materials will be delivered to the jobsite in original unopened factory packaging. Upon delivery, carefully inspect all packages to ensure that all required materials have been delivered in acceptable condition.
2. Store all materials flat in a dry, environmentally controlled area between 65°F and 80°F; protect from direct sunlight and the elements.
3. Do not install corner guards until all facility finish work has been completed, including painting.
4. All materials must be acclimated to installation conditions at least 24 hours before installation is to begin.

#### Preparation:

1. Ensure that all wall surfaces and wall protection system components are free from moisture, dust, dirt, wax, grease, and wet, loose or chipping paint, etc.
2. Ensure that all walls are straight, plumb and free of imperfections.

**Tape-on Installation:**

1. Peel off the protective paper backing on the factory-applied adhesive foam tape on both wings of the corner guard.
2. Align the bottom of the corner guard with the top edge of the cove base molding at the apex of the wall corner.
3. Moving slowly upward, press the corner guard into position, making sure to keep the apex of the corner guard in alignment with the apex of the wall corner.
4. Apply firm pressure to each wing of the corner guard along its entire height to ensure maximum adhesion to the wall surface.
5. Gently rub each wing of the corner guard with a clean, soft cloth to leave a clean surface.

**Optional Adhesive Application:**

1. Carefully apply a thin bead of construction adhesive (Kwalu strongly recommends the use of Loctite Power Grab Heavy Duty or Loctite Power Grab All-Purpose Construction Adhesive. Other adhesives may cause a damaging reaction with the Kwalu product. Use of other adhesives will void the product warranty.) in a wavy pattern to the back of each wing of the corner guard.
2. Align the bottom of the corner guard at the apex of the wall corner with the top edge of the cove base molding.
3. Moving slowly upward, press the corner guard into position, making sure to keep the apex of the corner guard in alignment with the apex of the wall corner.
4. Apply firm pressure to each wing of the corner guard along its entire height to ensure maximum adhesion to the wall surface.
5. Wipe away any excess adhesive along both edges of the corner guard.
6. Gently rub each wing of the corner guard with a clean, soft cloth to leave a clean surface.