




© 1997 Fire Farm, Inc.
www.FireFarm.com
Made in the USA


Assembly Instructions

SCROLL ARM


Designed by CW designs of Sausalito

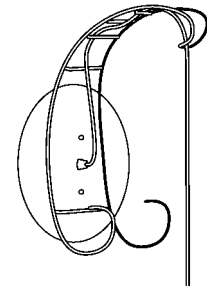


Parts Included: (pictures not to scale)

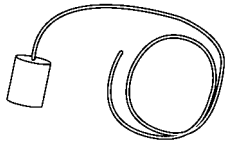

(1) Socket Cord

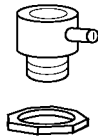


(1) Cord Grip Assembly

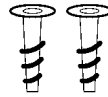

(2) Anchors



(2) Screws

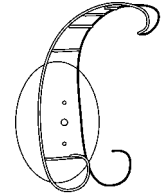

(1) Scroll Arm

Assembly:

WARNING: RISK OF FIRE AND ELECTRIC SHOCK. THIS PRODUCT IS TO BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY.

- (figure 1)** Starting with the end of the cord without the socket, weave the cord through rungs of the scroll arm.
- (figure 3)** Find out how long the cord should hang. Do this by temporarily holding the scroll arm in the desired position, and viewing the height of the socket. The position of the socket tells where the pendant will be.
- (figure 1 & 2)** When the desired hanging length of the cord is obtained, secure it with the cord grip assembly if you have the hardwire design. If you have the Pin Up design, let the cord hang down the wall.
- Install the sconce base. This should be installed by a qualified electrician if you have the hardwire design, (See separate hardwire installation instructions.) If you have the pin-up design use the sheet rock screws and anchors to attach the fixture to the wall.

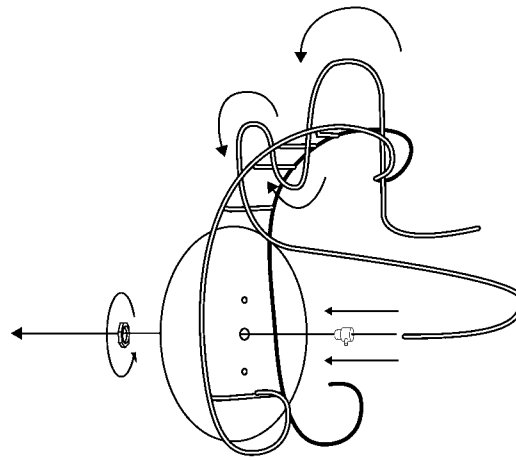


Figure 1

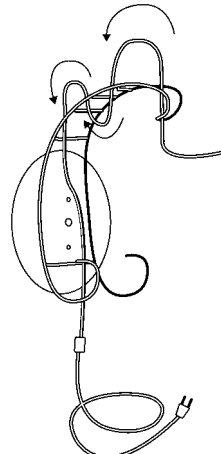


Figure 2

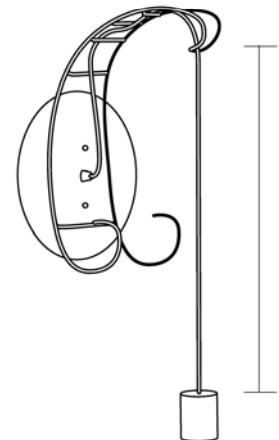


Figure 3