




© 2002 Fire Farm, Inc.
www.FireFarm.com
Made in the USA

Assembly Instructions

Mani/Jak VANITY SCONCE

31-V
32-V

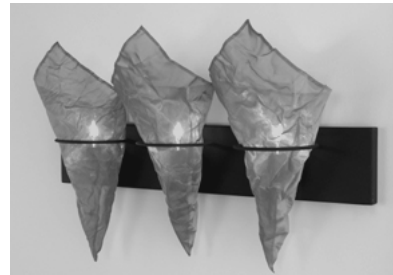

Parts Included:

- 1 – Wall sconce installation kit
- 1 – Vanity sconce base assembly
- 3 – Shades for Vanity Sconce
- 3 – Bulbs

Assembly:

1. **(figure 1)** Install sconce base using separate hardware installation instructions included in sconce kit.
2. Wash and dry hands carefully before handling mesh shades. Wear provided plastic gloves when handling mesh shades to protect them from the normal acids and oils of your hands.
3. If you have the **Jak** design, feel free to manipulate, bend or squeeze the shade to a desired shape. If you have the **Mani** design, gently crease the folds of the shade as necessary.
4. **(figure 2)** Spread open the back of the shade with your hand. Pull the shade into the coil of the sconce base. The opening in the back of the shade should slip around the socket.
5. Insert bulbs

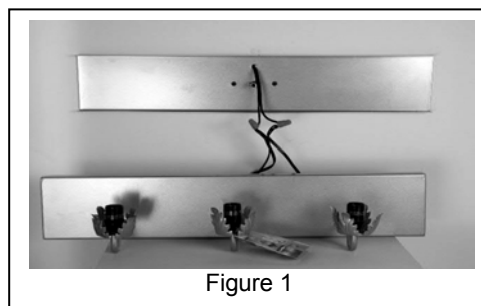


Figure 1

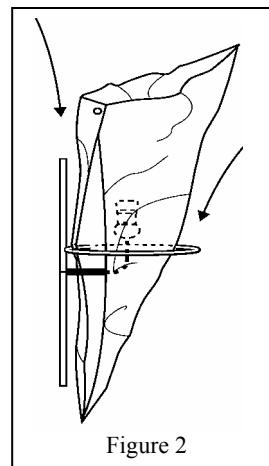


Figure 2

BULBS: Use 120V 60W type CA candelabra base bulb

SAFETY INFORMATION

SAFETY

We have designed your lamp to meet the highest **UL and CUL** safety standards.

If your lamp does not have a plug:

WARNING: RISK OF FIRE AND ELECTRIC SHOCK. THIS PRODUCT IS TO BE INSTALLED ONLY BY A QUALIFIED ELECTRICIAN.