


INSTALLATION INSTRUCTIONS


P30921


THANK YOU FOR CHOOSING KALLISTA

We appreciate your commitment to Kallista quality products. Please take a moment to review this manual before you install your Kallista product. If you encounter any installation or performance problems, please do not hesitate to contact us at the phone number listed at the bottom of the page.

BEFORE YOU BEGIN


 **DANGER: Risk of personal injury.** To avoid possible electrical shock, the electricity must be turned off at the circuit breaker or fuse box before attempting any installation procedure.

 **DANGER: Risk of personal injury.** To avoid possible electrical shock, the outlet box must be properly grounded.


 **WARNING: Risk of property damage.** to avoid possible risk of fire, this fixture has been rated for bulbs up to 40-watts. Do not exceed this rating.

- Prior to installation, wall sconce and shade and inspect it for damage. If the product is damaged, please contact Kallista immediately at the phone number listed at the bottom of the page.
- Observe all local electrical and building codes.
- It is strongly recommended that a professional electrician install this fixture.
- This fixture is for indoor use only.
- Kallista reserves the right to make revisions in the design of plumbing products without notice, as specified in the Price Book.

TOOLS AND MATERIALS

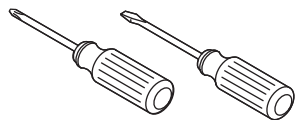

Assorted
Screwdrivers

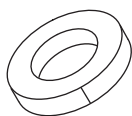

Electrical
Tape



Hex
Wrench



40 Watt A-15
Type Light Bulb



Plastic Wire
Connectors




Mounting Screws (2)
(usually supplied
with junction box)

INSTALLATION INSTRUCTIONS

P30921

1. INSTALL THE MOUNTING BRACKET


- Gently pull the wires from the junction box in your wall and allow the wires to hang freely.
- Place the flat side of the mounting bracket flush against the junction box.
- Align the holes in the mounting bracket with the holes in the junction box.
- Make sure the mounting bracket is plumb. Attach the mounting bracket to the junction box with the mounting screws.

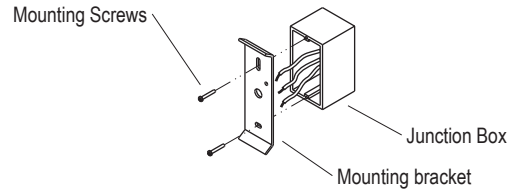

⚠ Danger: Risk of personal injury. To avoid possible electrical shock, the outlet box must be properly grounded.

- Attach the junction box GROUND WIRE (green or bare wire) to the bare copper GROUND WIRE of the fixture. Fasten with a plastic wire connector and wrap with electrical tape. If there is no ground wire from the junction box, wrap the fixture's ground wire (copper) around the green screw on the mounting bracket and tighten the screw.
- Attach the neutral wire (white) from the fixture to the neutral wire (usually white) of the outlet box. Fasten the neutral wires together with a plastic wire nut and wrap with electrical tape.
- Attach the hot wire (black) from the fixture to the hot wire (usually black) of the outlet box. Fasten the hot wires together with a plastic wire nut and wrap with electrical tape.
- Verify all plastic wire nuts are securely fastened and wire strands are not exposed.
- Position the back plate of the fixture over the mounting bracket.
- Carefully place the wire connections neatly behind the back plate.

	Fixture	Outlet
Ground	Plastic Wire Nut Bare	Green or Bare Copper
Neutral	White	White
Hot	Black	Black

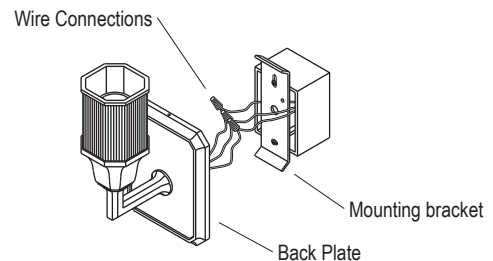

INSTALLATION INSTRUCTIONS

P30921

2. ATTACH SCONCE TO THE MOUNTING BRACKET

- Attach back plate to mounting bracket with set screws.
- Install light bulb in socket.
- Install shade support bracket.
- Place the lampshade over the sconce so that it rests on the shade support bracket.
- Screw finial onto threaded rod.
- Turn electricity back on at circuit breaker or fuse box.
- Check for proper operation.

