



INSTALLATION INSTRUCTIONS

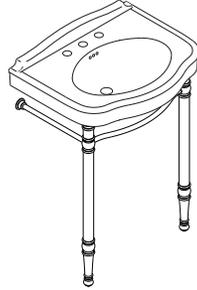

P66272, P74302

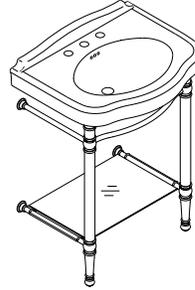

P66272, P74304, P74019

INSTALLATION INSTRUCTIONS

THANK YOU FOR CHOOSING KALLISTA

We appreciate your commitment to Kallista quality products. Please take a moment to review this manual before you install your Kallista product. If you encounter any installation or performance problems, please do not hesitate to contact us at the phone number listed at the bottom of the page.

BEFORE YOU BEGIN

- Observe all local plumbing and building codes.
- Prior to installation, unpack the new lavatory and console and inspect them for damage. Return the lavatory and console to their protective cartons until you are ready to install them.
- These instructions are for installing the console table to wood frame construction. For other installations, supply suitable bracing and fastening devices of sufficient size and strength.
- Sufficient support behind the finished wall, such as 2x6 wall bracing, is required for proper installation.
- This installation is designed to be done with a minimum of two people. Do not install this fixture alone.
- All dimensions given assume that the floor and walls are square, plumb, and level. Make appropriate adjustments for other conditions.
- Kallista reserves the right to make revisions in the design of products without notice, as specified in the Price Book.

TOOLS AND MATERIALS




Tape Measure



Assorted Screwdrivers



Adjustable Wrench

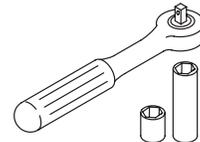


Socket Wrench W/Sockets




Pencil



Drill



Level

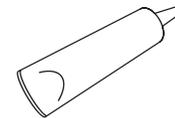


Silicone Sealant

INSTALLATION INSTRUCTIONS


1. PREPARE THE SITE

- Rough-in the water supply lines and the drain piping.
- Install a minimum of a 2x6 as a wall brace to provide support for the wall bracket. The brace should be the same length as the console table, 26" and should be positioned 35-1/4" from the finished floor to the top edge of the board. The center of the wall brace should be in-line with the drain outlet.
- Finish the wall.
- Mark the centerline on the floor and the wall.
- Mark the location of the holes on the floor for the feet anchors.
- Drill a hole 1/4" D. x 1/2" deep, in the finished floor for each foot anchor. The holes should be 15" from the wall and 10-1/2" from the centerline.
- Mark and drill the holes for the towel bar escutcheons.

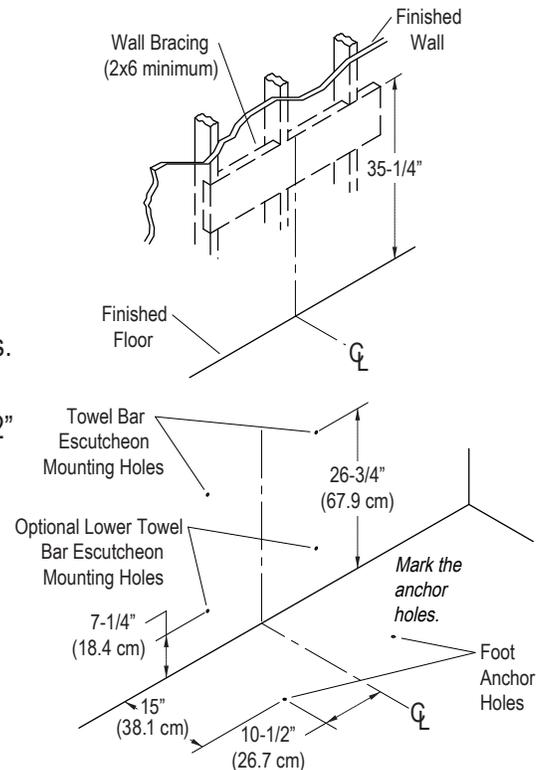

2. INSTALL THE TOWEL BAR ESCUTCHEONS

- Install the anchors into the drilled holes.
- Attach the escutcheons to the wall with the screws.

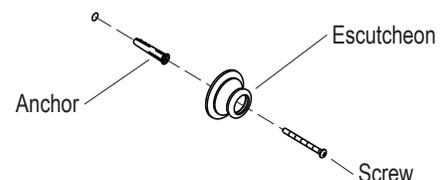


INSTALLATION INSTRUCTIONS

3. ASSEMBLE THE FRONT CONSOLE TABLE LEGS

NOTE: Moistening O-rings with a drop of water will help installation. Use only water.

NOTE: If your console table assembly includes the optional lower towel bars, be sure to orient the table legs so that two towel bar holes are facing the back and one towel bar hole is facing the center.

- Ensure that the O-rings are installed in the towel bar holes in the table legs.
- Insert curved towel bar into one of the table legs and attach it with the screw provided. Repeat with the second table leg.

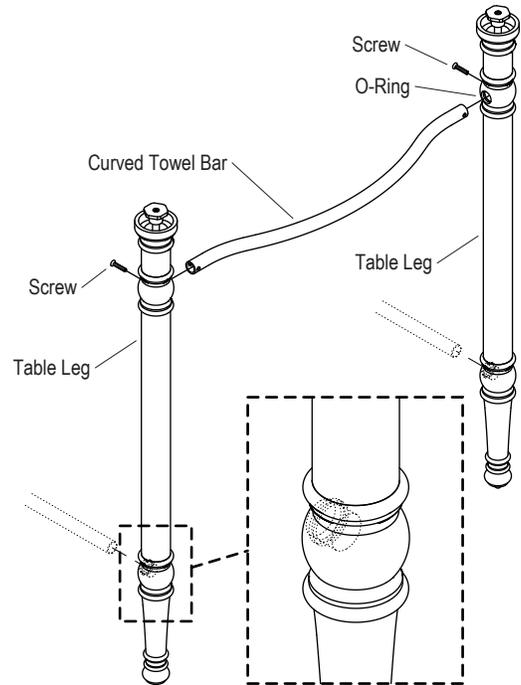


INSTALLATION INSTRUCTIONS

4. INSTALL THE SIDE TOWEL BARS

NOTE: Moistening O-rings with a drop of water will help installation. Use only water.


- ❑ Ensure that the O-rings are installed in the towel bar holes in the table legs and towel bar escutcheons.
- ❑ Turn height adjustment pegs all the way into the table legs and set the table legs into the holes in the floor.
- ❑ Tip the leg assembly away from the wall and insert all of the remaining towel bars into the leg assembly.
- ❑ IF necessary, hand-loosen decorative foot piece to align the towel bar hole in the lower hubs with the escutcheons. Align and hand-tighten decorative foot piece.
- ❑ **With an assistant**, tip the leg assembly forward and slide the lower towel bars (if included) into the escutcheons, being careful not to scratch the towel bars.
- ❑ **With an assistant**, tip the legs assembly vertical while inserting the top towel bars into the escutcheons, being careful not to scratch the towel bars.

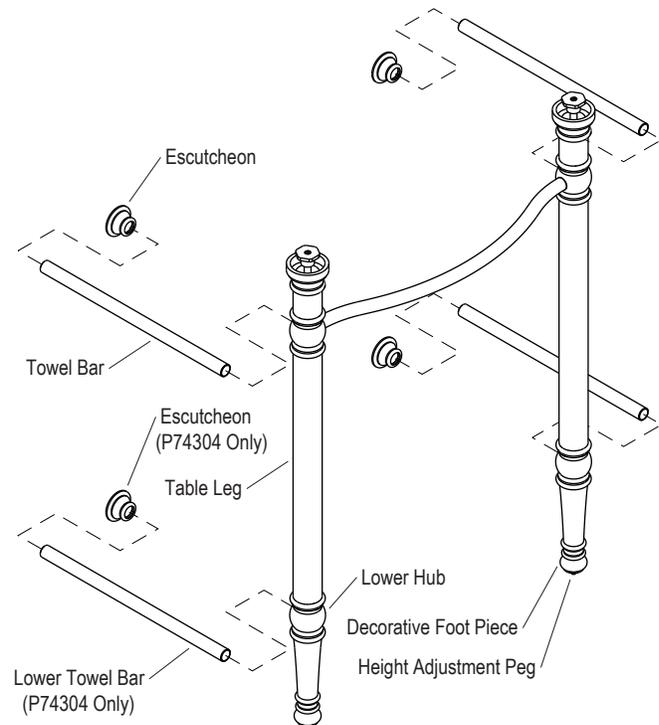

INSTALLATION INSTRUCTIONS

5. INSTALL THE LAVATORY

- Make sure the legs are plumb and level across the leveling pads.
- With an assistant or two**, temporarily install lavatory. (32.5" recommended height for wall bolts)
- With your assistant holding the lavatory**, confirm the lavatory is level front to back and side to side, adjusting the leveling pads if necessary.
- With your assistant still holding the lavatory**, mark the location of the mounting slots.
- Remove lavatory, and set aside. Drill holes for the mounting bolts.
- Put a dab of silicone on the adjustable pegs, replace and secure the lavatory to the wall with bolts and washers. **DO NOT** overtighten bolts.
- Verify the legs are still plumb before the silicone dries.
- If using, place rack and glass shelf on bottom towel bars. Ensure brazed joint on rack is to the back and the vinyl tubes are placed evenly. (One tube should cover the brazed joint, others spaced similarly.)

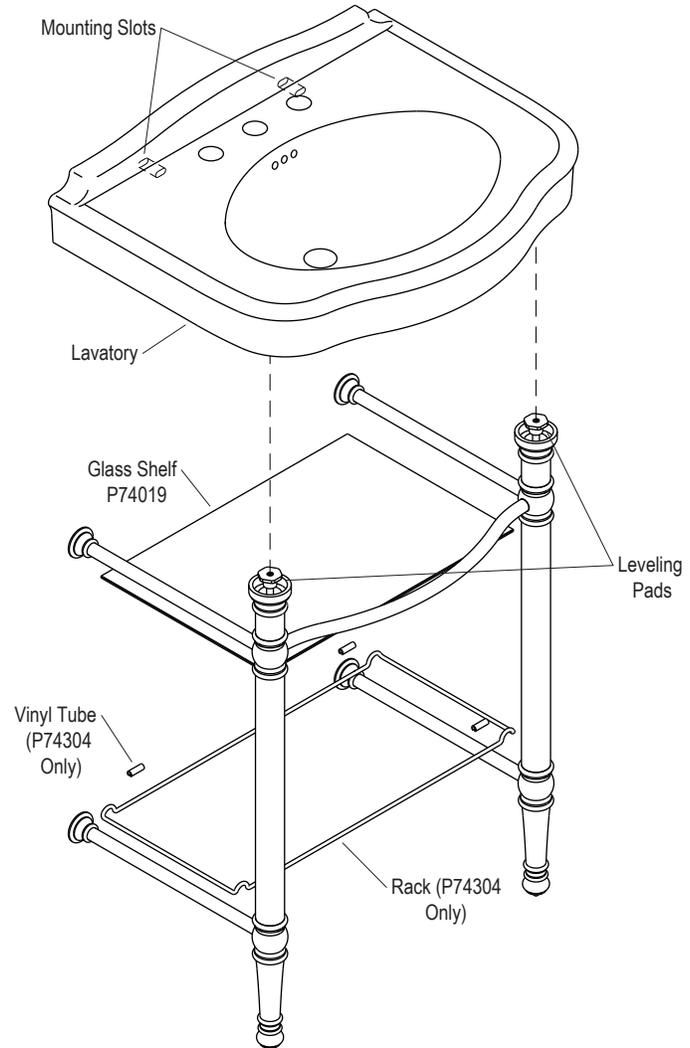

6. COMPLETE THE INSTALLATION

- If desired, apply a bead of caulk or silicone sealant where the lavatory meets the wall.
- Install the faucet and drain according to the manufacturer's instructions.
- Connect the water supply and check for leaks.