

## INSTALLATION INSTRUCTIONS

P74200, P74201, P74202,  
P74203, P74207

## THANK YOU FOR CHOOSING KALLISTA

We appreciate your commitment to Kallista quality products. Please take a moment to review this manual before you install your Kallista product. If you encounter any installation or performance problems, please do not hesitate to contact us at the phone number listed at the bottom of the page.

## BEFORE YOU BEGIN

- ☐ The Vir Stil™ Vanity consists of the following:
    - P74201 - Wood Vanity
    - P74202-00 - Metal Base with (4 ea.) Handles
    - P74200 - Stone Top
    - P72040 - Undercounter Basin
  - ☐ The Vir Stil™ 1.5 Vanity consists of the following:
    - P74203 - 1.5 Wood Vanity
    - P74202-LG - Large Metal Base with (5 ea.) Handles
    - P74207 - Large Stone Top
    - P72040 - Undercounter Basin
  - ☐ Prior to installation, unpack all products and inspect them for damage. If product is damaged contact Kallista's Customer Service immediately at the phone number listed at the bottom of the page
- NOTE:** These instructions are for the Vir Stil™ Vanity and Vir Stil™ 1.5 Vanity. In figures B, D, E and I, only the Vir Stil™ Vanity is shown. The steps to install the Vir Stil™ 1.5 Vanity are the same.
- ☐ This installation will require a minimum of two people. Do not install this fixture alone.
  - ☐ The stone console lavatory can be installed with three different faucet configurations:
    - "Single-Hole" for a monoblock faucet
    - "Three-Hole" for a widespread faucet
    - "No-Hole" for a wall-mount faucet
  - ☐ Refer to your faucet installation instructions to determine which configuration is necessary for your lavatory.
  - ☐ To create the holes necessary for your faucet installation, refer to the instructions in section 2.
  - ☐ Kallista reserves the right to make revisions in the design of plumbing products without notice, as specified in the Price Book.

### INSTALLATION INSTRUCTIONS

P74200, P74201, P74202,  
P74203, P74207

#### 1. ATTACH VANITY TO METAL BASE

- ☐ Assemble the metal base (Figure A).
- ☐ Position metal base in desired final location. If the floor is uneven, the metal base may be leveled by adjusting the leveler located in the base foot (Figure C). This may require a pair of pliers.

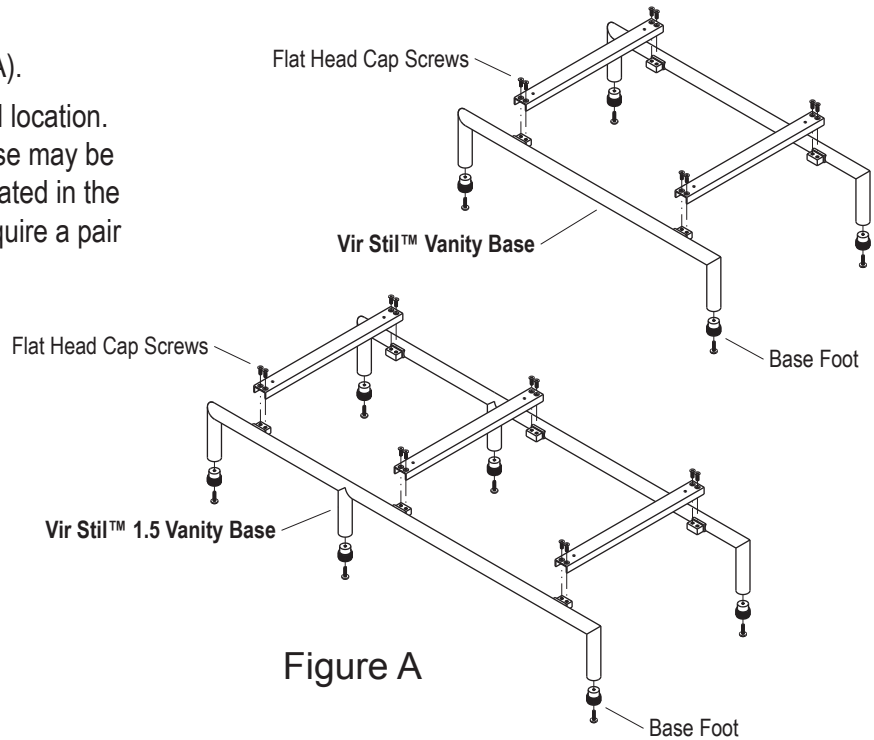


Figure A

- ☐ Mount the vanity to the metal base using the supplied wood screws (Figure B). It is a two person task to lower the vanity in place.

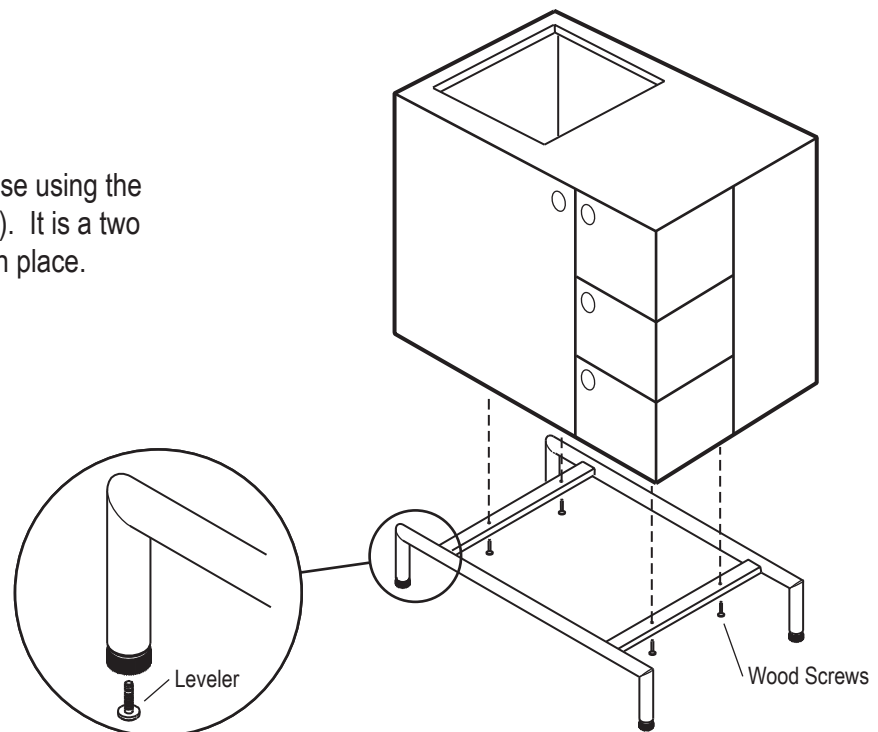


Figure C

Figure B

## INSTALLATION INSTRUCTIONS

P74200, P74201, P74202,  
P74203, P74207

### 2. STONE TOP HOLE FABRICATION

- ☐ Three faucet holes have been partially drilled from underside of the stone top (Figure D).

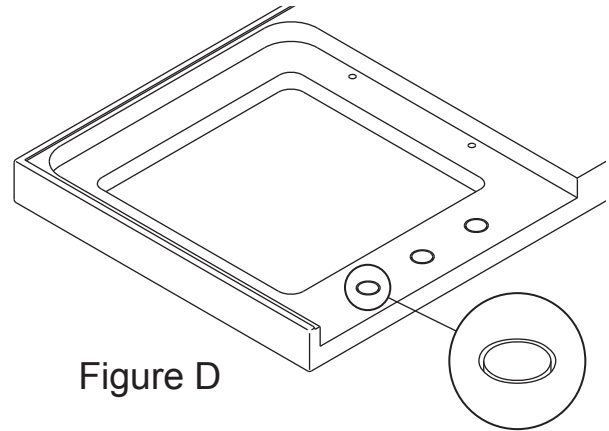


Figure D

- ☐ Turn the stone top upright. On the top “show” surface of the stone top, locate the center of the required faucet holes. Using a compass or circle template, draw a circle for the required holes (Figure E).

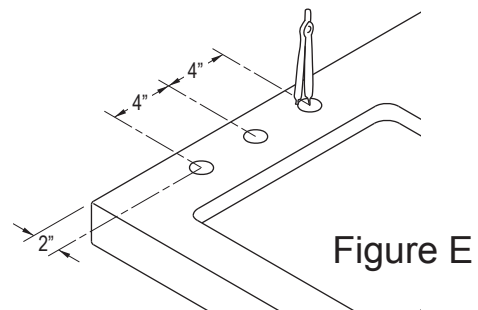


Figure E

- ☐ Using a small hammer, create the faucet hole(s) by gently tapping the stone within the circles until the stone breaks away (Figure F).

**NOTE: Do NOT strike the stone with too much force. Do NOT strike from the bottom side of the stone top. This will damage the top surface of the stone.**

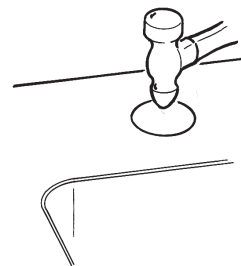


Figure F

- ☐ Using a file or sanding cylinder, complete the removal of stone material to create a clean round hole (Figure G).

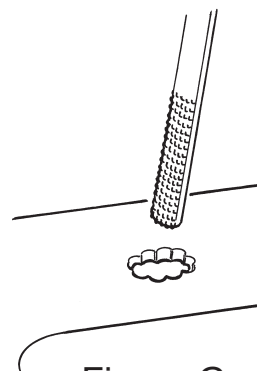


Figure G

## INSTALLATION INSTRUCTIONS

P74200, P74201, P74202,  
P74203, P74207

### 3. COMPLETE INSTALLATION

- ☐ Gently lower the stone top onto the vanity. This is a two person task (Figure H). **NOTE:** It is recommended that the plumber install the faucet and undercounter basin **prior** to positioning the stone top on the vanity.
- ☐ Prior to mounting the handle to the door, place a **SMALL** amount of adhesive to the threading of the handles (Figure I). **NOTE: Only three drops of adhesive are required.** Screw the handles together with the male threads on the exterior side (Figure I). Using a damp rag, wipe away any excessive adhesive immediately.

