


VertiTrack® VTD and VTX Installation Instructions


Vertical Deflection @ Head of Wall

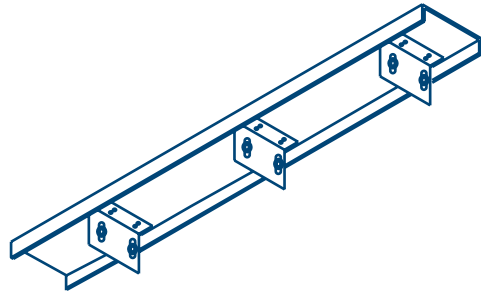

VertiTrack® VTX/VTD






Standard Step Bushing
(Do not remove
from slots unless
otherwise directed)

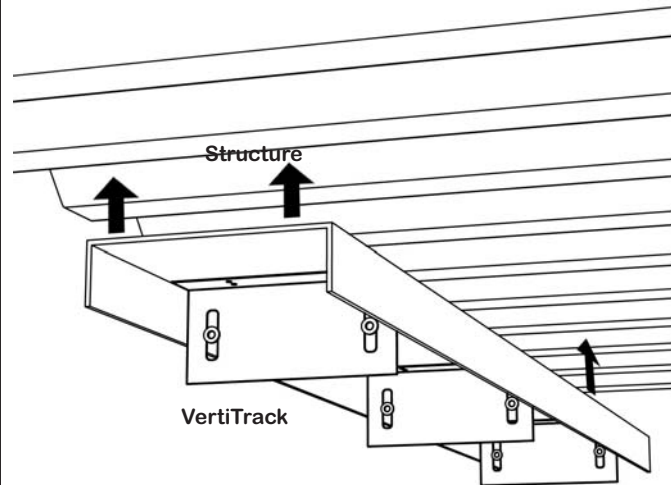

Refer to Design Drawings for
fastener type, size, and amount.

Fasten through each clip to structure.

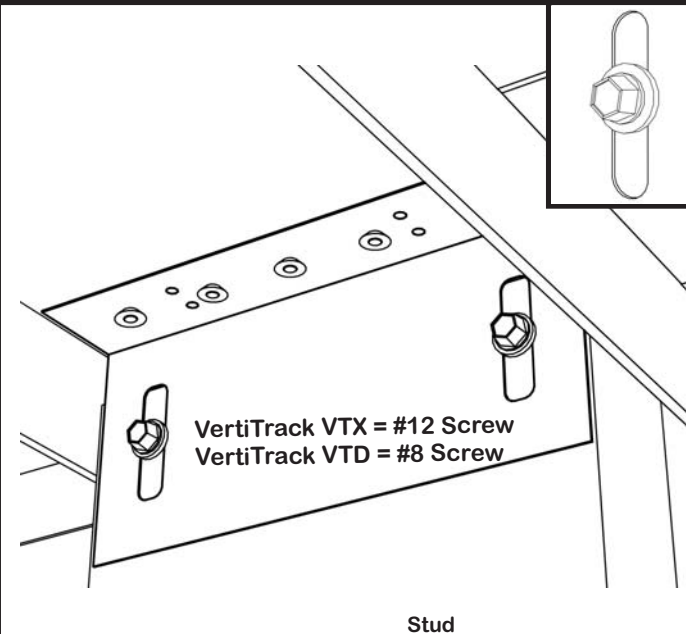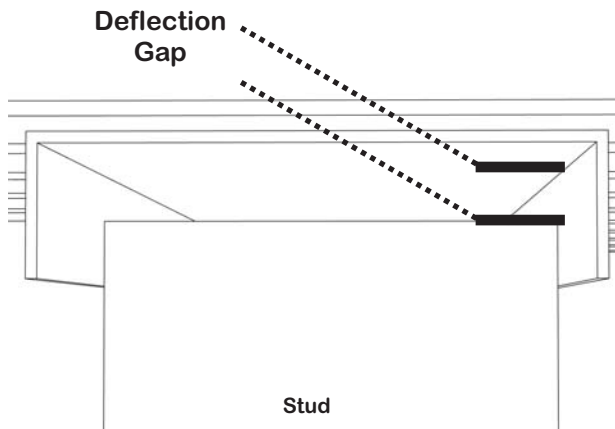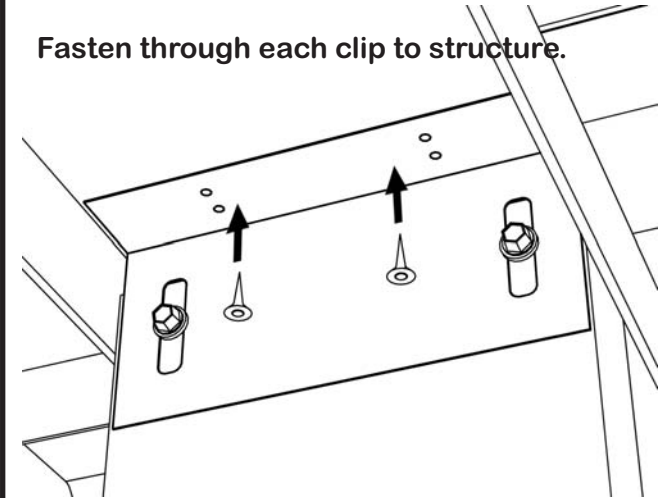

VertiTrack VTX = #12 Screw
VertiTrack VTD = #8 Screw

Stud

For Installation, Technical, or
Submittal questions, contact TSN
at (888) 474-4876.

Email us at tsn@steelnetwork.com.

Visit www.steelnetwork.com
and discover the value of each
TSN Solution.