


INSTRUCTIONS FOR INSTALLING 15600, 15601, 15603 THROW LATCH PACK

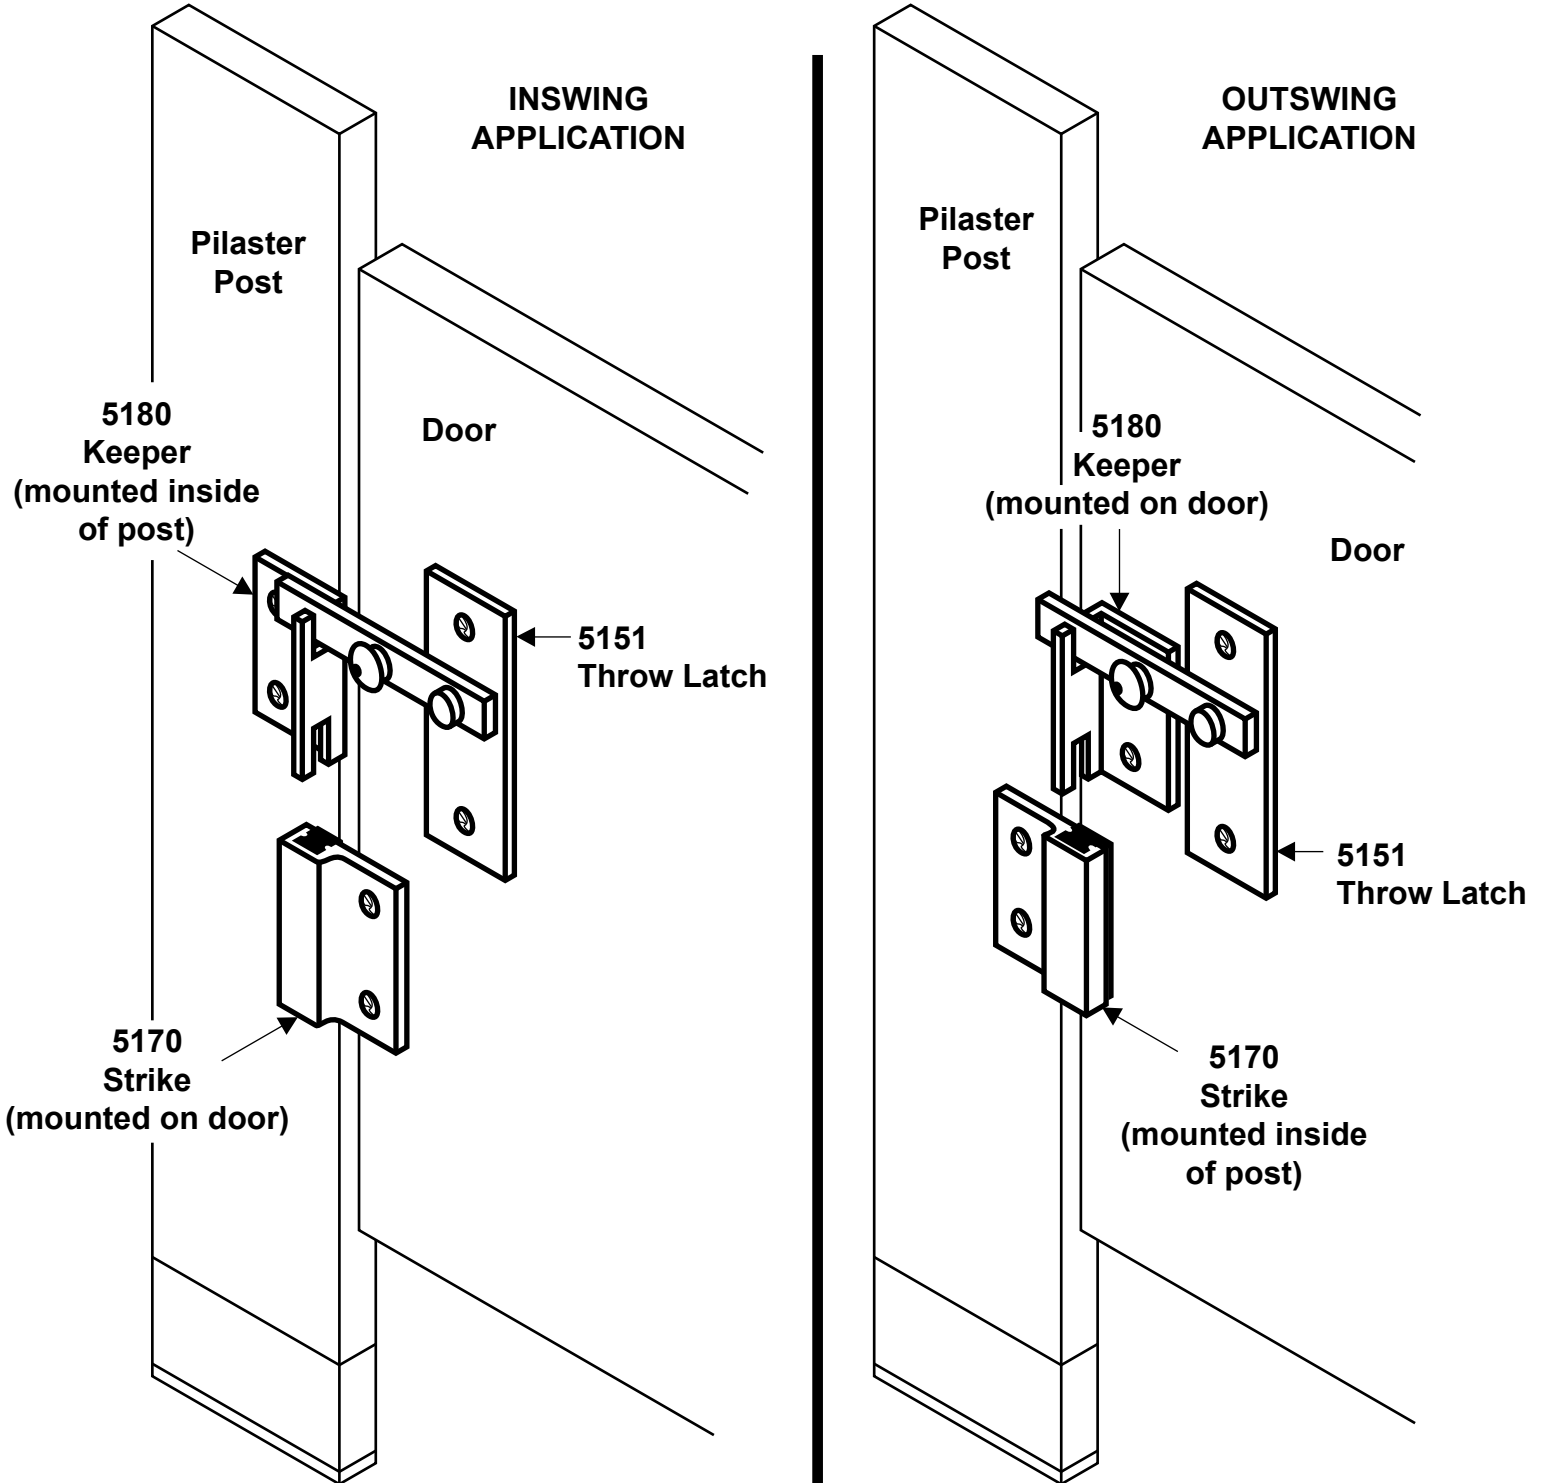

**NOTE: 5400 DOOR PULL MOUNTED ON OUTSIDE OF DOOR
(HOLES ARE TO LINE UP WITH HOLES ON MOUNTING
PLATE OF THROW LATCH)**