

Installation Instructions

50AA Aluminum Wall Guard

FIG. 1

Please read all instructions before installing wall guard.

1. Determine height of wall guard. Deduct 1/4" and snap chalk line. Position top edge of bracket against chalk line. Transfer mounting holes to wall. See Figure 1.


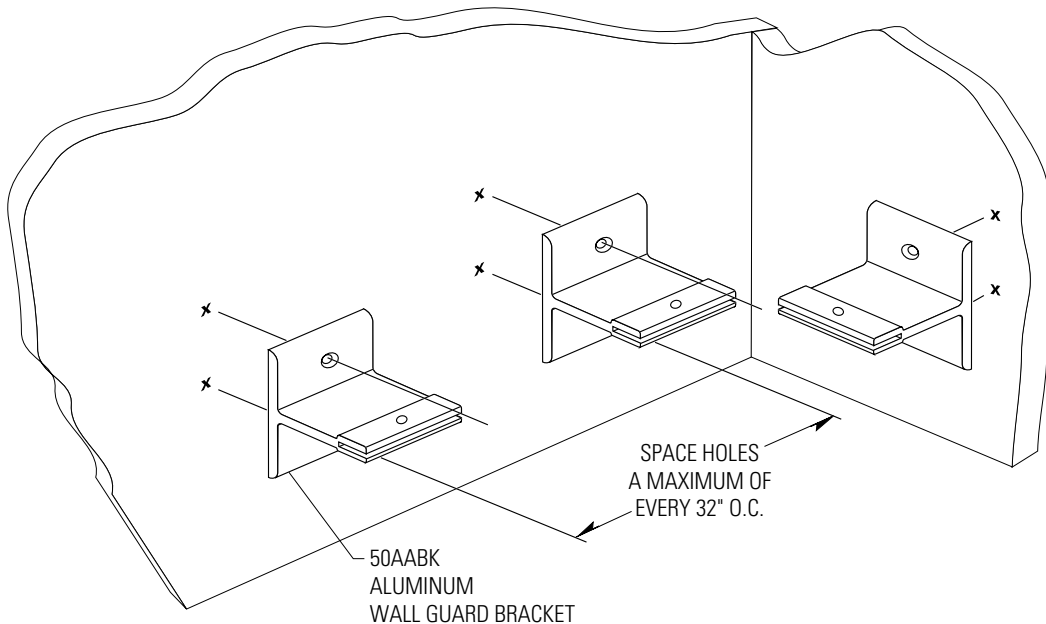


FIG. 2


2. Drill marked holes with 3/4" drill bit for toggle bolts (drywall installation) or 1/2" drill bit for lead anchor (concrete wall installation). Mount brackets to wall, tighten screws to secure. See Figure 2.

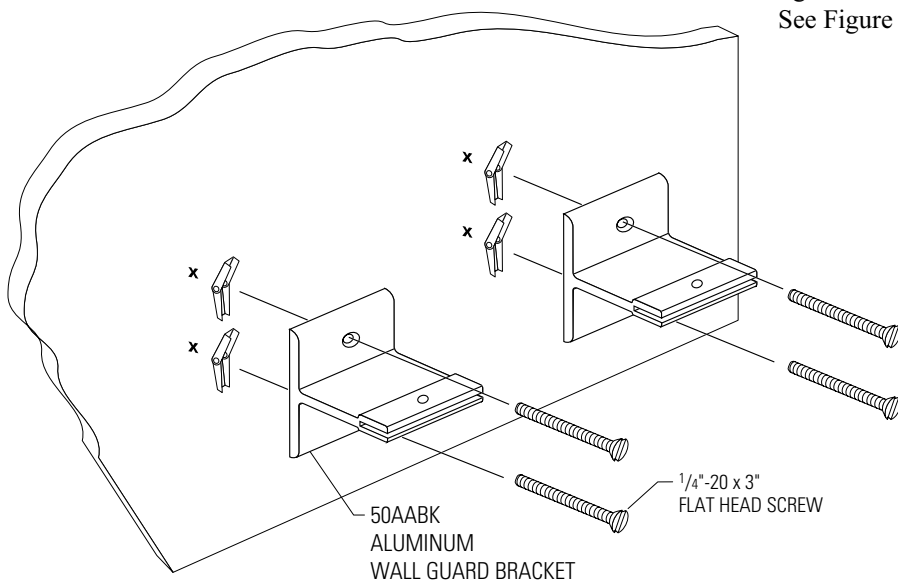

Installation Instructions

50AA Aluminum Wall Guard

FIG. 3

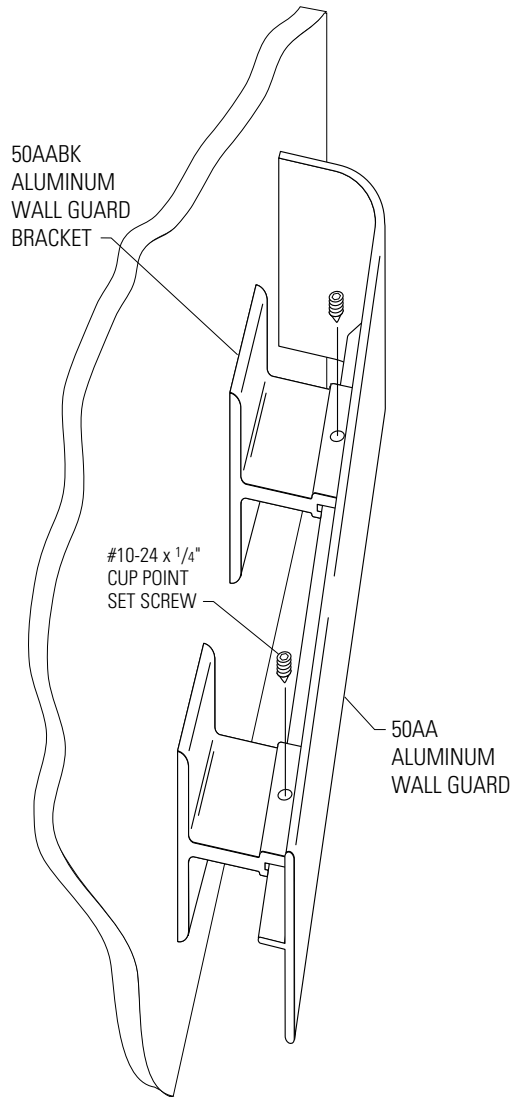

3. Position wall guard into mounting brackets. Tighten the wall guard into the brackets with set screws. See Figure 3.

Note: When joining two sections of wall guard, use a splice bracket. The mounting tab of each wall guard section slides halfway into the mounting slot.

