

Installation Instructions

S510 Directory Sign

FIG. 1

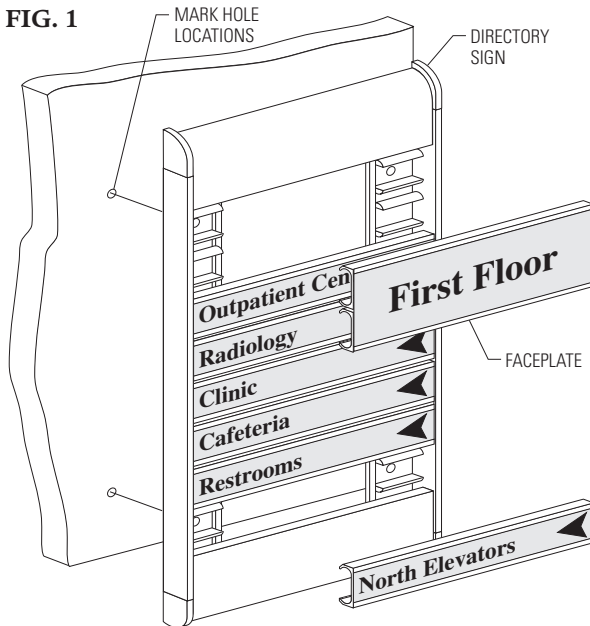


FIG. 1a

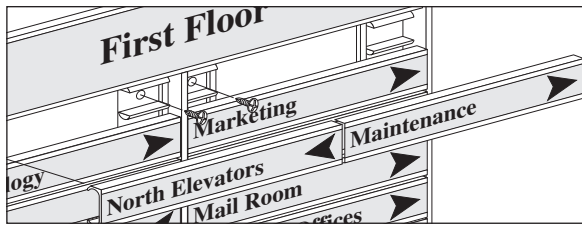


FIG. 2


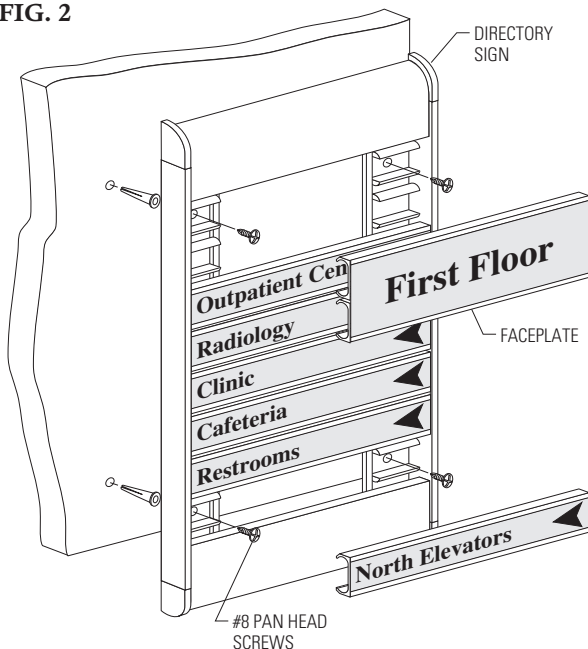


FIG. 3

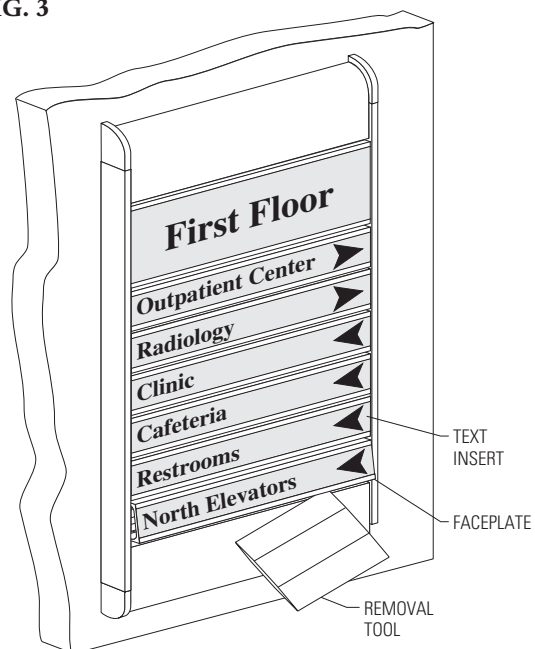

1. Install directory sign level and plumb at the required height.
2. Remove faceplates at the top and bottom of the directory revealing the mounting holes in the sidetracks. Using the directory as a template, position the directory on the wall and transfer the hole locations to the wall. See Figure 1.

Note: With multi-column directories remove plates exposing the mounting holes in the center track and transfer those hole locations to the wall. See Figure 1a.
3. Drill 1/4" holes in the wall and insert mounting anchors in the holes. Attach the directory to the wall with #8 pan head screws. Replace faceplates. See Figure 2.

Changing the inserts:

1. Insert the removal tool between faceplates and push downward on the tool, popping out the faceplate. Carefully pull out the faceplate, removing it from the clip. Replace the text insert and snap the faceplate back into the frame. See Figure 3.