


Clickeze® Window Top Treatments

KELSEY

- ▶ 14" drop at center
- ▶ 3", 6" or 8" returns
- ▶ Velcro attachment
- ▶ Easily removed for cleaning
- ▶ L-bracket installation
- ▶ Ceiling mount bracket available
- ▶ Hardware included

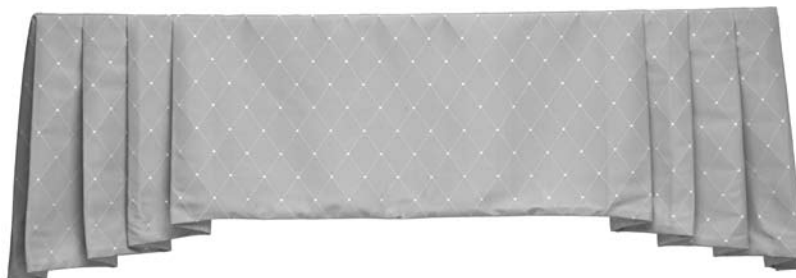


SHEFFIELD

- ▶ 14" drop at center
- ▶ 3", 6" or 8" returns
- ▶ Bottom band with contrasting fabric
- ▶ Velcro attachment
- ▶ Easily removed for cleaning
- ▶ L-bracket installation
- ▶ Ceiling mount bracket available
- ▶ Hardware included



INVERTED BOX PLEAT

- ▶ 14" drop at center
- ▶ 3", 6" or 8" returns
- ▶ Bottom band with contrasting fabric
- ▶ Velcro attachment
- ▶ Easily removed for cleaning
- ▶ L-bracket installation
- ▶ Ceiling mount bracket available
- ▶ Hardware included

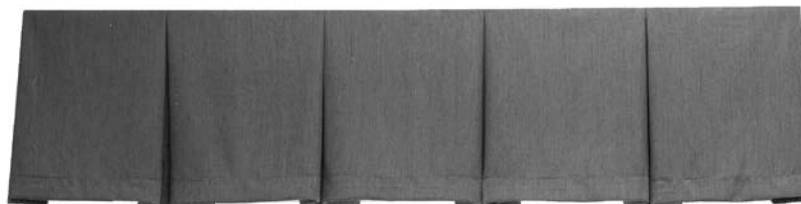

SWAG/CASCADE

- ▶ 19" drop at center
- ▶ 3", 6" or 8" returns
- ▶ Single or double styles available
- ▶ Velcro attachment
- ▶ Easily removed for cleaning
- ▶ L-bracket installation
- ▶ Ceiling mount bracket available
- ▶ Hardware included



Single Style Shown



IPC.605/Rev.3

P.O. Box 406 · Muskego, Wisconsin 53150 USA
inprocorp.com
Nationwide 800.222.5556/Fax 888.715.8407
International Sales 262.679.5521/Fax 262.679.5524

INPro
CLICKEZE
Privacy Systems/Soft Goods

Clickeze Window Top Treatments

Suggested Specifications

PART 1 - GENERAL

1.01 SUMMARY

A. Top Treatment

1.02 SECTION INCLUDES

A. Top Treatment

1.03 REFERENCES

A. National Fire Protection Association (NFPA)

1.04 SYSTEM DESCRIPTION

A. Performance Requirements: Provide top treatment fabrics that conform to the following requirements of regulatory agencies and the quality control of Clickeze, InPro Corporation.

1. Fire Performance Characteristics: Provide top treatment fabrics that conform with NFPA 701, Fire Tests or Flame and Resistant Textiles and Films.

1.05 SUBMITTALS

A. Product Data: Manufacturer's printed product data for each type of top treatment board specified.

B. Fabric Samples: Swatch cards of fabric samples illustrating fabric color and weave.

C. Manufacturer's Care Instruction: Printed care instructions for each top treatment board.

1.06 DELIVERY, STORAGE AND HANDLING

A. Deliver materials in unopened factory packaging to the jobsite.

B. Inspect materials at delivery to assure that specified products have been received.

C. Store in original packaging in a climate controlled location away from direct sunlight.

1.07 PROJECT CONDITIONS

A. Environmental Requirements: Products must be installed in an interior climate controlled environment.

1.08 WARRANTY

A. Standard Clickeze Limited Warranty against material and manufacturing defects.

PART 2 - PRODUCTS

2.01 MANUFACTURER

A. Acceptable Manufacturer Clickeze, InPro Corporation, PO Box 406 Muskego, WI 53150 USA; Telephone: 800.222.5556, Fax: 888.715.8407, www.inprocorp.com

B. Substitutions: Not permitted

C. Provide all top treatment boards from a single source.

2.02 MATERIALS

A. Top treatment

1. Fabric: Provide 100% polyester fabric that is flame retardant.

2.03 FINISH AND COLOR

A. Top Treatment Fabric: Select solid or patterned fabric from manufacturer's standard selection.

2.04 FABRICATION

A. Top Treatment

1. Provide Kelsey Top Treatment to width required for window.

a. Top treatment shall have a 14" drop at the center.

b. Returns shall be 3", 6" or 8".

c. Mounting board shall be installed with L-bracket or ceiling mount bracket with supplied fasteners.

d. Attachment to the mounting board shall be with Velcro, which allows for easy removal.

2. Provide Sheffield Top Treatment to width required for window.

a. Top treatment shall have a 14" drop at the center.

b. Returns shall be 3", 6" or 8".

c. Bottom band shall have contrasting fabric.

d. Mounting board shall be installed with L-bracket or ceiling mount bracket with supplied fasteners.

e. Attachment to the mounting board shall be with Velcro, which allows for easy removal.

3. Provide Inverted Box Pleat Top Treatment to width required for window.

a. Top treatment shall have a 14" drop at the center.

b. Returns shall be 3", 6" or 8".

c. Bottom band shall have contrasting fabric.

d. Mounting board shall be installed with L-bracket or ceiling mount bracket with supplied fasteners.

e. Attachment to the mounting board shall be with Velcro, which allows for easy removal.

4. Provide Swag Cascade Top Treatment to width required for window.

a. Top treatment shall have a 19" drop at the center.

b. Top Treatment shall have a single or double swag.

c. Returns shall be 3", 6" or 8".

d. Mounting board shall be installed with L-bracket or ceiling mount bracket with supplied fasteners.

e. Attachment to the mounting board shall be with Velcro, which allows for easy removal.

PART 3 - EXECUTION

3.01 EXAMINATION

A. Examine areas and conditions in which the top treatment will be installed.

1. Complete all finishing operations, including painting, before beginning installation of cubicle tracking system materials.

2. Verify that surfaces and above ceiling supports are ready to receive work.

3.02 PREPARATION

A. General: Prior to installation, clean substrate to remove dust, debris, and loose particles.

3.03 INSTALLATION

A. General: Locate the top treatment as indicated on the approved detail drawing for the appropriate substrate and in compliance with the installation instructions.

3.04 CLEANING

A. At completion of the installation, remove any debris and clean surfaces in accordance with the Clickeze clean-up and maintenance instructions.

